

P05.10-2188-09

1 Plug

3 Chain tensioner


4 Engine air intake duct

2 Timing case cover

	Remove/install		
<b>Danger!</b>	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
<b>Danger!</b>	<b>Risk of injury</b> caused by <b>fingers being pinched or crushed</b> when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof Open engine hood	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1			AR88.40-P-1000V
<b>Danger!</b>	<b>Risk of explosion</b> caused by oxyhydrogen gas. <b>Risk of poisoning and caustic burns</b> caused by swallowing battery acid. <b>Risk of injury</b> caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries Detach ground line from battery Notes on battery	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and glasses. Only pour battery acid into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
2			AR54.10-P-0003V AH54.10-P-0001-01A
3	Remove engine intake air duct (4)		
4	Remove wideband silencer		AR09.41-P-6825V
5	Crank engine at crankshaft in direction of rotation until piston on first cylinder is positioned at TDC	The TDC marking on belt pulley/ vibration damper must be aligned with positioning edge on timing case cover.	
6	Remove poly-V belt		AR13.22-P-1202V
7	Remove alternator		AR15.40-P-5032V
8	Remove plug (1)	Lift plug (1) with screwdriver out of the timing case cover (2). <b>Installation:</b> Insert plug (1) with drift into the timing case cover (2). 	*271589001500
9	Remove chain tensioner (3) from timing case cover (2)		*BA05.10-P-1001-01F
10	Install in the reverse order		

**Timing chain, chain tensioner**

Number	Designation	Engine 271
BA05.10-P-1001-01F	Bolt, chain tensioner to bracket	Nm 40

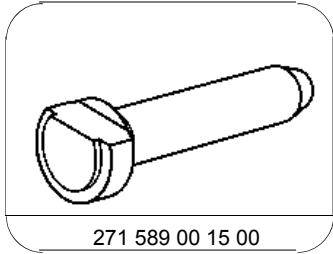

Drift