

POWER ON

BASIC PREPARATIONS

Battery Mater 1+2 =ON

External Power = ON

Navigation Lights =ON

Primary Flight Display =Bright

Navigation Displays =Bright

ECAM Displays =Bright

Integrated Lights =ON (if req.)

MCDU 2 =Enter Data

(Start Fuel Loading)

FLIGHT SIM ONLY

COCKPIT PREPARATION

Engine Mater 1+2 =OFF
Engine Mode Sel. =NORM
Landing Gear Lever =DOWN
Parking Brake =OFF
Flaps Lever =UP/0
Speed Brake =RET/Disarmed
Thrust Levers =IDLE
Transponder Mode =Standby
Radio Control Panels =ON
ECAM Recall =CHECK
Anti Skid Switch =ON
Flight Director =ON
Emergency Lights =ARM
No Smoking Signs =ON
Wing +Eng. Anti ice =OFF
Probe Window Heat =Auto/OFF
Hot Air/Bleeds/Packs =ON
Blower/Extract Fans =ON
Engine Generators =Both ON
APU Generator =ON
Fuel Pumps =All ON
Hydraulic Electric Pump =ON
GPWS =ALL ON
FCS =ALL ON
ADIRS=All NAV
Comm. Radios =Set

FMS/MCDU Setup**MCDU Data Entry****INIT Page 1**

- Enter Departure + Destination Airport
- Align IRS
- Enter Flight Number
- Enter Cost Index
- Enter Cruise Altitude

F-PLN Page

- Select Departure Runway
- Select Departure Procedure
- Enter Airways + Waypoints
- Select Arrival Runway
- Select Arrival Procedure
- Check and Remove discontinuities
- Check and amend Speed/Altitude constraints

RAD/NAV Page

- Enter radio navigation info (if needed)

INIT PAGE 2

- Enter Block Fuel (Total Fuel)

PERF Page

- Enter Takeoff Flaps Setting
- Check V1, VR+V2 Speeds
- Check Transition Altitude

COCKPIT PREPARATION 2

Landing System =OFF

EFIS CONTROLS =Arc Mode/Range 10

VOR/ADF =As Needed

FCU Altitude =Set first altitude

Flight Control Unit =SPD/HDG/ALT =Dashed and Balled

ECAM STATUS =Checked

IRS Alignment =Checked

MCDU =Set Flight Plan Page

FLIGHT SIM ONLY

BEFORE START

APU Master = ON

APU Start = START

APU Bleed Air = ON

(Start loading passengers)

Parking Brake = On

Thrust Levers =IDLE

Barometric Ref. =Set

Seatbelt Signs =ON

External Power =OFF

(Wait for boarding to finish)

-CLOSE DOORS

-Remove all ground equipment

Beacon Light =ON

FLIGHT SIM ONLY

START UP AND TAXI**ENGINE START****WITH PUSHBACK**

Parking Brake =OFF

Engine Mode Sel. =IGN/START

(Start Push Back):Start Engine #2

(Monitor engine on ECAM Page)

(End of Pushback):Start Engine #1

(Monitor engine on ECAM Page)

Parking Brake = ON

WITHOUT PUSHBACK

Parking Brake =ON

Engine Mode Sel. =IGN/START

ENGINE MASTER #2=ON

(Monitor engine on ECAM Page)

ENGINE MASTER #1=ON

(Monitor engine on ECAM Page)

AFTER START

Engine Mode Sel. =NORM

APU Bleed Air =OFF

APU Master =OFF

Spoilers =ARM

Rudder Trim =Set

Pitch Trim=Set

Flight Controls =Check

Flaps =Set for Takeoff

Engine Anti Ice =If Needed

Wing Anti Ice = If Needed

ECAM Status =Check

ECAM Door

TAXI

(REQUEST ATC CLEARANCE)

Nose Light =ON

Parking Brake =OFF

Thrust Levers = 25-30% N1

(Then Idle)

Braking =Test

Auto Brake =Set MAX

FCU =Dashed and balled

TO Config. =Press

(Check for blue text on ECAM)

Weather Radar =ON (WX+T)

Flight Director =ON

Transponder =Set

FLIGHT SIM ONLY

TAKEOFF**BEFORE TAKEOFF**

ECAM Wheel Page =Temps

(If > 150°C, Brake Fan =ON)

Brake Fan =OFF

Engine Mode Sel. =NORM

Transponder =Set TA/RA

Weather Radar =+4° Up

A/Skid & NW =ON

(REQUEST TAKEOFF CLEARANCE)-ONLY WHEN AT HOLD POSITION

Strobe Lights =ON

Landing Lights =ON

RWY Turn Lights =ON

Nose Lights =T.O

FLIGHT SIM ONLY

TAKEOFF

Thrust = TOGA/FLEX

Chrono =Start

(ROTATE)

Gear =UP

Spoilers =DISARM

Thrust =Climb

A/P =ON

Flaps =Up

FLIGHT SIM ONLY

AFTER TAKEOFF

Engine Mode =NORM

Spoilers =Disarmed

Flaps =UP

Gear =UP

Nose Light =OFF

RWY Lights =OFF

Packs =ON

Anti Ice = If Needed

FLIGHT SIM ONLY

CLIMB

Trans.Alt. =Set STD

(Above 10,000ft)

Landing Lights =OFF

Seatbelt Signs =OFF

FLIGHT SIM ONLY

CRUISE AND DESCENT

CRUISE

- Check Flight Progress
- Check Weather
- Check ECAM
- Check ECAM PAGES

FLIGHT SIM ONLY

BEFORE DESCENT

(OBTAIN WEATHER REPORT)

MCDU PERF-APPR PAGE

ENTER-

-QNH

-TEMP

-WINDS

-TRANSITION ALT

-MINIMUMS

-LANDING CONFIG.

FLIGHT SIM ONLY

DECENT

FCU ALTITUDE =Set+Push

Seatbelt Sign =AUTO

Anti-Ice =OFF

Baro Ref. =STD

(After Passing 10,000ft)

Seatbelt Sign =ON

Landing Lights =ON

Landing System =ON

FLIGHT SIM ONLY

APPROACH AND LANDING**APPROACH**

- Reduce ND Range
- Show constraints
- Activate Approach Mode on MCDU
(Monitor Speed on Appr.)
- Set Baro Ref at Trans.Alt
 - Set Flaps 1
 - Set Flaps 2

INTERCEPTING LOCALISER

- FCU APPR =ON
- Landing Gear =Down
- Spoilers =Armed
- Auto brake =LOW/MED
- Nose Light =TO
- RWY Light =ON
 - Set Flaps 3
 - Set Flaps 4

LANDING CHECKS

- GEAR =DOWN
- SPOILERS =ARMED
- AUTOBRAKES =SET
- NOSE LIGHT =T.O
- LANDING LIGHT =ON

AFTER LANDING

Chrono =OFF

Nose Light =Taxi

Landing Lights =OFF

Rwy Lights =OFF

Strobe Lights =OFF

Transponder =Standby

Flaps =UP/0

Spoilers =Retract

Weather Radar =OFF

Landing System =OFF

(Check Brake Temps)

APU Master =ON

APU Start =START

FLIGHT SIM ONLY

PARKING

Parking Brake =ON

Engine Master 1 and 2 =OFF

Beacon Light =OFF

Nose Light

Seatbelt Signs

Fuel Pumps

-Set Ground equipment

-Open Doors

External Power =ON

APU Master =OFF

FLIGHT SIM ONLY