


HOMEBASE INDUCTION HOB

Operating & Installation Instructions -Please keep for future reference

HB2020

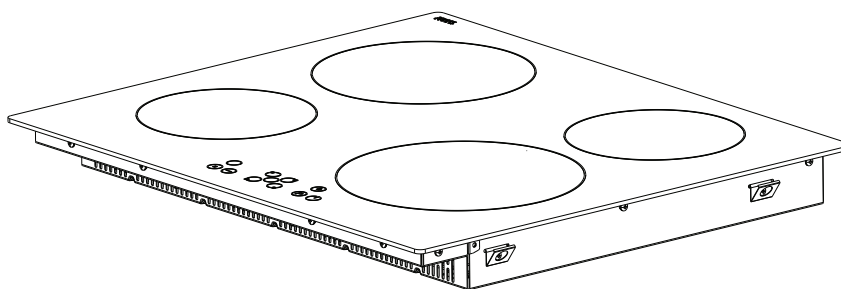

Important - Please read these instructions fully before using

These instructions contain important information which will help you get the best from your appliance and help to ensure safe and correct installation, use and maintenance.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 600 4632**

Contents	1
Safety Information	2-3
Installation	4-5
User instructions	6-8
Electrical Connection Of Your Hob	6
Usage of Your Hotplates	7-8
Cleaning and Maintenance	9
Technical specifications	10

Dear Customer,


Offering quality products that meet your expectations is our goal. Our products are tested carefully to ensure their quality.

This manual is prepared in order to help you to use your appliance confidently and efficiently

Before using your appliance, carefully read this guide as it includes basic information for the correct and safe installation, maintenance and use of your appliance.

Contact your nearest authorised service agent for installation of your appliance.

DESCRIPTION OF THE HOB

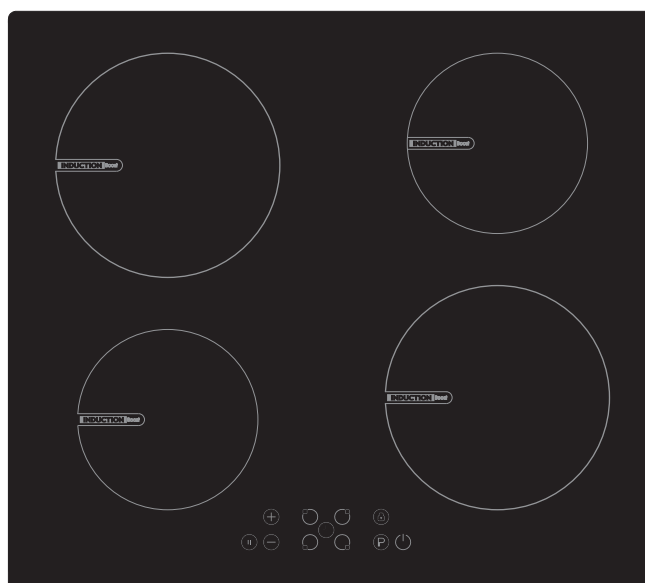

Product code

HB2020



Safety Information

Customer Helpline 0845 600 4632

Important - Please read these instructions fully before installation

READ THESE INSTRUCTIONS CAREFULLY AND COMPLETELY BEFORE USING YOUR APPLIANCE, AND KEEP IT IN A CONVENIENT PLACE FOR REFERENCE WHEN NECESSARY.

THIS MANUAL IS PREPARED FOR MORE THAN ONE MODEL IN COMMON. YOUR APPLIANCE MAY NOT HAVE SOME OF THE FEATURES THAT ARE EXPLAINED IN THIS MANUAL. PAY ATTENTION TO THE EXPRESSIONS THAT HAVE FIGURES, WHILE YOU ARE READING THE OPERATING MANUAL.

General Safety Warnings

IMPORTANT- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WARNING- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

WARNING- Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.

NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.

WARNING- Danger of fire: do not store items on the cooking surfaces.

WARNING- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

IMPORTANT- For induction hobs, metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.

IMPORTANT- For induction hobs, after use, switch off the hob element by its control and do not rely on the pan detector.

IMPORTANT- For hobs incorporating a lid, any spillage should be removed from the lid before opening. And also the hob surface should be allowed to cool before closing the lid.

IMPORTANT- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

IMPORTANT- During use, handles held for short periods in normal use can get hot.

IMPORTANT- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass and other surface since they can scratch the surface, which may result in shattering of the glass or damage to the surface.

IMPORTANT- Do not use steam cleaners for cleaning the appliance.

CAUTION- Accessible parts may be hot when the cooking or grilling is in use. Young children should be kept away.



Important - Please read these instructions fully before installation

IMPORTANT- Your appliance is produced in accordance with all applicable local and international standards and regulations.

IMPORTANT- Maintenance and repair work must be made only by authorized service technicians. Installation and repair work that is carried out by unauthorised technicians may endanger you. It is dangerous to alter or modify the specifications of the appliance in any way.

IMPORTANT- Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure or electricity voltage and frequency) and the requirements of the appliance are compatible. The requirements for this appliance are stated on the label.

CAUTION- This appliance is designed only for cooking food and is intended for indoor domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment or room heating.

IMPORTANT-All possible security measures have been taken to ensure your safety. Since the glass may break, you should be careful while cleaning to avoid scratching. Avoid hitting or knocking on the glass with accessories.

IMPORTANT- Ensure that the supply cord is not wedged during the installation. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to prevent a hazard.

Installation Warnings

IMPORTANT- Do not operate the appliance before it is fully installed.

IMPORTANT- The appliance must be installed by an authorized technician and put into use. The producer is not responsible for any damage that might be caused by defective placement and installation by unauthorized people.

IMPORTANT- When you unpack the appliance, make sure that it is not damaged during transportation. In case of any defect; do not use the appliance and contact a qualified service agent immediately. As the materials used for packaging (nylon, staplers, styrofoam...etc) may cause harmful effects to children, they should be collected and removed immediately.

IMPORTANT- Protect your appliance against atmospheric effects. Do not expose it to effects such as sun, rain, snow etc.

IMPORTANT- The surrounding materials of the appliance (cabinet) must be able to withstand a temperature of min 100°C.

During usage

IMPORTANT- Do not put flammable or combustible materials, in or near the appliance when it is operating.

IMPORTANT- Do not leave the cooker while cooking with solid or liquid oils. They may catch fire on condition of extreme heating. Never pour water on to flames that are caused by oil. Cover the saucepan or frypan with its cover in order to choke the flame that has occurred in this case and turn the cooker off.

IMPORTANT- Always position pans over the centre of the cooking zone, and turn the handles to a safe position so they cannot be knocked or grabbed.

IMPORTANT- If you will not use the appliance for a long time, plug it off. Keep the main control switch off.

IMPORTANT- Make sure the appliance control knobs are always in the "0" (stop) position when it is not used.

During cleaning and maintenance

IMPORTANT- Always turn the appliance off before operations such as cleaning or maintenance. You can do it after plugging the appliance off or turning the main switches off.

IMPORTANT- Do not remove the control knobs to clean the control panel.

TO MAINTAIN THE EFFICIENCY AND SAFETY OF YOUR APPLIANCE, WE RECOMMEND YOU ALWAYS USE ORIGINAL SPARE PARTS AND TO CALL ONLY OUR AUTHORIZED SERVICE AGENTS IN CASE OF NEED.

Positioning & electrical connection

WARNING:


The electrical connection of this hob should be carried out by a qualified electrician, according to the instructions in this guide and in compliance with the current regulations. In the event of any damage that occurs as a result of improper connection or installation, the warranty will not be valid. This appliance must be earthed.

Installation safety



- Any overhanging surface should be at least 65cm above the hob.
- Extractor fans must be fitted in accordance with the manufacturer's instructions.
- The wall in contact with the rear of the hob must be made of flameproof material.
- The power cable length should not exceed 2 metres.

Fitting the hob into a work surface

- The hob can be inserted into any worktop provided it is heat resistant up to at least 100°C.
- Create an opening with the dimensions shown to the right.
- Induction hob may be built into 25 to 40 mm thick worktops.
- Screw the 4 worktop mounting brackets on the side walls of product.
- Secure the hob in place by putting it into cutout on the work surface.
- Before inserting the oven, it is necessary to remove the rear kitchen element panel in the area of the oven opening, in order to supply cooling. Equally, the front part of the kitchen element must have an opening of no less than 5 mm.

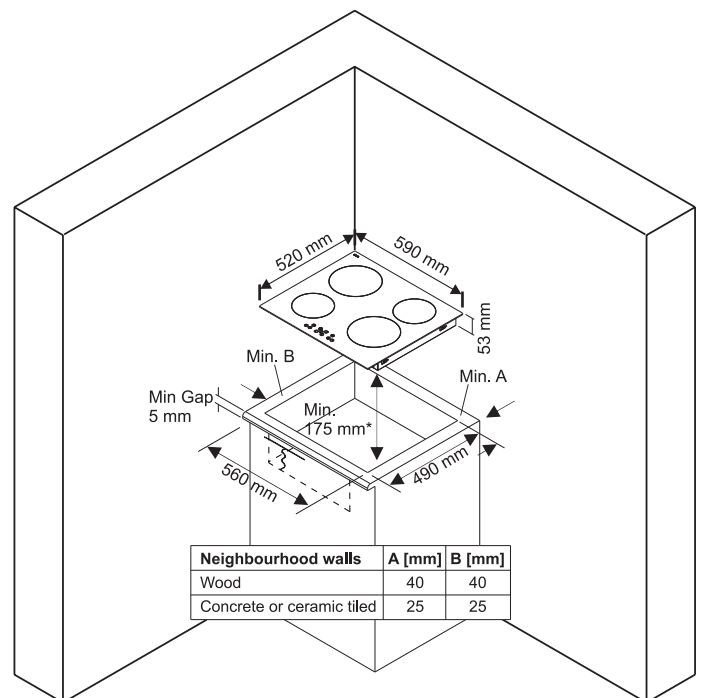

*: In case of installation over a built-in oven, distance should be min. 10 mm.

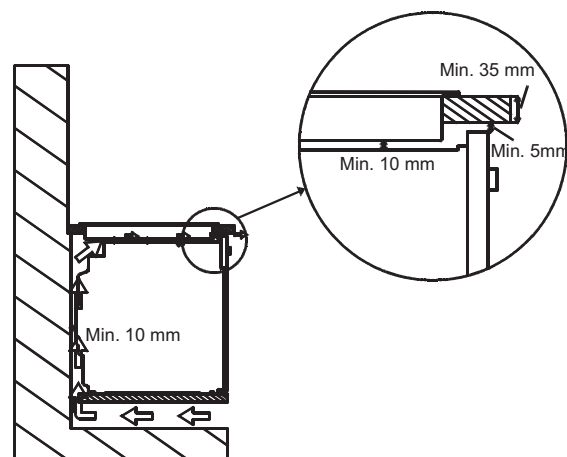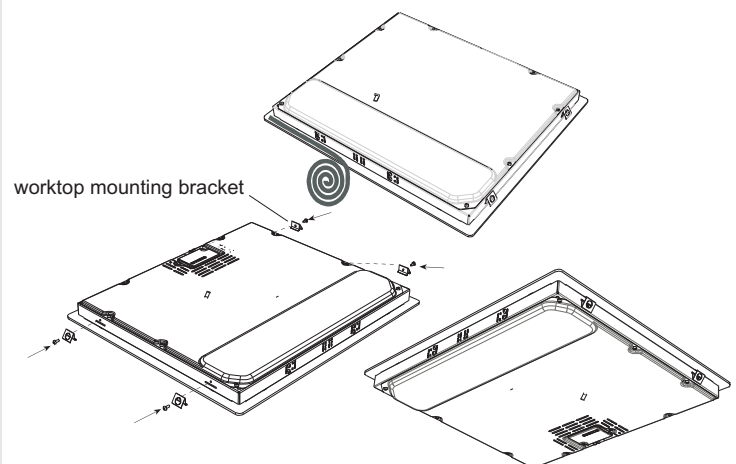

Positioning & electrical connection

Making an electrical connection


Before making a connection, check that:

- The mains voltage is the same as that quoted on the rating plate which is situated at the back of your hob.
- The circuit can support the appliance load (see the rating plate).
- The power supply has an earth connection, which complies with the provisions of current regulations and is in good working order.
- The fused switch is easily accessible once the hob has been installed.
- If there is no dedicated hob circuit and fused switch, they must be installed by a qualified electrician before the hob is connected.
- An approved suitable cable must be connected from the Consumer Unit (main fuse box) and be protected by its own 32amp fuse or Micro Circuit Breaker (MCB). The electrician must provide a fused all pole switch, which disconnects both the line (live) and neutral conductors with a contact separation of at least 3,0 mm.
- The fused switch should be fitted to the kitchen wall, above the worksurface and to the side of the hob, not above it, in accordance with IEE regulations. Connect the fused switch to a junction box which should be fitted on the wall about 61cm (24 inches) above floor level and behind the hob. The hob's power supply cable can then be connected. Connect one end to the junction box and connect the other end to the hob's power connection box which is located at the back of the hob. Remove the cover of the power connection box and install the cable, in accordance with the connection diagram.

The power cable must be positioned away from direct heat sources. It should not be subjected to a temperature rise of more than 50°C above room temperature.


This appliance conforms with following EU Directives.

- 2006/95/EC Low Voltage Directive,
- 2004/108/EC EMC Directive,
- 93/68/EEC CE Marking Directive

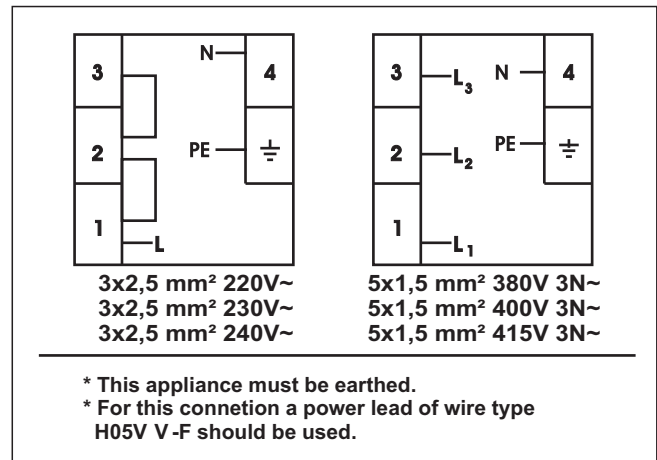

For the induction hob, the cable must be H05VV-F 3X2,5 mm²/60227 IEC 53 ••. You will find the connection diagram shown on the bottom of your appliance.

Control Panel

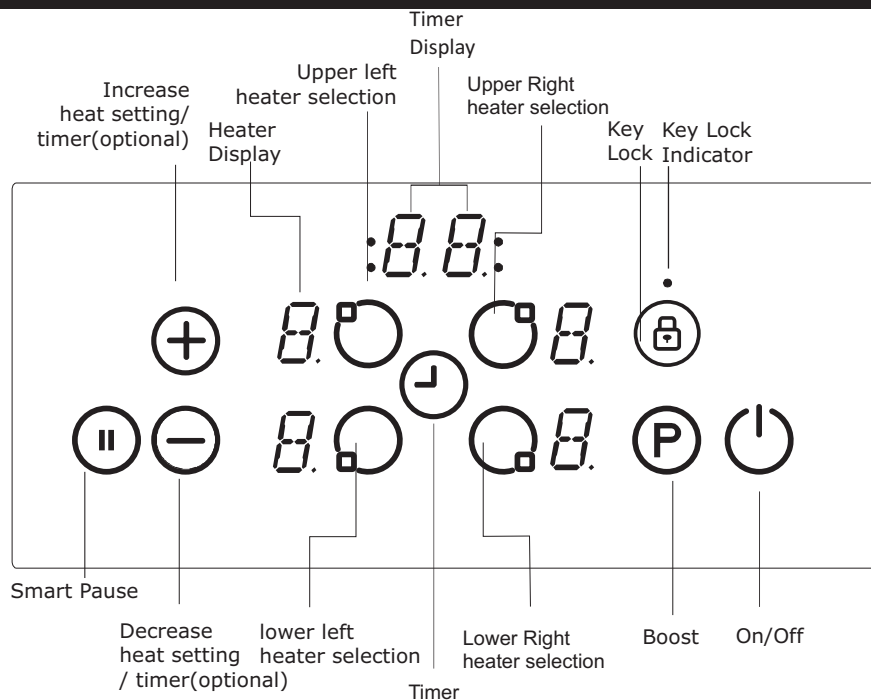


Use Of Your Hob

Use the induction cooking zones with suitable cookware.



After the mains voltage is applied, all displays will come on for a moment. When this time is over, the hob will be in stand-by mode and is ready for operation.

The hob is controlled with electronic sensors which are operated by touching the related sensors. Each sensor activation is followed by a sound signal (buzzer).

Switching the appliance on:

Switch the hob on by touching the ON/OFF key . All heater displays show a static "0" and the bottom right dots blink. (If no cooking-zone is selected within 20 seconds, the hob will automatically turn off.)



Switching the appliance off:

Switch the hob off at any time by touching . The ON/OFF key  always has priority in the switch off function.




Switching the cooking-zones on:

Touch the heater selection key you wish to cook on. There is a static dot indication on the selected

heater display and the blinking dot on all other displays extinguish.

 
Select the temperature setting by using the increase heat setting key  or decrease heat setting key . The element is now ready to cook on. For quickest boil times, select the desired cooking level and then touch the P key to activate the Boost function.

Switching the cooking-zones off:

Select the element you want to switch off by pressing the heater selection key. Using  key, turn the temperature down to "0". (Also using  and  keys simultaneously turns the temperature to "0")

If the cooking zone is hot, "H" will be displayed instead of "0".

Switching all cooking-zones off:

To turn all the cooking zones off at once, touch the  key.

In the stand-by mode, an "H" appears on all cooking zones which are hot.

Residual heat indicator:

The residual heat indicator indicates that the glass ceramic has a dangerous touch temperature in the circumference of a cooking zone.


After switching off the cooking zone, the respective display shows "H" until the assigned cooking zone temperature is in an uncritical level.


Smart Pause

Smart Pause, when activated, reduces the power of all burners that have been switched on.

If you then deactivate the Smart Pause, the heaters will automatically return to the previous heat level.

If the Smart Pause is not de-activated, the cooktop will turn off after 30 minutes.

Touch  to activate Smart Pause. The power for the activated heater(s) will reduce to level 1 and "1" will appear at all displays.




Touch  again to deactivate Smart Pause. "1" will disappear and the heaters will now run at the level previously set.

Safety switch off function

Every cooking zone will be switched off after a defined maximum operation time if the heat setting is not modified. The maximum operation time depends on the selected temperature level. Every time the heat setting is changed, the 'Safety Switch Off' duration resets back to the maximum for that particular heat setting (see table below).




Heat setting	Safety switch off after
1 - 2	6 Hours
3 - 4	5 Hours
5	4 Hours
6 - 9	1,5 Hours

Child Lock:

After switching on the control, the child lock function can be activated. To activate the child lock, simultaneously operate the increase heat setting key  and decrease heat setting key  and then operate the increase heat setting key  again. "L" meaning LOCKED will appear in all heater displays and the control can not be


changed. (If a cooking zone is in the hot condition, "L" and "H" will be displayed in alternation.)

The hob will remain in a locked condition until it gets unlocked, even if the control has been switched off and on.

To deactivate the child lock, first switch on the hob. Simultaneously operate the increase heat setting key  and decrease heat setting key  and then operate the decrease heat setting key  again. "L" will disappear in the display and the hob will be switched off.

Key Lock

The key lock functionality is for disabling any buttons from being pressed or any settings from being changed. It is only possible to switch the appliance off.



The lock function is activated by pressing the Key Lock button  for at least 2 sec. This operation is acknowledged by a buzzer. After successful operation of more than 2 sec, the Key Lock Indicator flashes and the heater is locked.

Timer function



 
The timer function has two variations:

Minute minder timer (1..99 min):

The minute minder timer can be operated if the cooking zones are switched off. The timer display shows "00" with a blinking dot.


Touch  to increase the time or touch  to decrease the time. You can adjust the range between 0 and 99 minutes. If there is no operation in 10 seconds, the minute minder timer will be set and the blinking dot will disappear. After the timer is set, the time runs down according to the adjustment.

When the time is over, a signal sounds and the timer display blinks. The sound signal will be stopped automatically after 2 minutes and/or by operating any key.

The minute minder timer can be changed or switched off anytime by operating the timer setting key  and/or the decrease timer key . Switching off the hob by touching  at anytime will also switch off the minute minder timer.

Cooking zone timer (1..99 min):

When the hob is switched on, an independent timer can be programmed for every cooking zone.

Select a cooking zone, then select the temperature setting and finally activate the timer setting key , the timer can be programmed to switch off a cooker zone after a set period of time. Around the timer four LEDs are arranged. These indicate which cooking zone the timer has been activated for.

10 seconds after the last operation, the timer display changes to the timer that will run out next (in case of programming more than 1 cooking zone).

When the timer has run down, a signal sounds and the timer display shows "00" statically, the assigned cooking zone timer LED blinks. The programmed cooking zone will be switched off and the "H" will be displayed if the cooking zone is hot.

The sound signal and the blinking of the timer LED will be stopped automatically after 2 minutes and/or by operating any key.

Buzzer :

While the hob is in operation, the following activities will be signalled by means of a buzzer:

- Normal key activation with a short sound signal
- Continuous operation of keys over a longer period of time (10 seconds) with a longer, intermitten sound signal.

Boost Function :

A cooking zone has to be selected, the cooking level has to be set to the desired cooking level and then the P(Boost) key has to be pressed again.


The Boost-Function can be activated if the induction module accepts the setting on this cooking zone. If the Boost Function is active, a 'P' is displayed on the corresponding display. Activating the booster can exceed the maximum power and so the intergated power management system will be activated .

The necessary power reduction is shown by the corresponding cooking zone's display blinking. The blinking will be active for 3 sec. to allow you to change your settings before the power reduction commences.


Hints and tips

Cookware

- Use thick, flat, smooth bottomed cookwares that are the same diameter as the element. This will help reduce cooking times.
- Cookware made of steel, enamelled steel, cast iron and stainless steel (if appropriately labelled by the manufacturer) will give you the best results.
- Cookware made of enamelled steel or aluminium or copper bottoms can cause a metallic residue to remain on the hob. If left, this becomes difficult to remove. You should clean the hob after every use.
- Cookware is suitable for induction if a magnet sticks to the bottom of the cookware.
- Cookware must be placed centrally on the cooking zone.
- When using certain pans, you may get various noises from the pans, this is due to the design of the pans and does not effect the performance or safety of the hob.

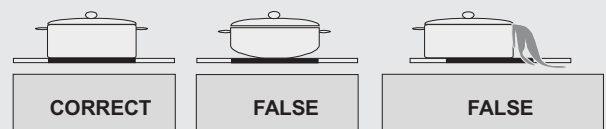

Energy saving

- Induction cooking zones adapt automatically to the size of the cookware bottom up to a certain limit. However the magnetic part of the cookware bottom must have a minimum diameter depending upon the size of the cooking zone.
- Place the cookware on the cooking zone before it is switched on. If it is switched on before putting any cookware on it, the cooking zone will not operate and the control display shows. ()
- Use a lid to reduce cooking times.
- When liquid comes to the boil, reduce the temperature setting.
- Minimise the amount of liquid or fat to reduce cooking times.
- Select the proper temperature setting for the cooking applications.

Examples of cooking applications

The information given in the following table is for guidance only.

Settings	Use for
0	Element off
1 - 3	Delicate warming
4 - 5	Gentle simmering, slow warming
6 -7	Reheating and rapid simmering
8	Boiling, saute and searing
9	Maximum heat
P	Boost function


 
Cleaning tips



- Do not use abrasive pads, corrosive cleaners, aerosol cleaners or sharp objects to clean the surfaces of the hob.
- To remove burnt food, soak it off with a damp cloth and washing-up liquid.
- You may use a scraper for cleaning food or residues. Sticky foods must be cleaned immediately when they spill, before the glass has cooled down.
- Be careful not to scratch the silicon adhesive placed on the edges of the glass whilst using a scraper.
- The scraper has a razor, therefore, it must be kept away from children.
- Use a special ceramic hob cleaner on the hob while it is warm to touch. Rinse and wipe dry with a clean cloth or paper towel.


ERROR CODES

If there is an error, error code will be showed at heater displays.

E1 : Cooling Fan is disabled, call authorized service agents.

E3 : Supply coltage is over than rated values, turn the hob off by touching , wait until "H" disappears for all zones, turn the hob on by touching  and continue to use. If same error is seems again, call authorized service agents.

E4: Supply frequency is different from rated values, turn the hob off by touching , wait until "H" disappears for all zones, turn the hob on by touching  and continue to use. If same error is seems again, call authorized service agents.

E5: Hob inside temperature is too high, turn the hob off by touching  let heaters cool down.

E6: Communication error between touch control and heater, call authorized service agents.

E7: Coil temperature sensor is disabled, call authorized service agents.

E8: Cooler temperature sensor is disabled, call authorized service agents.

E9: Calibration error, call authorized service agents.

Technical Specifications

Customer Helpline 0845 600 4632


Model/Item	AE60I
Power supply	230V~
Maximum power	7400 W
Size(H x W x D)	53x590x520 mm
Net weight	10 kg.

We apologise for any inconvenience caused by minor inconsistencies in these instructions that may occur as a result of product improvements and development.



We apologise for any inconvenience caused by any minor inconsistencies in these instructions , which may occur as a result of product improvemenst and development.

Disposal information

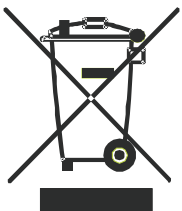

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

HOMEBASE

Product Guarantee

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- o The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- o The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- o It must be used solely for domestic purpose.
- o The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- o Specifications are subject to change without notice.
- o The manufacturer disclaims any liability for the incidental or consequential damages.
- o The guarantee is in addition to, and does not diminish your statutory or legal rights.
- o In the event of a problem with the product with in the guarantee period call the Customer Helpline: 0845 600 4632.

Guarantor: Homebase Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW