




P20.40-2068-09

- 1 Front engine cover  
 2 Intake air duct  
 3 Coolant hose  
 4 Retaining clamp

- 5 Connector  
 6 Fan shroud  
 8 Upper mount at radiator

- 9 Lower mount at the radiator  
 10 Retaining tab of the fan shroud  
 11 Retaining tab of the fan shroud

 	Remove/install		
1	Open engine hood		AR88.40-P-1000V
2	Unclip front engine cover (1)	See Remove air filter housing.	AR09.10-P-1150VA
3	Remove left and right engine intake air duct (2)		
4	Drain coolant at radiator	Vehicles with transmission 722.9	AR20.00-P-1142VA
5	Unclip retaining clamp (4) from coolant hose (3) at the oil filter housing		
6	Detach coolant hose (3) from radiator and place it on engine	Vehicles with transmission 722.9	
7	Pull off connector (5) of fan shroud (6)		
8	Unlatch upper mounts (8) at radiator and take out fan shroud (6) from upper and lower mounts (8, 9) at cooler	 <b>Installation:</b> Ensure correct positioning of retaining tabs (10, 11) of fan shroud (6) in the upper and lower mounts (8, 9) at cooler.	
9	Install in the reverse order		