

Renken

INSTALLATION MANUAL BMW S1000R & S1000RR 2010-18 HIGH MOUNT


INCLUDED IN KIT:
TAIL TIDY BRACKET
CABLE TIE

TOOLS REQUIRED:
T-25 SCREW
8 AND 10MM SOCKET

SECTION 1: REMOVE OEM FENDER

STEP 1: Remove seat (keyhole on top of pillion seat)

STEP 2: Unplug electrical connectors

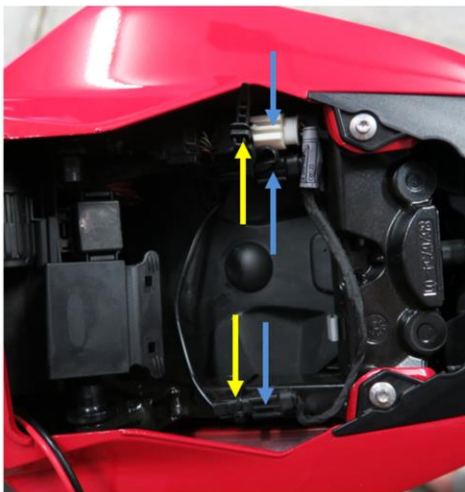

- Remove two cable ties
- Unplug three electrical connectors for rear indicators and licence plate light


STEP 3: Remove OEM Fender



- 3 x T-25 Screws on underside of fender
- ⚠ Set aside screws and washers for later use
- ⓘ Detach by pulling down


SECTION 2: OEM FENDER DISASSEMBLY

STEP 1: Remove rubber grommets

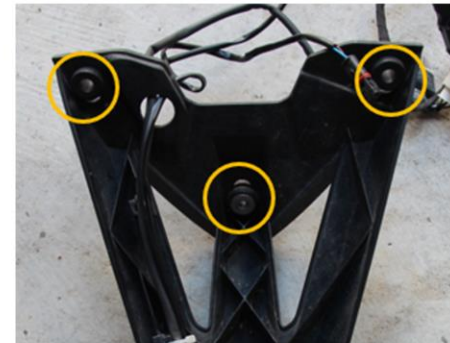

- 3 x Rubber grommets
- ⚠ Set aside for later use
- ⓘ If having difficulty removing apply a small amount of oil

STEP 2: Remove licence plate light and housing

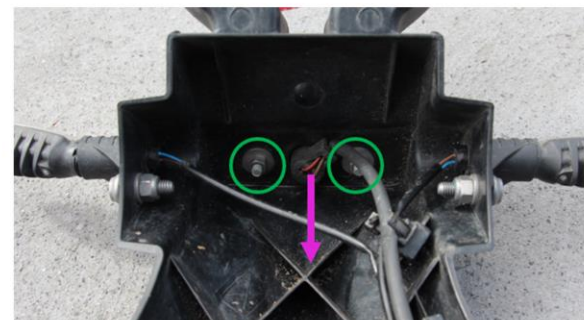

- 2 x 8mm nuts
- Pull globe rearward to detach

