

Make sure to read the reddit post before you try this.

Step 1: Get your screw driver with flat head, like this one:



Step 2: Get a USB C cable that charges your phone as long as you don't move it at all (you know what I mean).




Step 3: Apply pressure (make sure to be gentle, you don't want to ruined it) on the corners of the USB C connector (front face of the cable) until it looks something like this:




Step 4: Do the same thing with the back face of the cable.

Step 5: You are going to put your cable and screw driver like in this image. Be gentle and apply pressure.

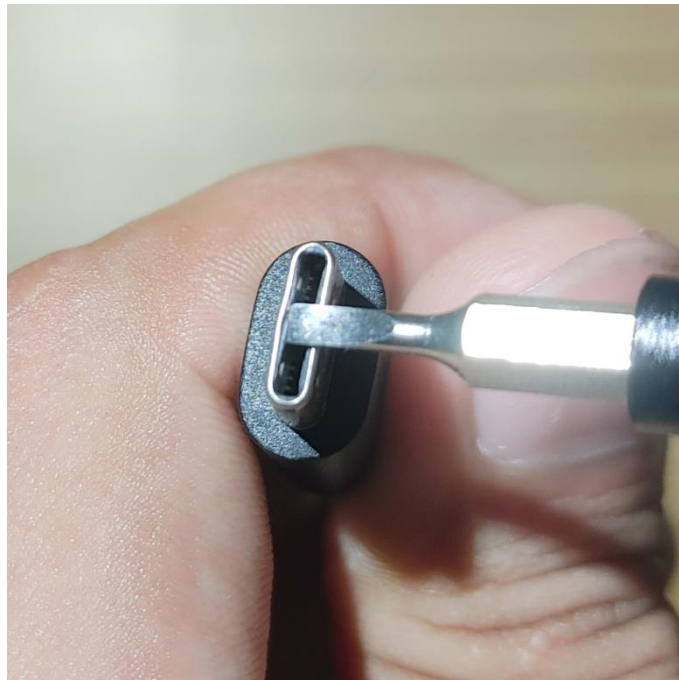

After that your USB C connector is going to look like this:

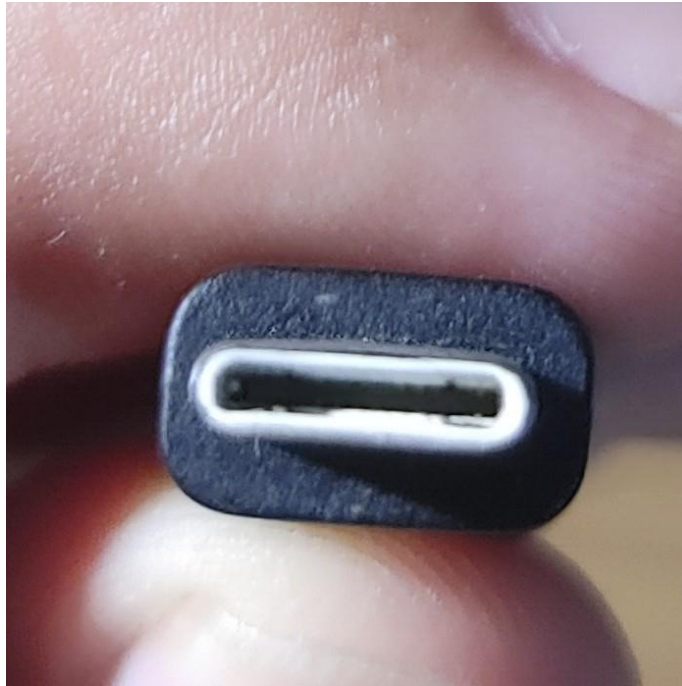

If you pay attention, you can see how the metal part is slightly separated from the plastic part of the connector, this is what we want. All of this is to make sure your USB C connector applies more pressure on your USB C port on your LG v60, so when you charge it, no matter how much you move it around, it won't disconnect.

This worked really well for me, I've done this with 2 cables and I got the same results, now I can charge my phone without having to watch it over or collocated in really precise positions in order for it to work.