


MODEL 171.4

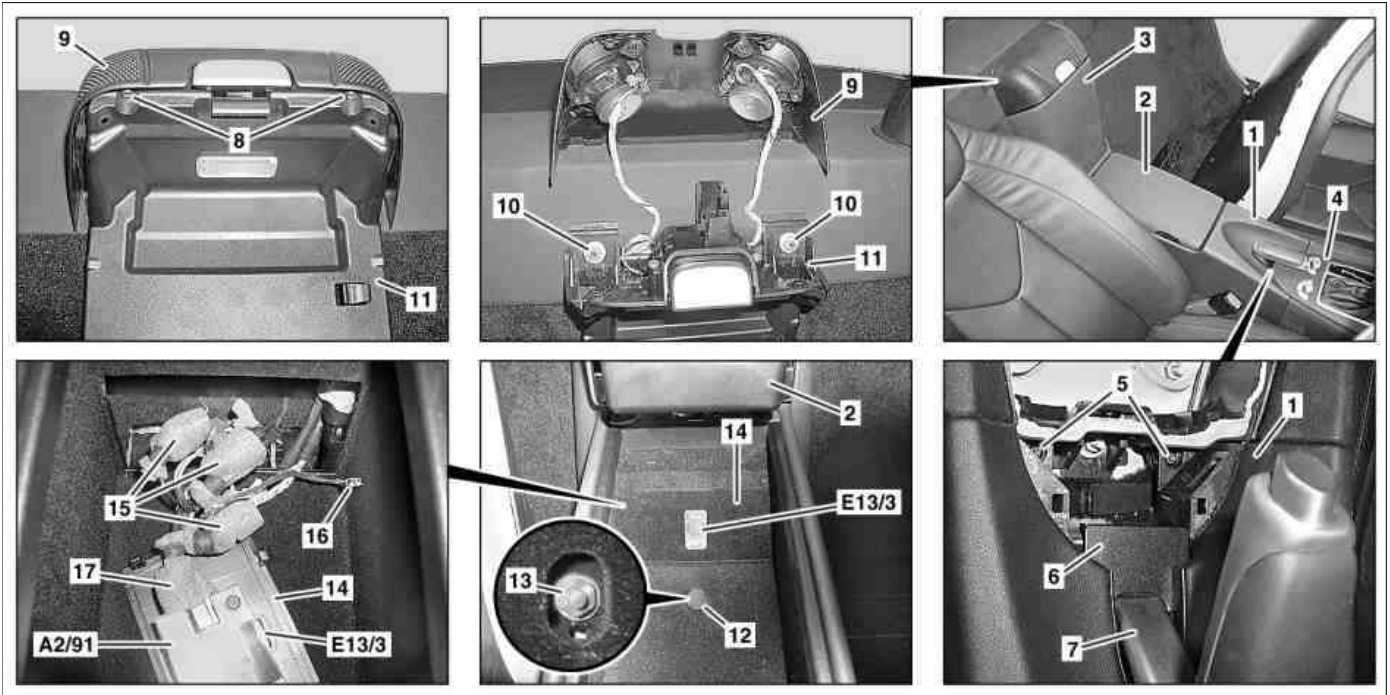


P68.20-3050-09

Shown on vehicle up to 30.11.06

- 1 Center console
- 2 Cover
- 3 Cover
- 4 Cover
- 5 Bolts
- 6 Cover
- 7 Hand brake lever
- 8 Bolts
- 9 Cover
- 10 Nut
- 11 Stowage box/tray
- 12 Cover

- 13 Nut
- 14 Cover
- 15 Electrical connectors
- 16 Electrical connector (with code (876) Interior compartment light package)
- 17 Electrical connector (with code (386) Preinstallation for cell phone telephone, UPCI system or code (388) Cell phone telephone, UPCI system)

- A2/91 Bluetooth antenna (up to 30.11.06 with code (386) Preinstallation for cell phone, UPCI system or code (388) Cell phone, UPCI system)
- E13/3 Illumination for stowage compartment between seat backrests (with code (876) Interior compartment light package)

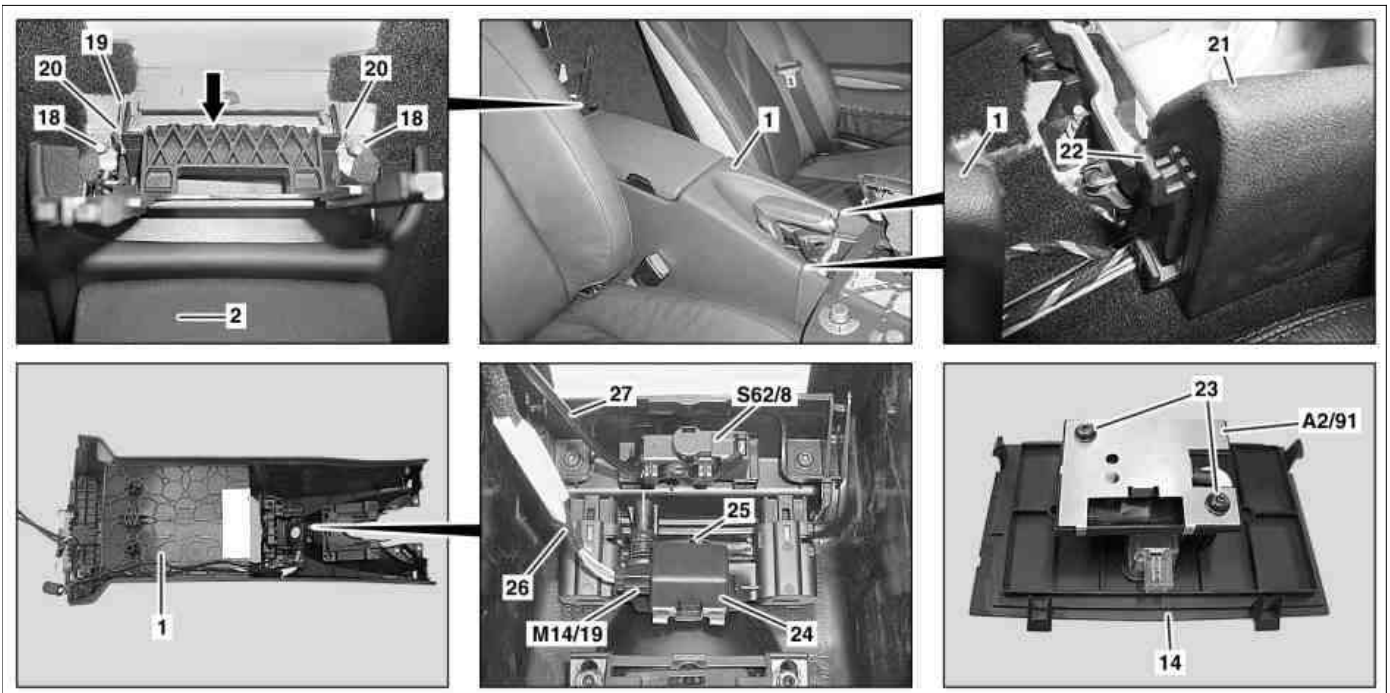

P68.20-3051-09

Shown on vehicle up to 30.11.06

- 1 Center console
- 2 Cover

- 23 Bolts (up to 30.11.06 with code (386))

- A2/91 Bluetooth antenna (up to 30.11.06 with code (386))

- 14 Cover
- 18 Nut
- 19 Bracket
- 20 Screw
- 21 Instrument panel
- 22 Hook

Preinstallation for cell phone, UPCI system or code (388) Cell phone, UPCI system)

- 24 Cover
- 25 Spring
- 26 Wiring harness
- 27 Electric wiring harness (with code (882) Interior monitoring (only with ATA))


Preinstallation for cell phone, UPCI system or code (388) Cell phone, UPCI system)

M14/19 Center console compartment CL [ZV] motor

S62/8 Center stowage compartment switch, ATA (with code (882) Interior monitoring (only with ATA))

		Remove/install		
1		Detach cover (4) from center console (1) and lay down toward front with lines connected		AR68.20-P-2350V
2		Unscrew bolts (5) and remove cover (6)		
3		Release parking brake	i Hand brake lever (7) should be in bottom-most position.	
4		Remove cover (3) for stowage box in rear	When replacing center console (1).	AR68.20-P-5701VB
5		Unscrew screws (8) and remove cover (9)	i On vehicles with code (810) lay sound system cover (9) down toward rear with electrical lines connected.	
6		Unscrew nuts (10), remove stowage tray (11) and lay down toward rear	i Do not disconnect electrical connectors. i Installation: Before tightening nuts (10) close cover (3) and align stowage compartment (11).	
7		Open cover (2) for stowage box in center console (1)		
8		Unclip cover (12) with suitable screwdriver and unscrew nut (13)		
9		Unclip cover (14) with screwdriver and disconnect all electrical connectors (15) located behind	i Number of electrical connectors (15) depends on equipment	
10		Disconnect electrical connector (16) from stowage compartment illumination between backrests (E13/3)	On vehicles with code (876) Interior light package	
11		Disconnect electrical connector (17) from Bluetooth antenna (A2/91)	On vehicles up to 30.11.06 with Code (386) Preinstallation for cell phone, UPCI system or with Code (388) Cell phone, UPCI system	
12		Close cover (2) for stowage box in center console (1)		
13		Loosen nut (18) until center console (1) can be removed together with bracket (19)		
15		Loosen center console (1) at front from hooks (22) on instrument panel (21) and remove from vehicle toward rear and upward.	i Installation: Ensure that wiring harness are routed correctly below center console (1).	
16		Remove cover (2) for stowage box in center console (1)	When replacing center console (1). On vehicles up to 30.11.06 without code (359) TELE AID emergency call system, without code (386) Preinstallation for cell phone, UPCI system, without code (387) Preinstallation for cell phone, UPCI system USA/Canada, without code (388) Cell phone, UPCI system, without code (498) Japan version or on vehicles as of 1.12.06 On vehicles up to 30.11.06 with Code (359) TELE AID emergency call system or with Code (386) Preinstallation for cell phone, UPCI system or with Code (387) Preinstallation for cell phone, UPCI system USA/Canada or with Code (388) Cell phone, UPCI system or with Code (498) Japan version i Installation: Check cover (2) for proper function, if necessary loosen bolts (20) on mount (19) and align cover (2) along mount (19, arrow) with mounting wedge. S	AR68.20-P-5701V AR68.20-P-5701VA *110589035900
17		Unscrew bolts (20) and remove bracket (19) from center console (1)	When replacing center console (1).	

18	Unscrew bolts (23) and remove bluetooth antenna (A2/91) from cover (14)	When replacing center console (1) on vehicles up to 30.11.06 with code (386) Preinstallation for cell phone, UPCI system or with code (388) Cell phone, UPCI system.	
19	Open cover (24), unclip center stowage CL motor (M14/19) from center console (1), detach from spring (25) and expose electric wiring harness (26)	When replacing center console (1).	
20	Unclip center stowage compartment switch, ATA (S62/8) from center console (1) and expose electric wiring harness (27)	When replacing center console (1) on vehicles with code (882) Interior monitoring (only with ATA).	
21	Install in the reverse order		

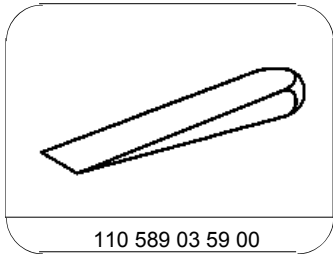

110 589 03 59 00

Mounting wedge