



MG ZT / ZT-I

Electrical Circuit Diagrams

Publication Part No. RCL0545ENG
Published by MG Rover Group After Sales
© MG Rover Group Limited 2003

COLOUR CODES**DRAADKLEURCODES****CODICI COLORI DEI CAVI****CODES DES COULEURS DES FILS****CODIGOS DE COLORES DE LOS CABLES****KABELFARBCODES****CÓDIGOS DAS CORES DOS FIOS**

CODE	COLOUR	CODE	KLEUR	CODE	COULEUR	CODE	FARBE	CODICE	COLORE	CODIGO	COLOR	CÓDIGO	COR
B	BLACK	B	ZWART	B	NOIR	B	SCHWARZ	B	NERO	B	NEGRO	B	PRETO
G	GREEN	G	GROEN	G	VERT	G	GRÜN	G	VERDE	G	VERDE	G	VERDE
K	PINK	K	ROZE	K	ROSE	K	ROSA	K	ROSA	K	ROSA	K	ROSA
LG	LIGHT GREEN	LG	LICHTGROEN	LG	VERT CLAIR	LG	HELLGRÜN	LG	VERDE CHIARO	LG	VERDE CLARO	LG	VERDE CLARO
N	BROWN	N	BRUIN	N	BRUN	N	BRAUN	N	MARRONE	N	MARRON	N	CASTANHO
O	ORANGE	O	ORANJE	O	ORANGE	O	ORANGE	O	ARANCIONE	O	NARANJA	O	LARANJA
P	PURPLE	P	PAARS	P	VIOLET	P	LILA	P	PORPORA	P	PURPURA	P	ROXO
R	RED	R	ROOD	R	ROUGE	R	ROT	R	ROSSO	R	ROJO	R	VERMELHO
S	SLATE (grey)	S	LEIGRIJS	S	GRIS	S	GRAU	S	ARDESIA (grigio)	S	PIZARRO (gris)	S	CINZENTO
U	BLUE	U	BLAUW	U	BLEU	U	BLAU	U	BLU	U	AZUL	U	AZUL
W	WHITE	W	WIT	W	BLANC	W	WEISS	W	BIANCO	W	BLANCO	W	BRANCO
Y	YELLOW	Y	GEEL	Y	JAUNE	Y	GELB	Y	GIALLO	Y	AMARILLO	Y	AMARELO

CONTENTS

4 POWER DISTRIBUTION	6		
ENGINE COMPARTMENT	6		
PASSENGER COMPARTMENT	10		
8 EARTH DISTRIBUTION	15		
12 ENGINE MANAGEMENT	24		
DIESEL	24		
KV6.....	27		
K SERIES.....	31		
16 CHARGING AND STARTING	34		
KV6	34		
K SERIES	35		
DIESEL	36		
20 FUEL PUMP	37		
24 ENGINE IMMOBILISATION	38		
28 ANTI-THEFT ALARM	40		
36 AUTOMATIC TRANSMISSION	44		
PETROL	44		
DIESEL	46		
40 SHIFT INTERLOCK	48		
44 ANTI-LOCK BRAKING SYSTEM AND TRACTION CONTROL	49		
60 CRUISE CONTROL	52		
PETROL	52		
DIESEL	54		
64 SUPPLEMENTARY RESTRAINT SYSTEM	56		
LOW-LINE	56		
HIGH-LINE	57		
72 ROTARY COUPLER	59		
80 FUEL BURNING HEATER	60		
84 AIR CONDITIONING	62		128 CIGAR LIGHTER 101
85 AIR TEMPERATURE CONTROL	65		132 HORNS 102
88 COOLING FANS	68		136 SEATS 103
K SERIES	68		MEMORY
K SERIES AUTO	69		HEATED
KV6	70		NON MEMORY
DIESEL	71		
92 HEATED WINDOW	72		140 DOOR MIRRORS 107
REAR	72		141 REAR VIEW MIRROR 109
FRONT	73		144 AUDIO SYSTEMS 110
96 WINDOWS	74		KENWOOD
100 SUNROOF	75		KENWOOD SINGLE CD PLAYER
101 REAR SUNBLIND	76		HARMONY
104 WIPERS AND WASHERS	77		SYMPHONY
FRONT	77		SYMPHONY PLUS PREMIUM AUDIO
REAR	79		148 NAVIGATION SYSTEMS 120
104 WIPERS AND WASHERS	80		LOW-LINE
HEADLAMP POWER WASH	80		HIGH NAVIGATION PLUS TV AND PREMIUM AUDIO
HEATED WASHER JETS	81		HIGH NAVIGATION PLUS TV AND PREMIUM AUDIO (JAPAN ONLY)
108 EXTERIOR LAMPS	82		HIGH NAVIGATION PLUS TV
HEAD/SIDE LAMPS	82		HIGH NAVIGATION PLUS TV (JAPAN ONLY)
DIRECTIONAL INDICATOR/HAZARD WARNING LAMPS	84		HIGH NAVIGATION
FOG LAMPS REAR	87		HIGH NAVIGATION PLUS PREMIUM AUDIO
HEADLAMP LEVELLING	88		156 BODY CONTROL UNIT 140
BRAKE AND REVERSE LAMPS	89		160 COMMUNICATION DATABASES 143
FOG LAMPS FRONT	91		164 DIAGNOSTIC SOCKET 146
112 INTERIOR LAMPS	92		172 TRAILER SOCKET 147
116 INTERIOR ILLUMINATION	94		176 PARK DISTANCE CONTROL 150
120 INSTRUMENTS	97		180 HEADER JOINTS 151
124 CLOCK	100		184 SPLICES AND CENTRE TAPS 160

CONTENTS


HOW TO USE THE CIRCUIT DIAGRAMS

All of the information in the Circuit Diagrams is intended for use with the Electrical Reference Library.

The circuit diagrams are presented with Power and Earth distribution first, followed by individual circuits for each electrical system on the vehicle.

Power Distribution

The Power Distribution diagram shows the connections from the battery to the engine and passenger compartment fuse boxes. It also shows the internal circuitry of the fuse boxes.

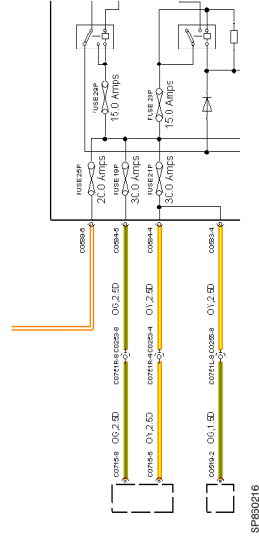


The fuse box details are followed by independent functionally specific circuits and then a Splices and centre taps section outlining the way in which internal harness splices and centre taps distribute power in the harnesses. This information should be used during diagnosis of electrical faults to check for symptoms in associated circuits and narrow down the search area.

Earth Distribution

The earth distribution section comprises a number of Headers and Splices tables. These are used in a similar manner to those in Power Distribution; to narrow the search area by checking for fault symptoms in associated circuits.

Splices and centre taps

Header and splice tables present the joint(s) and wiring up to the first component. Splices are identified by a number with an alphabetical prefix and the wire colour.

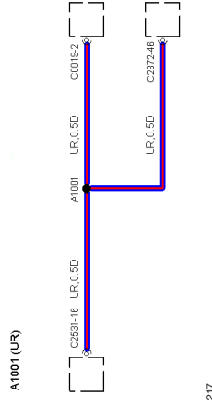

The splice information shown on individual system circuits is not complete. Always refer to the splices circuit for complete information on each splice.

Wire attributes

Additional information (separated by a ':') is shown alongside the wire colour.

Wire gauge - the cross-sectional area of the wire in square millimetres. This is included to help you select the correct wire during harness repair.

Some wires do not have a gauge shown, these wires are of unique construction and will have a three or four letter code printed after the colour code, e.g. MAB. The code identifies the type of wire for manufacturing purposes. Usually, only the first two characters have significance in service, but in some instances the third character also becomes significant, see table.


Wire type

The following table lists the wire type codes together with an explanation of their meaning.

Code	Description
D	Single core DIN wire
F	Single core flexible wire
H	Single core high temperature wire
SA*	Single core resistive wire (0.9 ohms/m)
SB*, SC*, SD*	Single core dual extruded wire
SE*, SF*	Single core fusible wire
MAC, MAD, MAE, MAF, MAG, MAH	Coaxial screened wire
MB*, MC*, MAK	Single core screened wire
MC*, MI*, MP*, MQ*, MAB, MAP	Twin core screened wire
MD*, MJ*, MAM	Twin core ABS sensor wire
ME*, TA*, TB*, MM*, MN*, MU*, MAI	Twisted pair of wires
MF*	Heated oxygen sensor (HO2S) screened wire
MG*	Twin core twisted, screened wire
MH	four core twisted, screened wire
MK*	Three core SRS sensor wire
ML*, MAA, MAF	Four core screened wire
MR*	Six core screened, flexible wire
MS*	Four core screened, flexible wire
MT*	Single core screened, flexible wire
MV*	Twin core flat wire
MW*	Three core round wire
MX*, MY*	Seven core round wire
MZ*	Three core screened, flexible wire
MAJ	Twin core round cable
MAQ, MAU	Three core screened wire
MAS	Single core, double sheath wire
MAT	Double core, double sheath wire
MAL	SFS wire
MAN	Twin core braided, screened wire

HOW TO USE THE CIRCUIT DIAGRAMS

Connectors

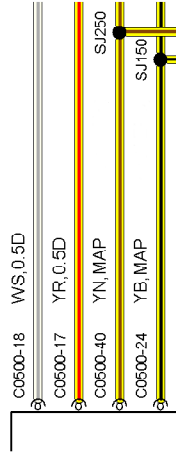

SF660215

Connectors have a numbered suffix to indicate the pin-out detail of the wire, i.e. C500-17 identifies connector 500, pin number 17. Wire insulation colour is identified in the normal way. Where wires have a predominant colour with a secondary colour stripe, the main colour is identified first, i.e. YR - Yellow with a Red stripe.


Line Types



SF660211

This means the wire connects to another circuit.


Earth points

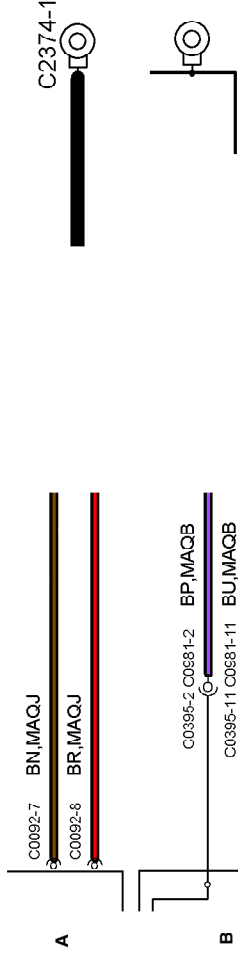

SF660212

Earth points are identified with an eyelet symbol and a connector number, except where components are grounded through their fixings, when only the eyelet is shown.

Fuses and Diodes

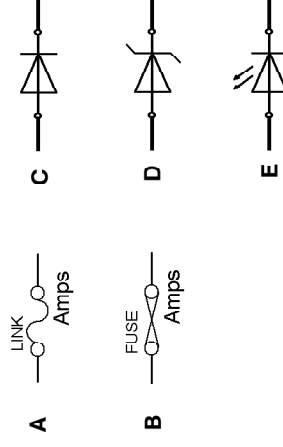


SF660218

Fusible links (A) and current rated fuses (B) are identified as shown. The direction of the arrow in a Diode symbol (C) indicates the direction of current flow. The Zener diode (D) - prevents current flow until a precise voltage is reached. A light emitting diode (LED) illuminates when current flows through it.

The cup and ball symbol indicates the male and female halves of connector.


- A. Connector plugs directly into component.
- B. Plug on lead (Flylead) wired directly to the component.

Components




SF660214


A dotted outline indicates that the component is not shown in its entirety.

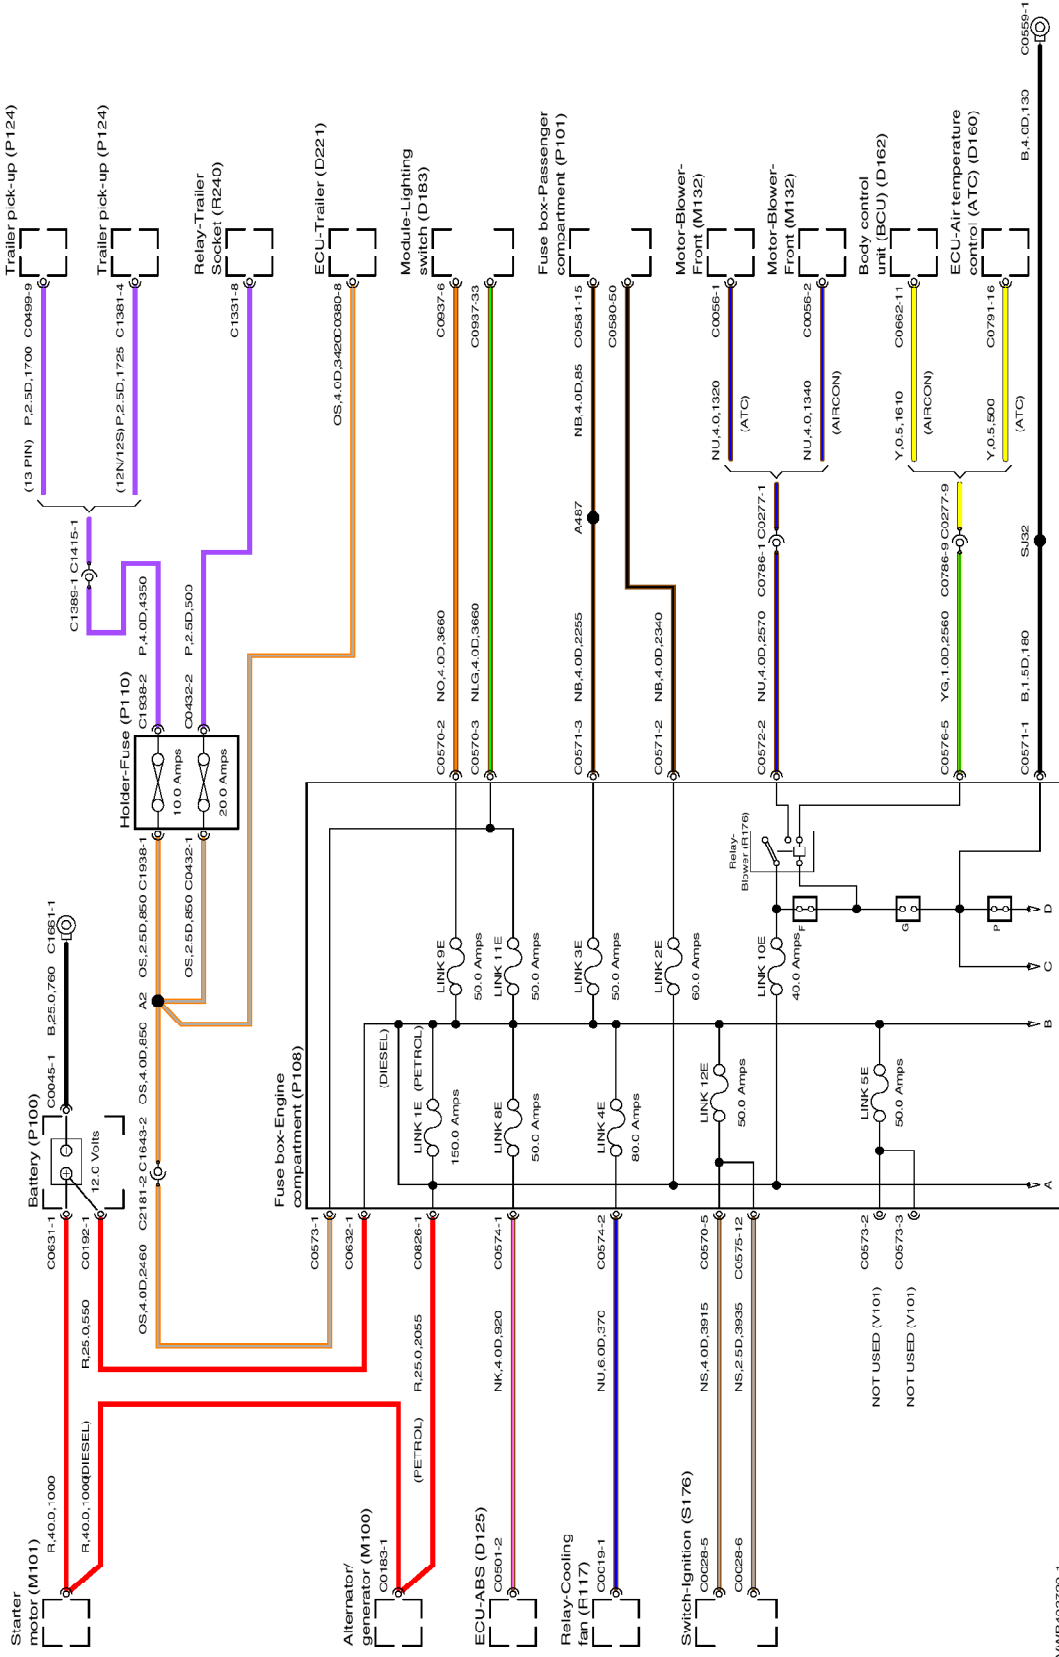


VWR403720-1

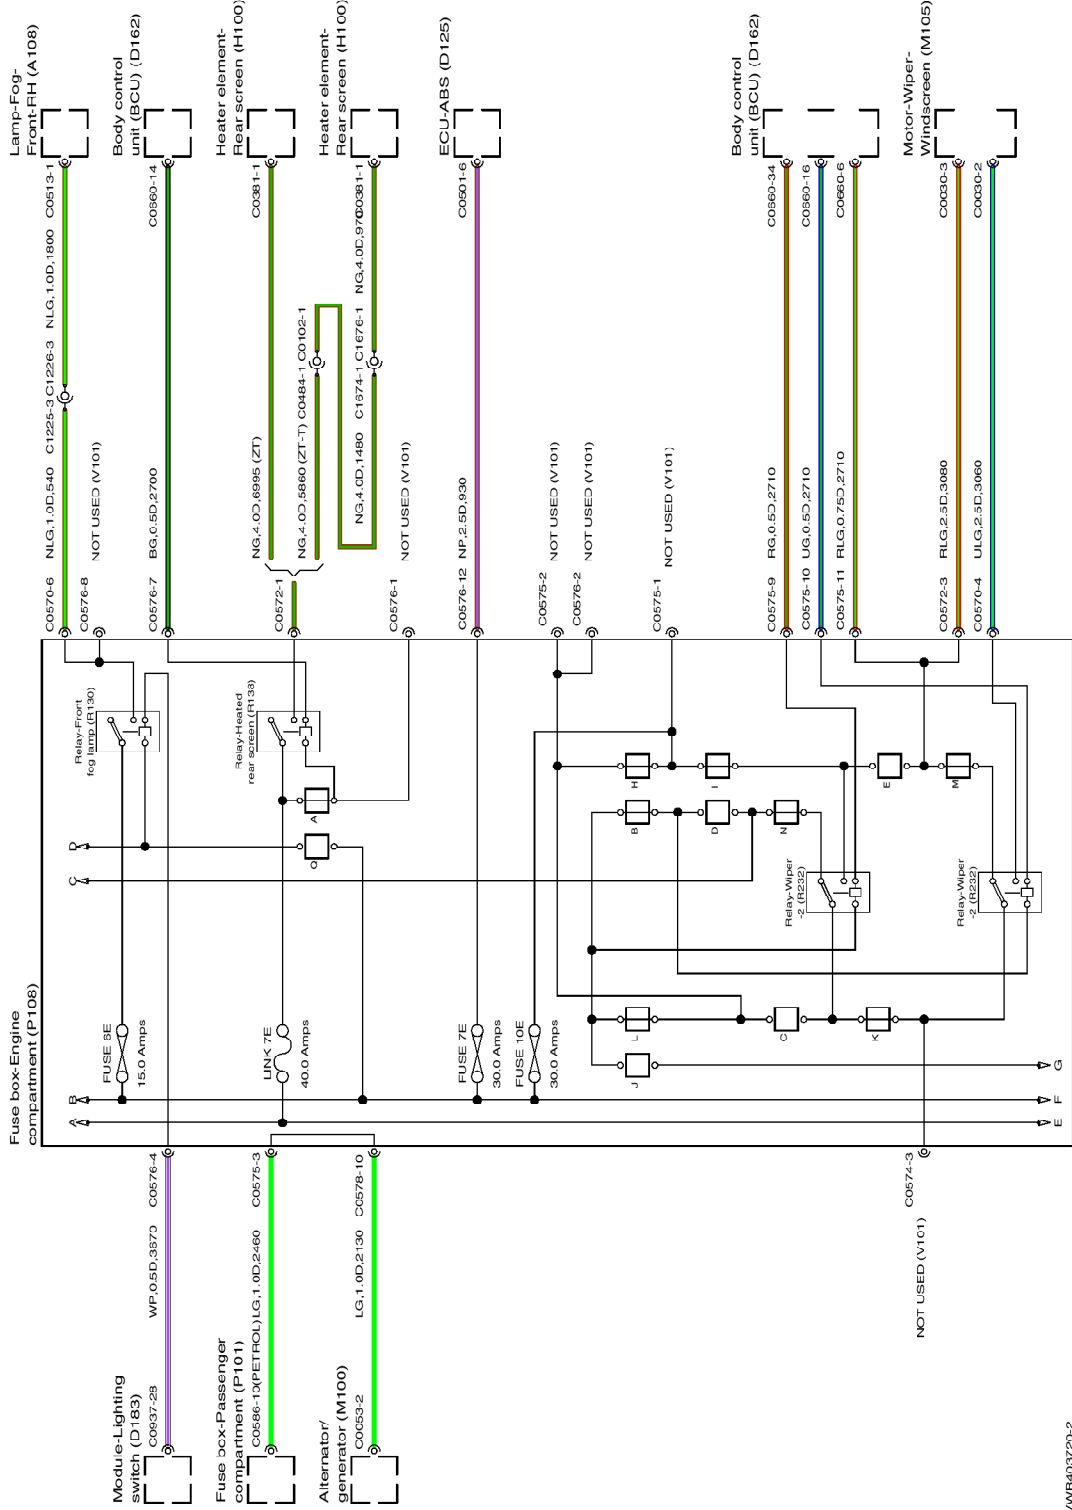


VWR403720-2

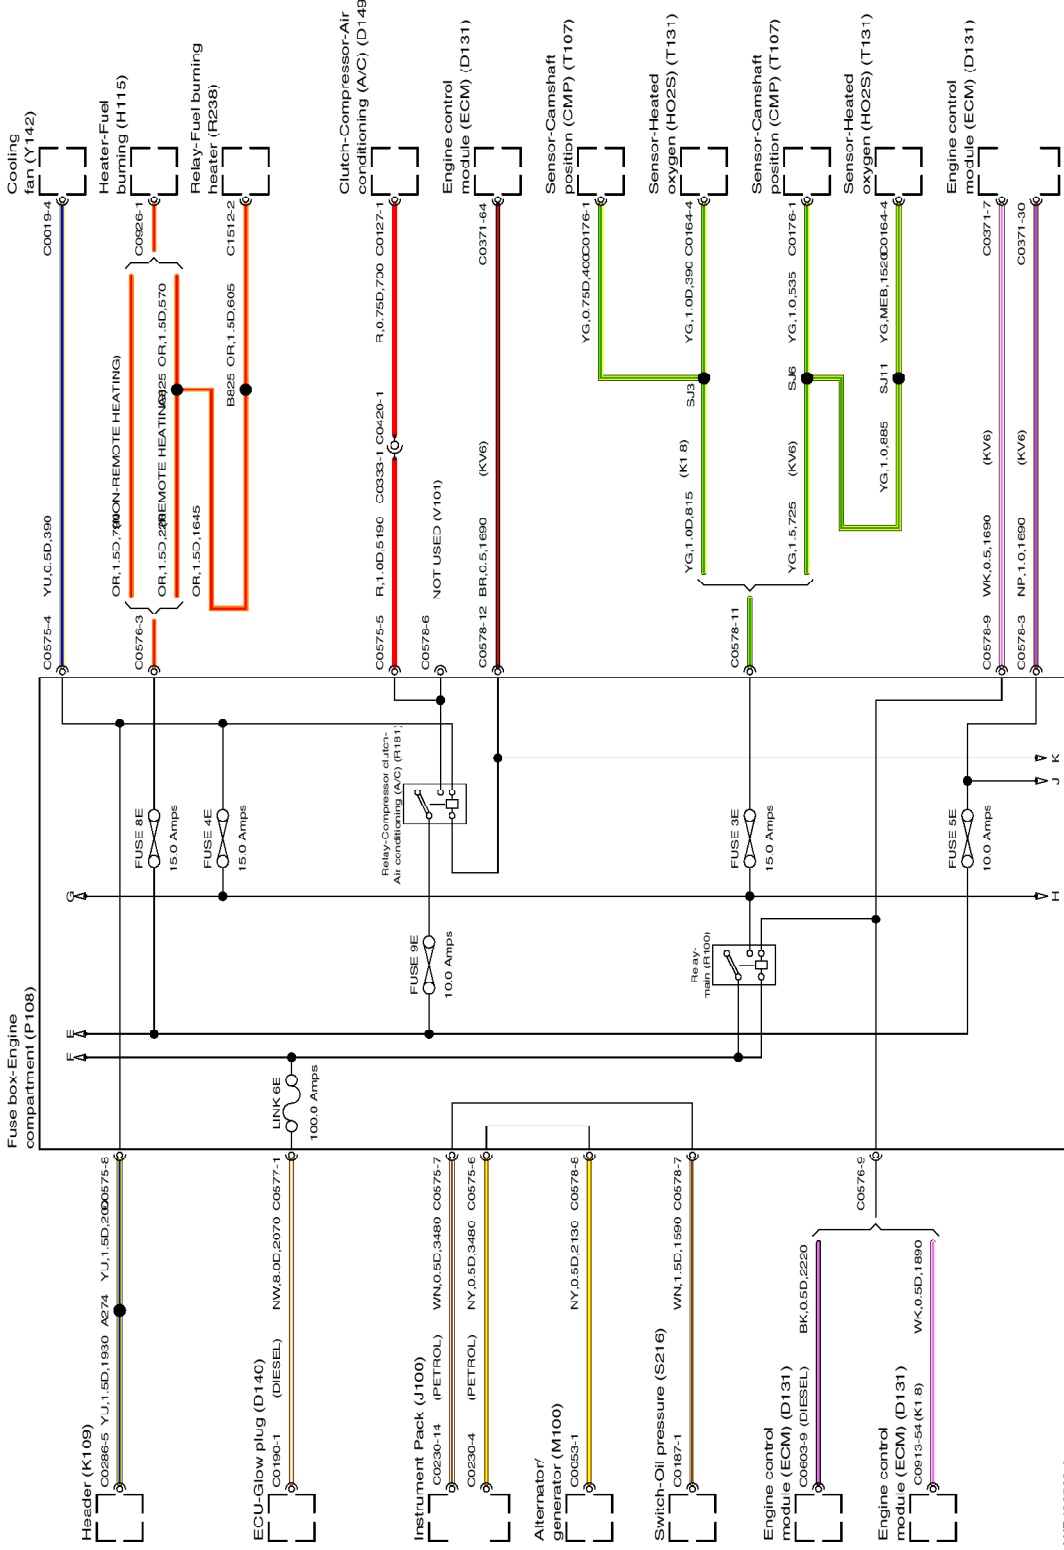


VWR403720-3

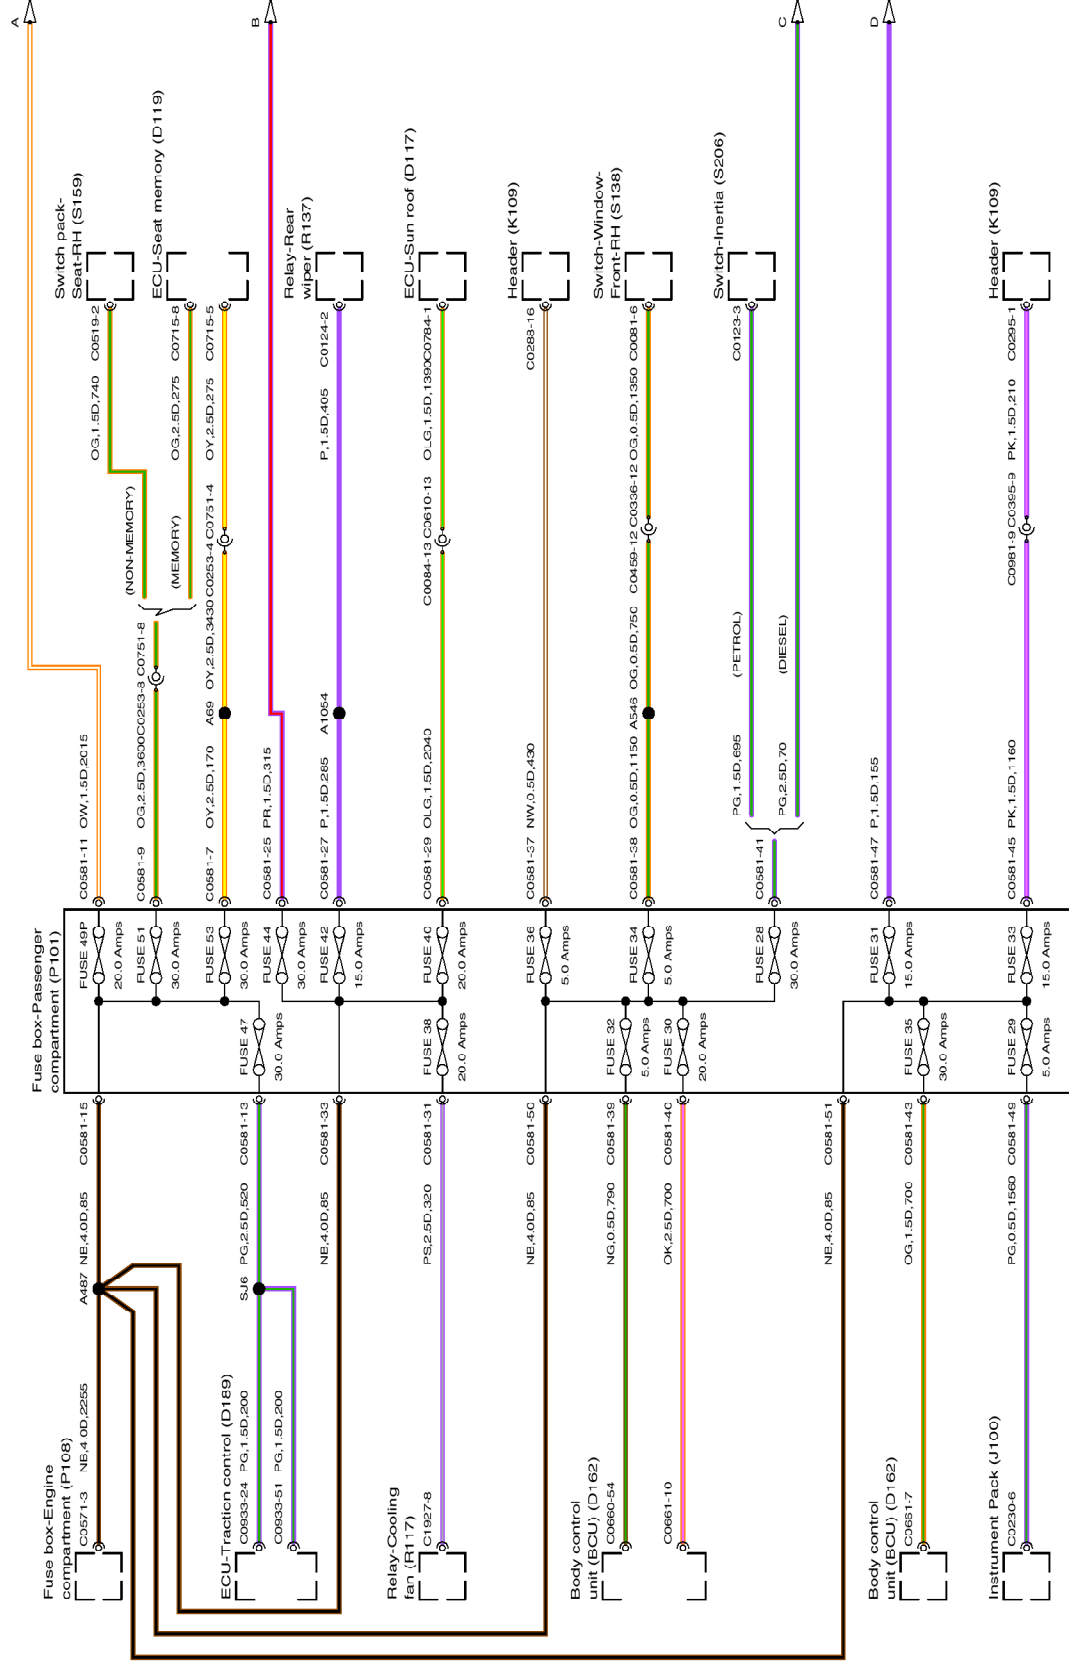


VWR403740-1

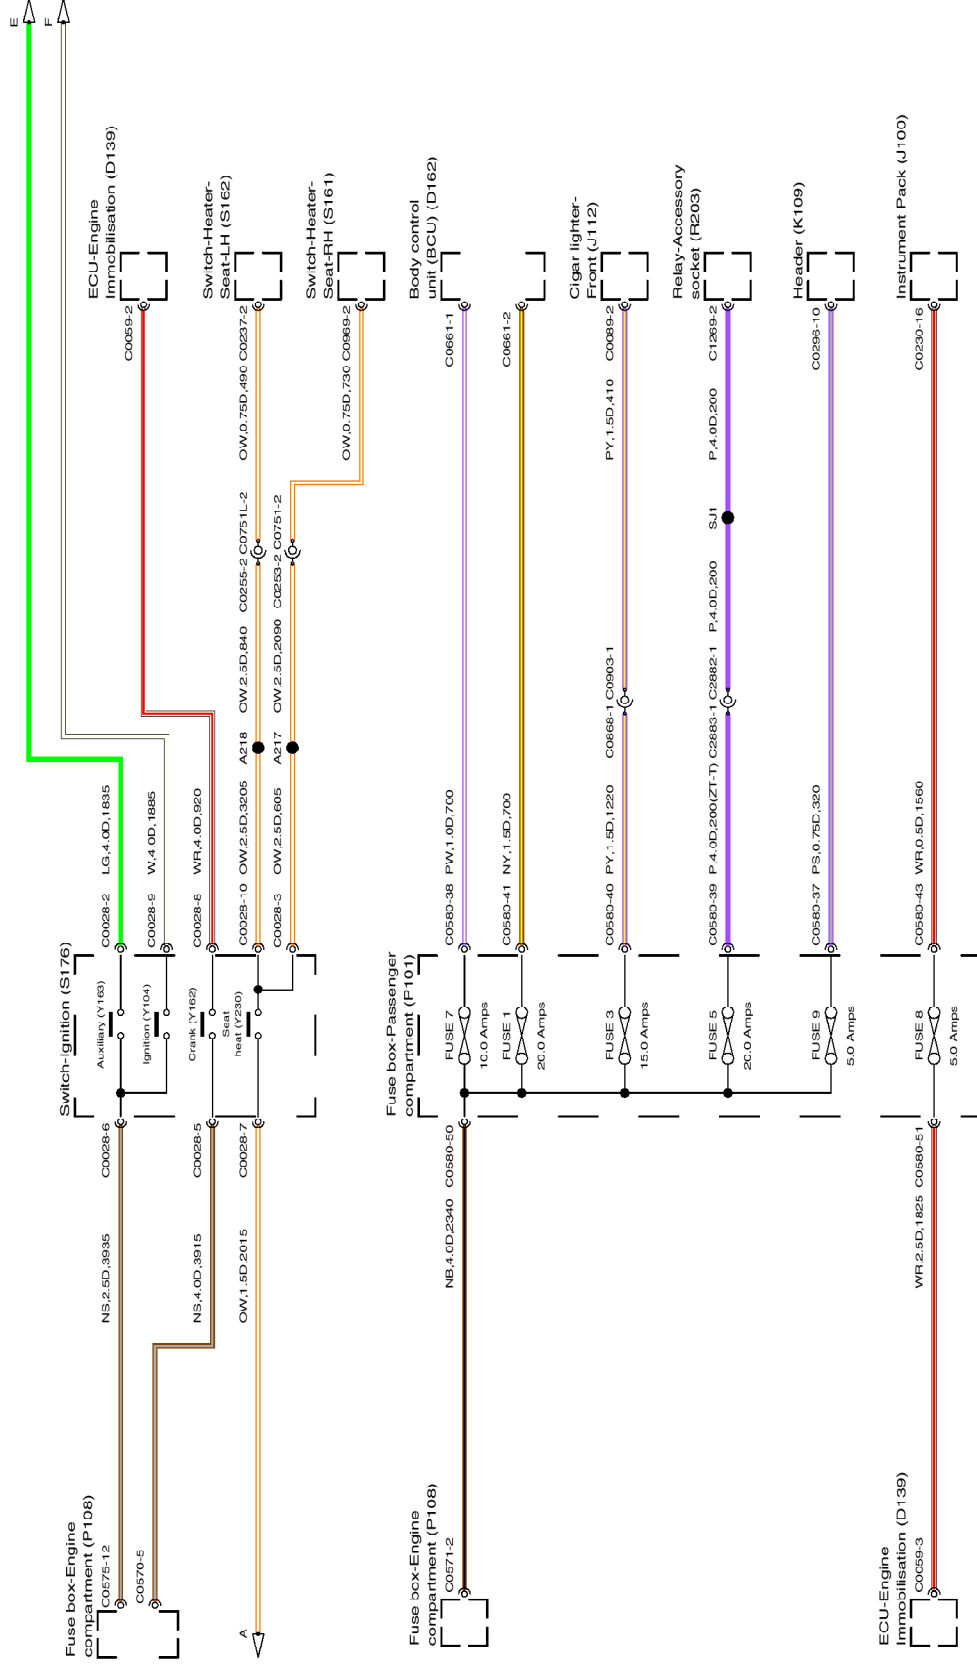


VWR403740-2

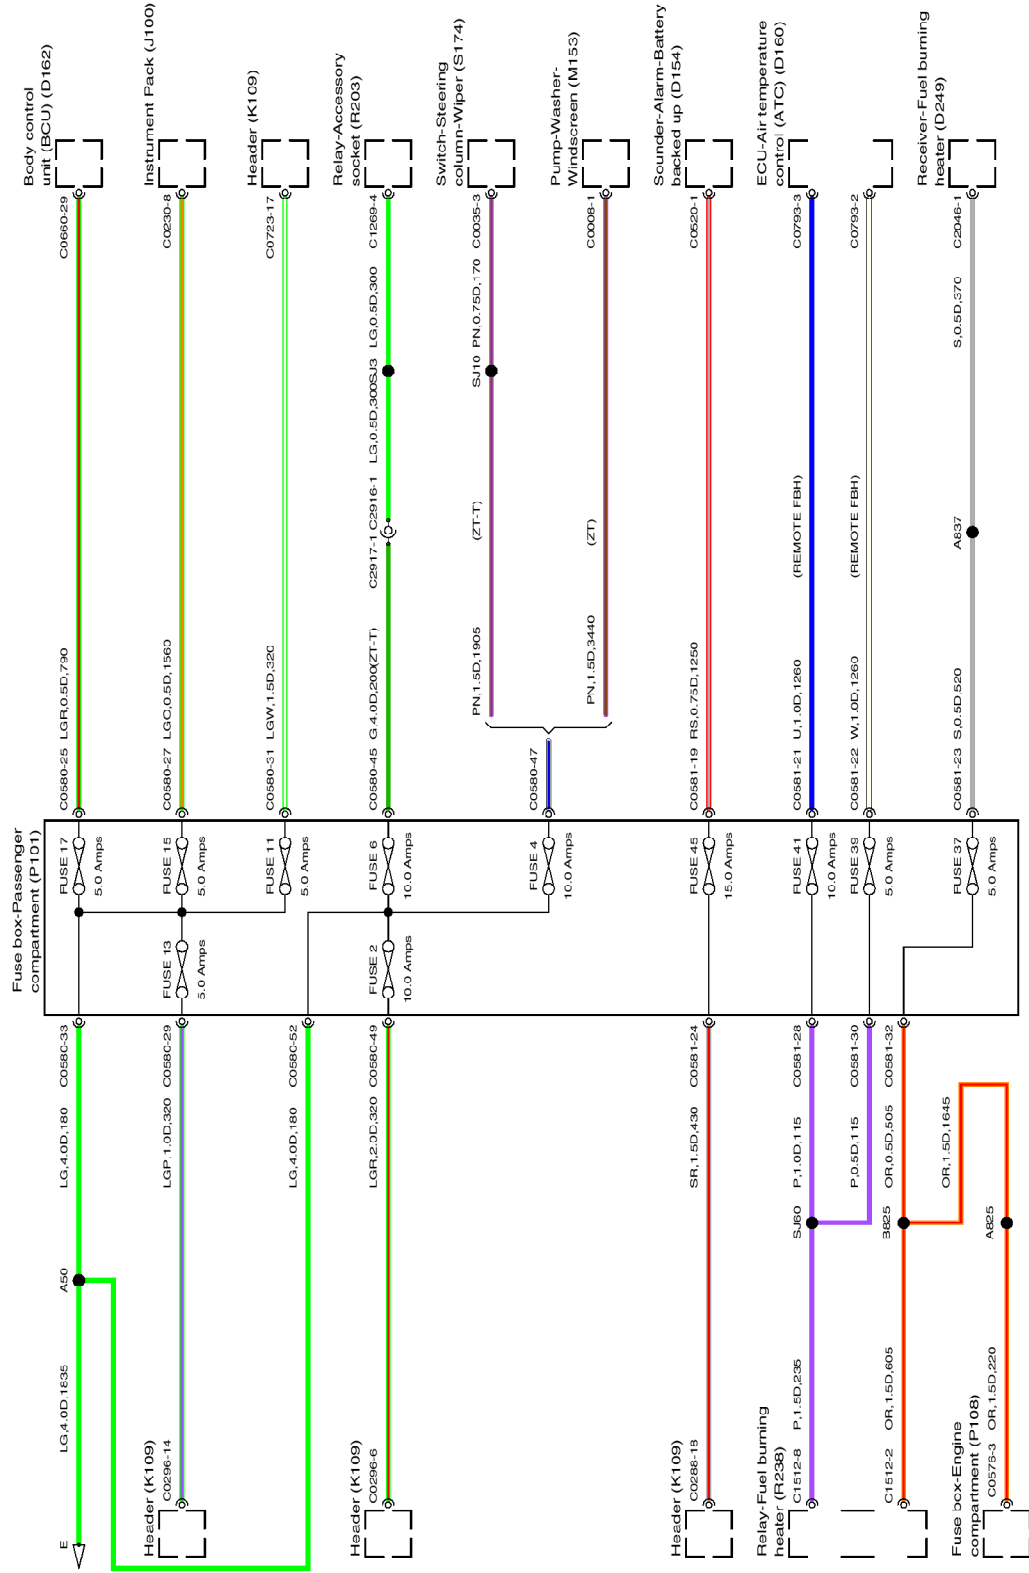


VWR403740-3

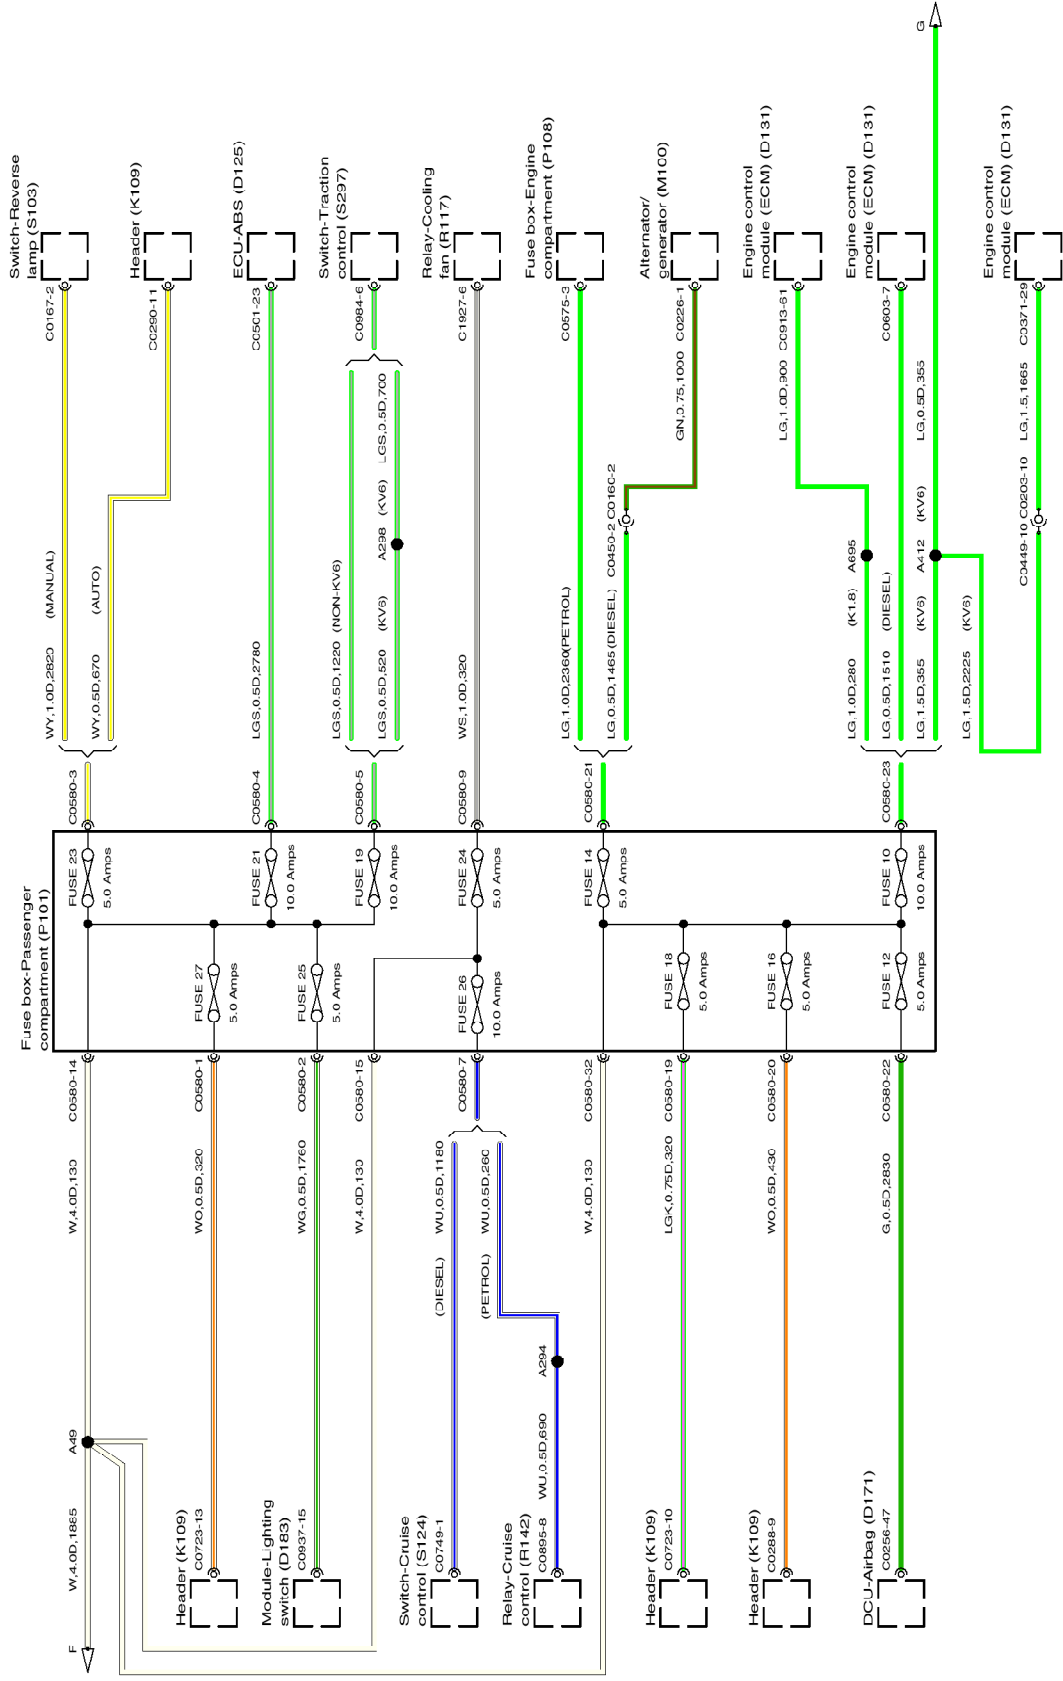


VWR403740-4

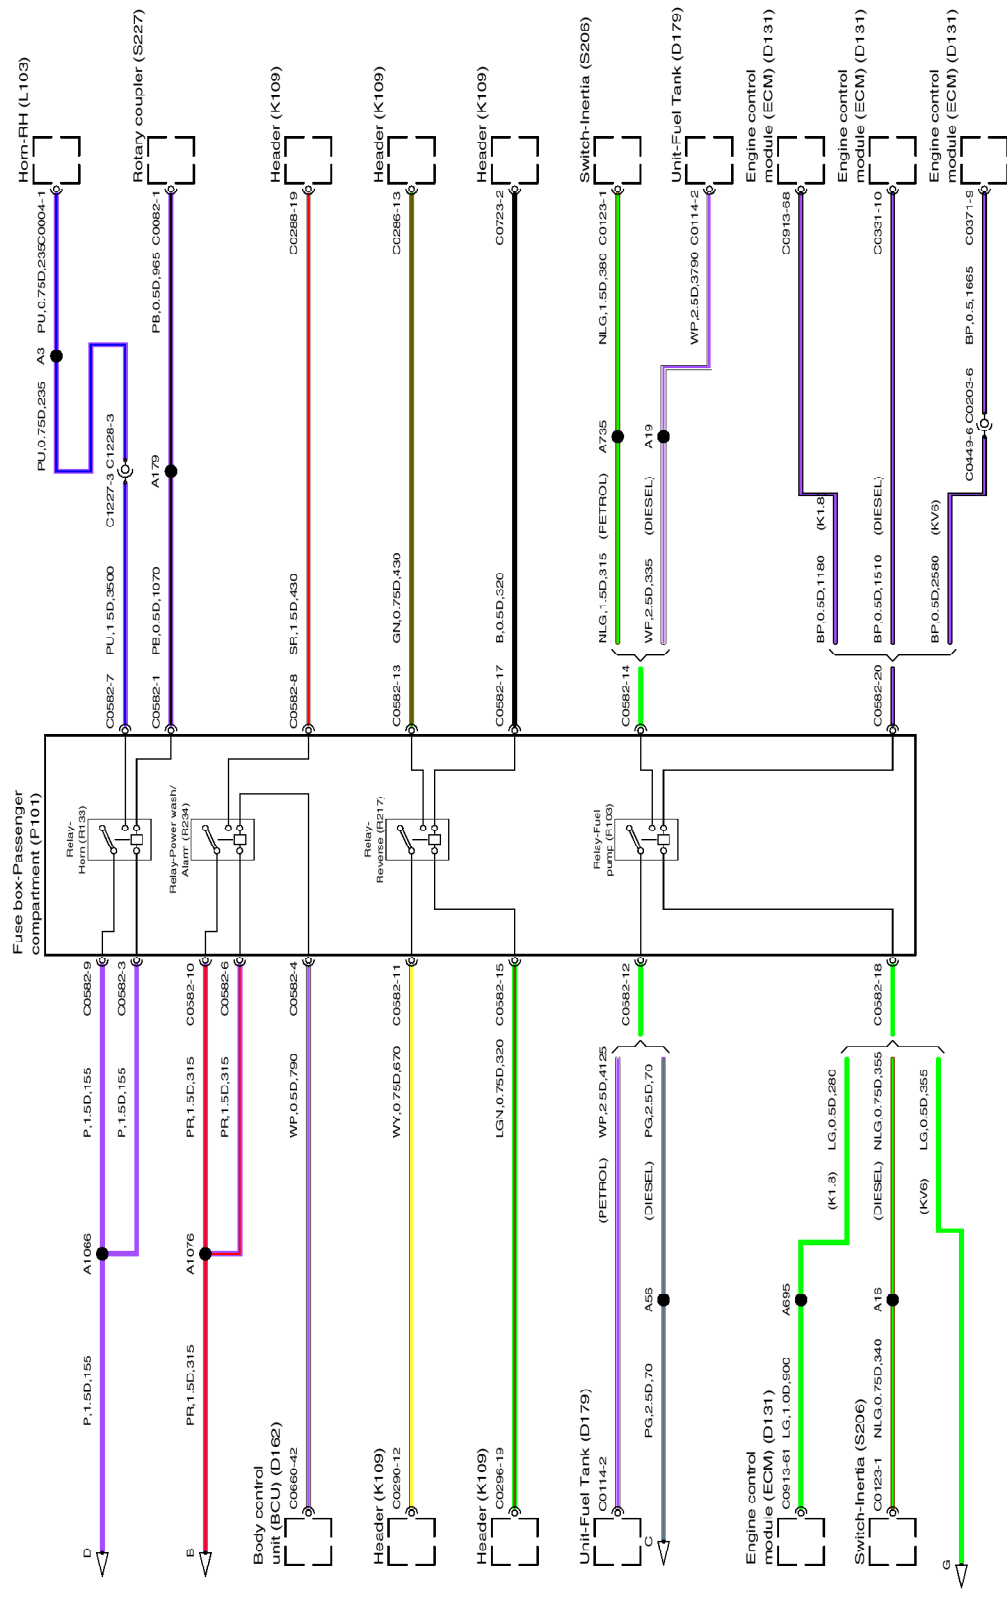


VWR403740-5

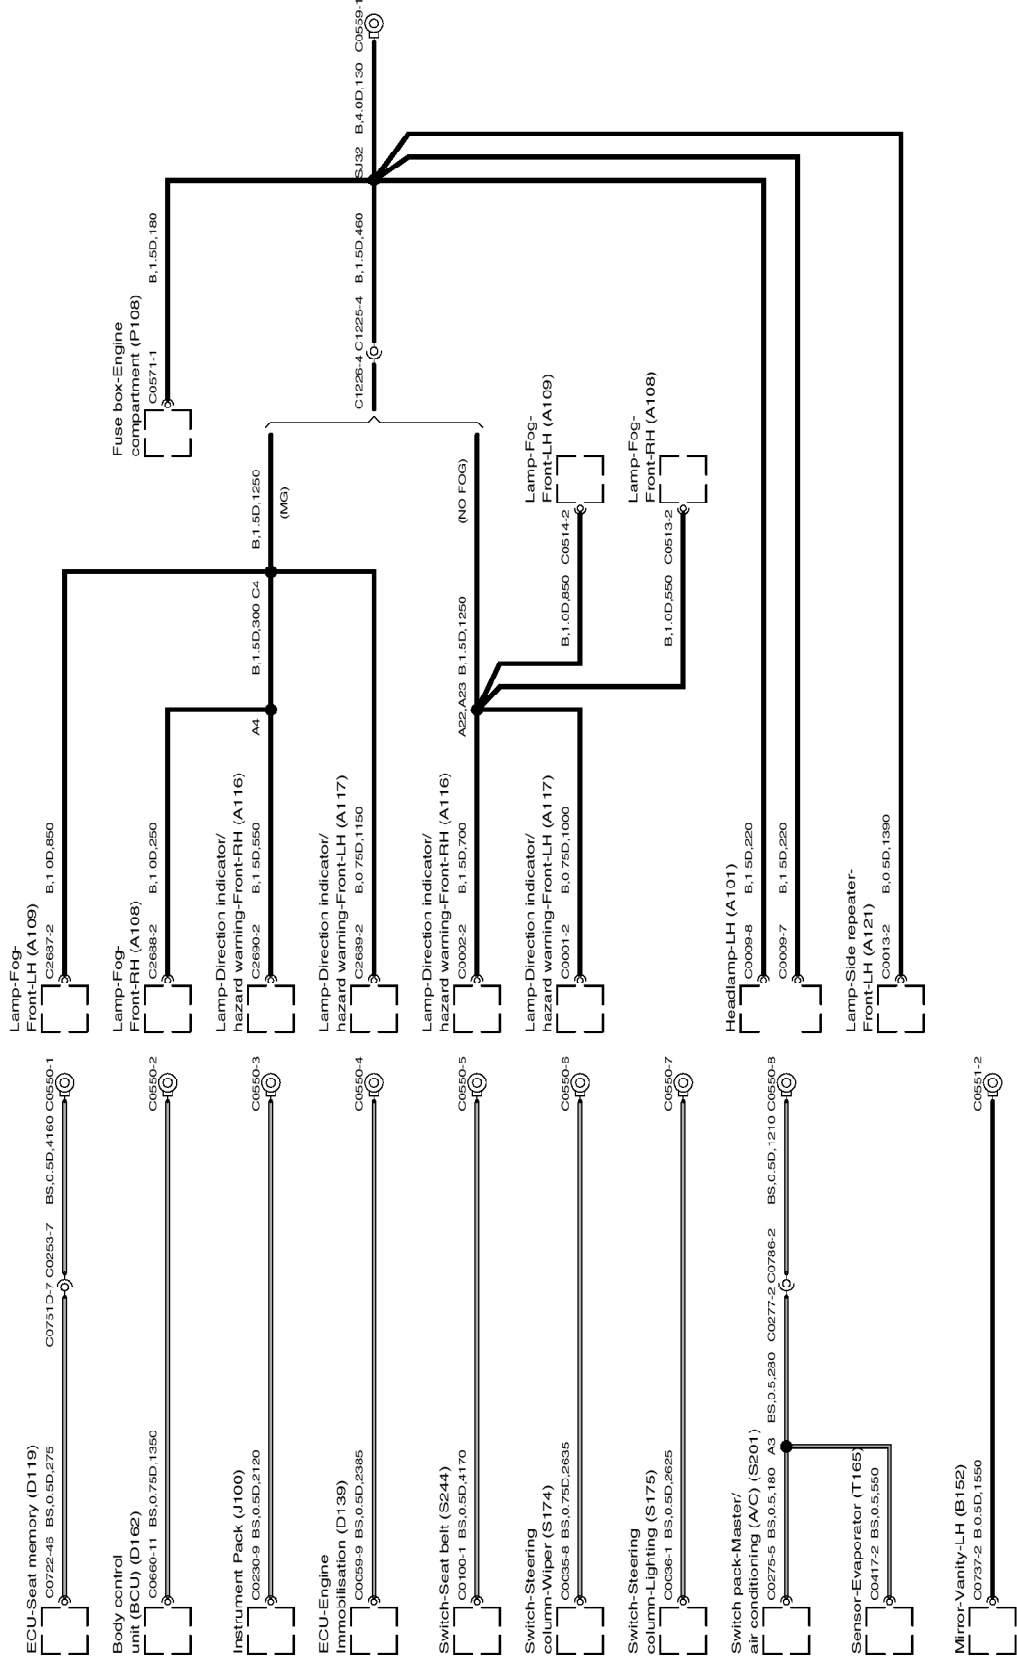


VWR403020-1

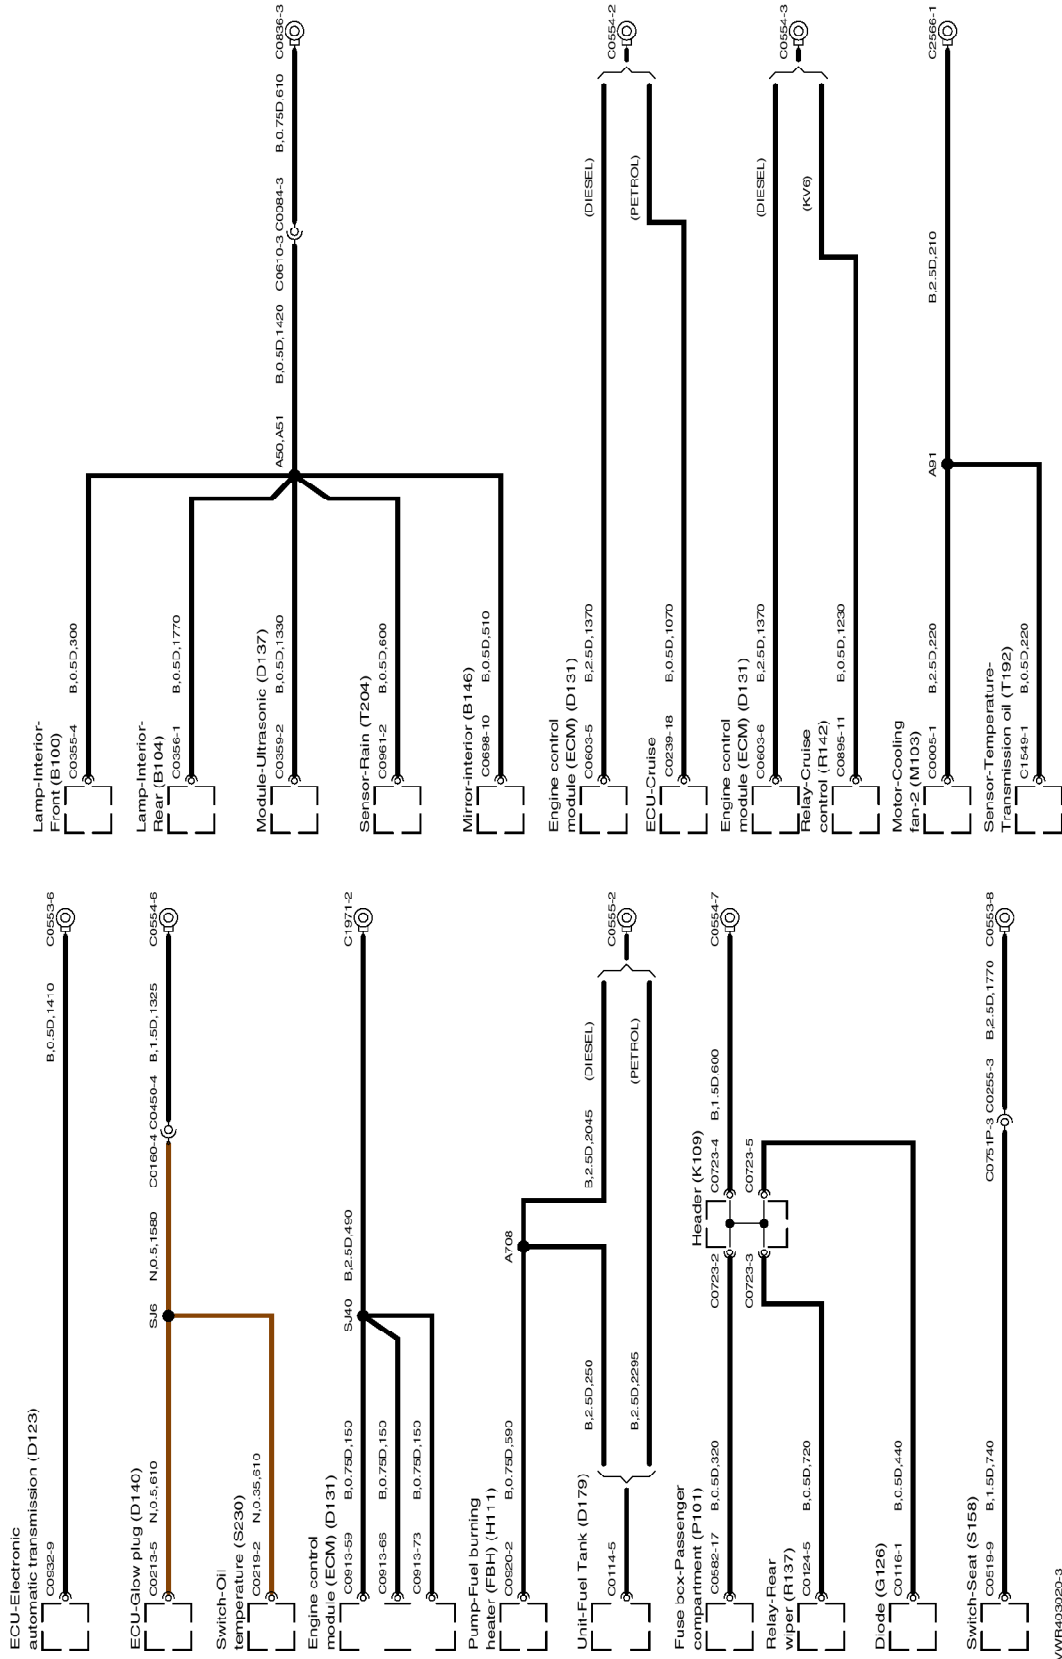


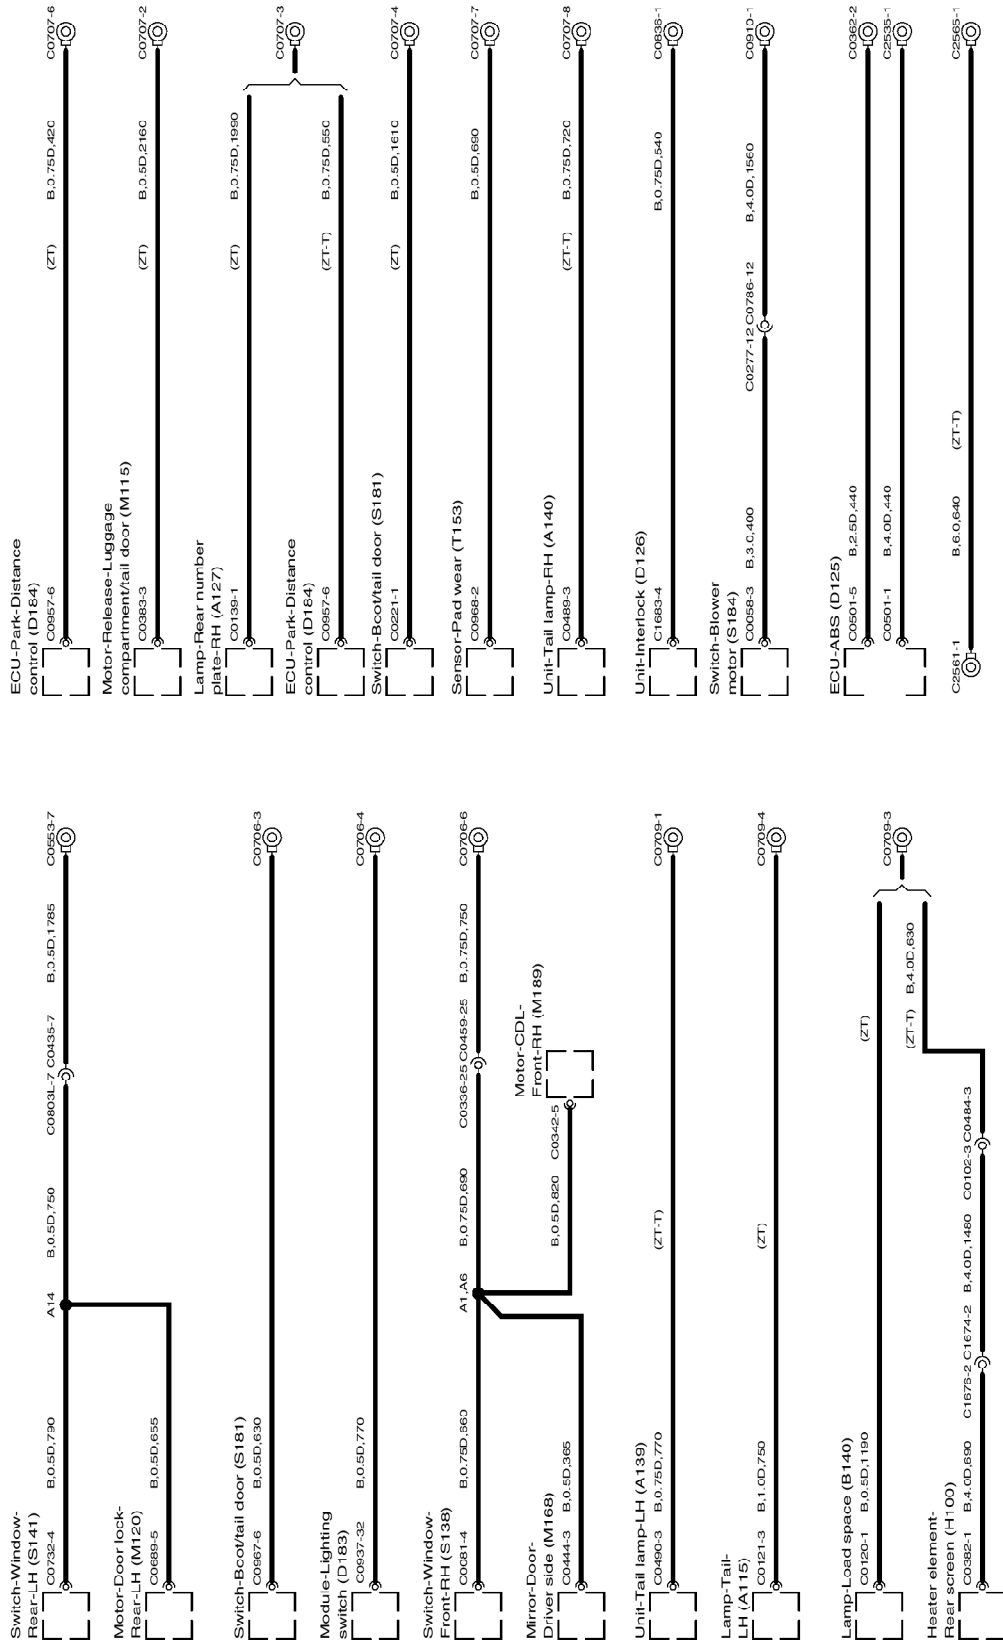


VWR403020-4

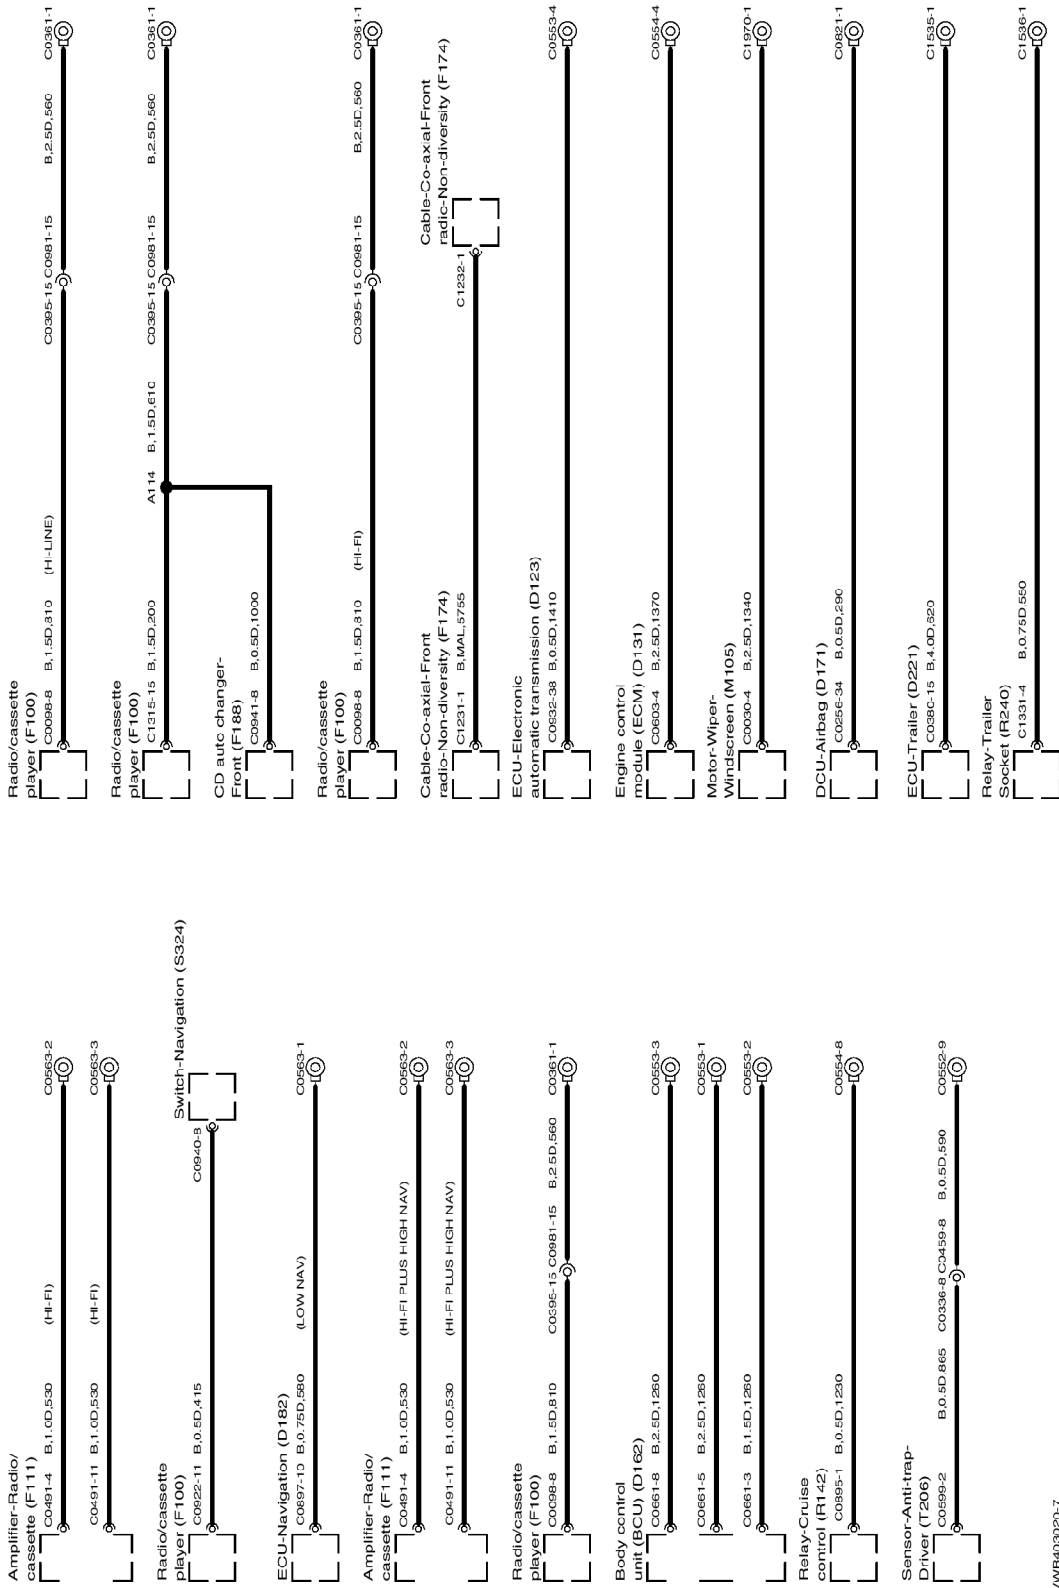


VWR403020-7

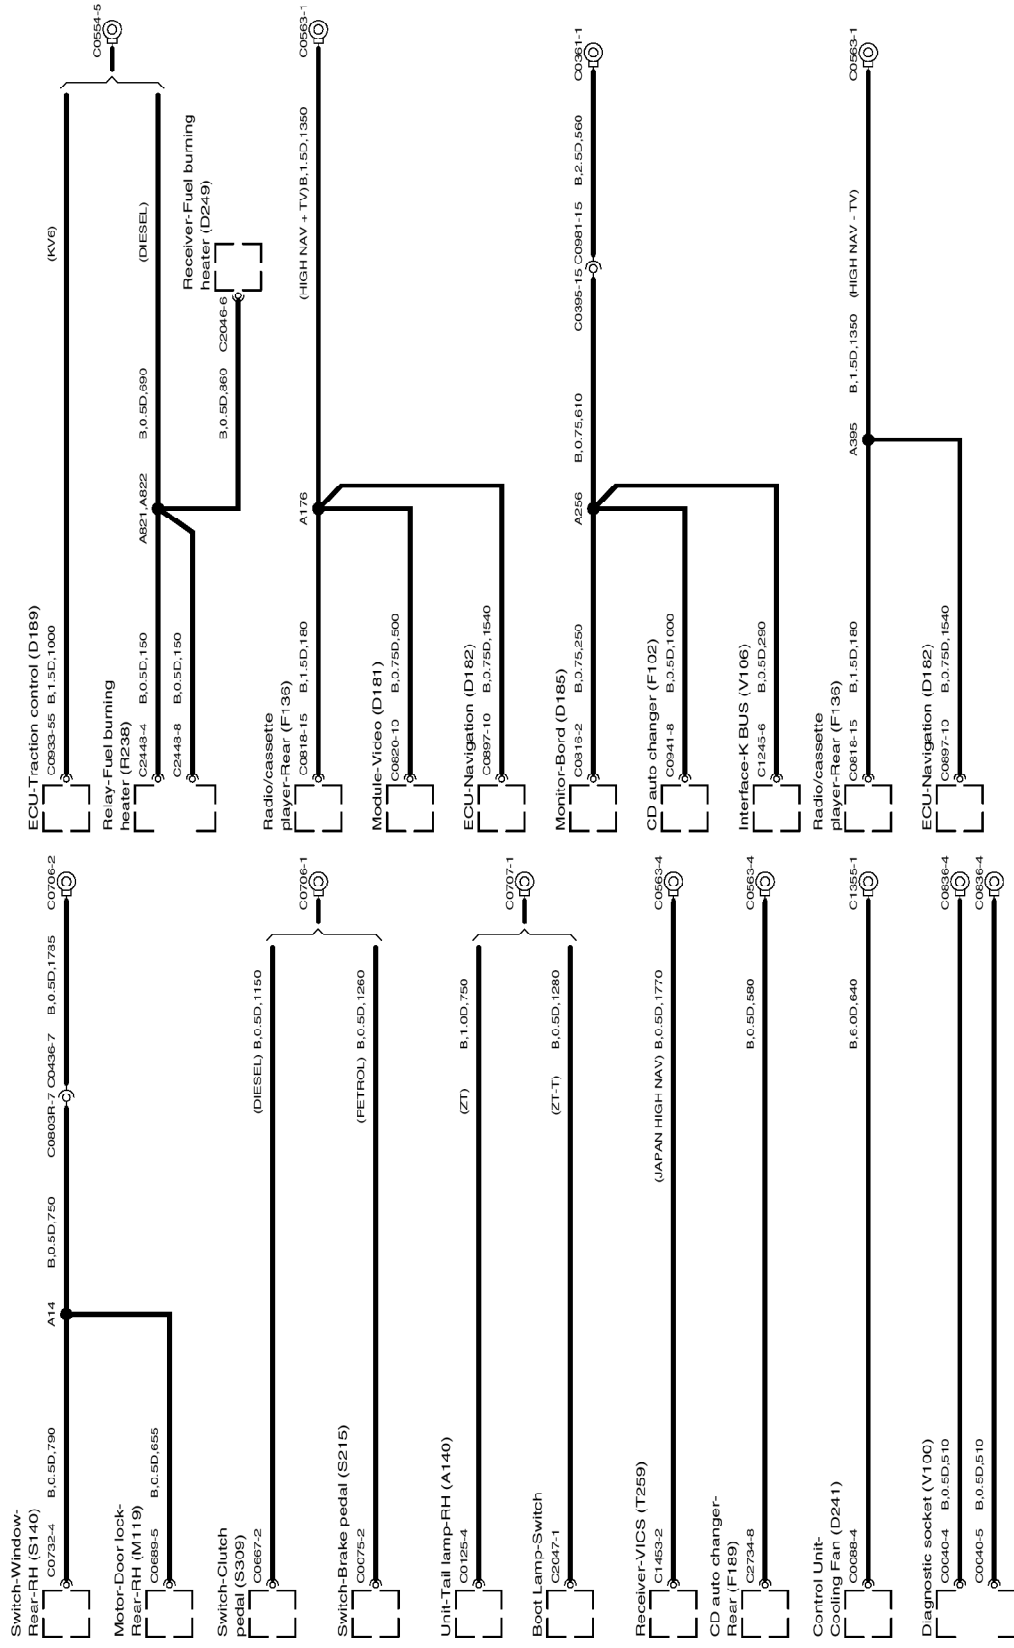


VWR403020-9

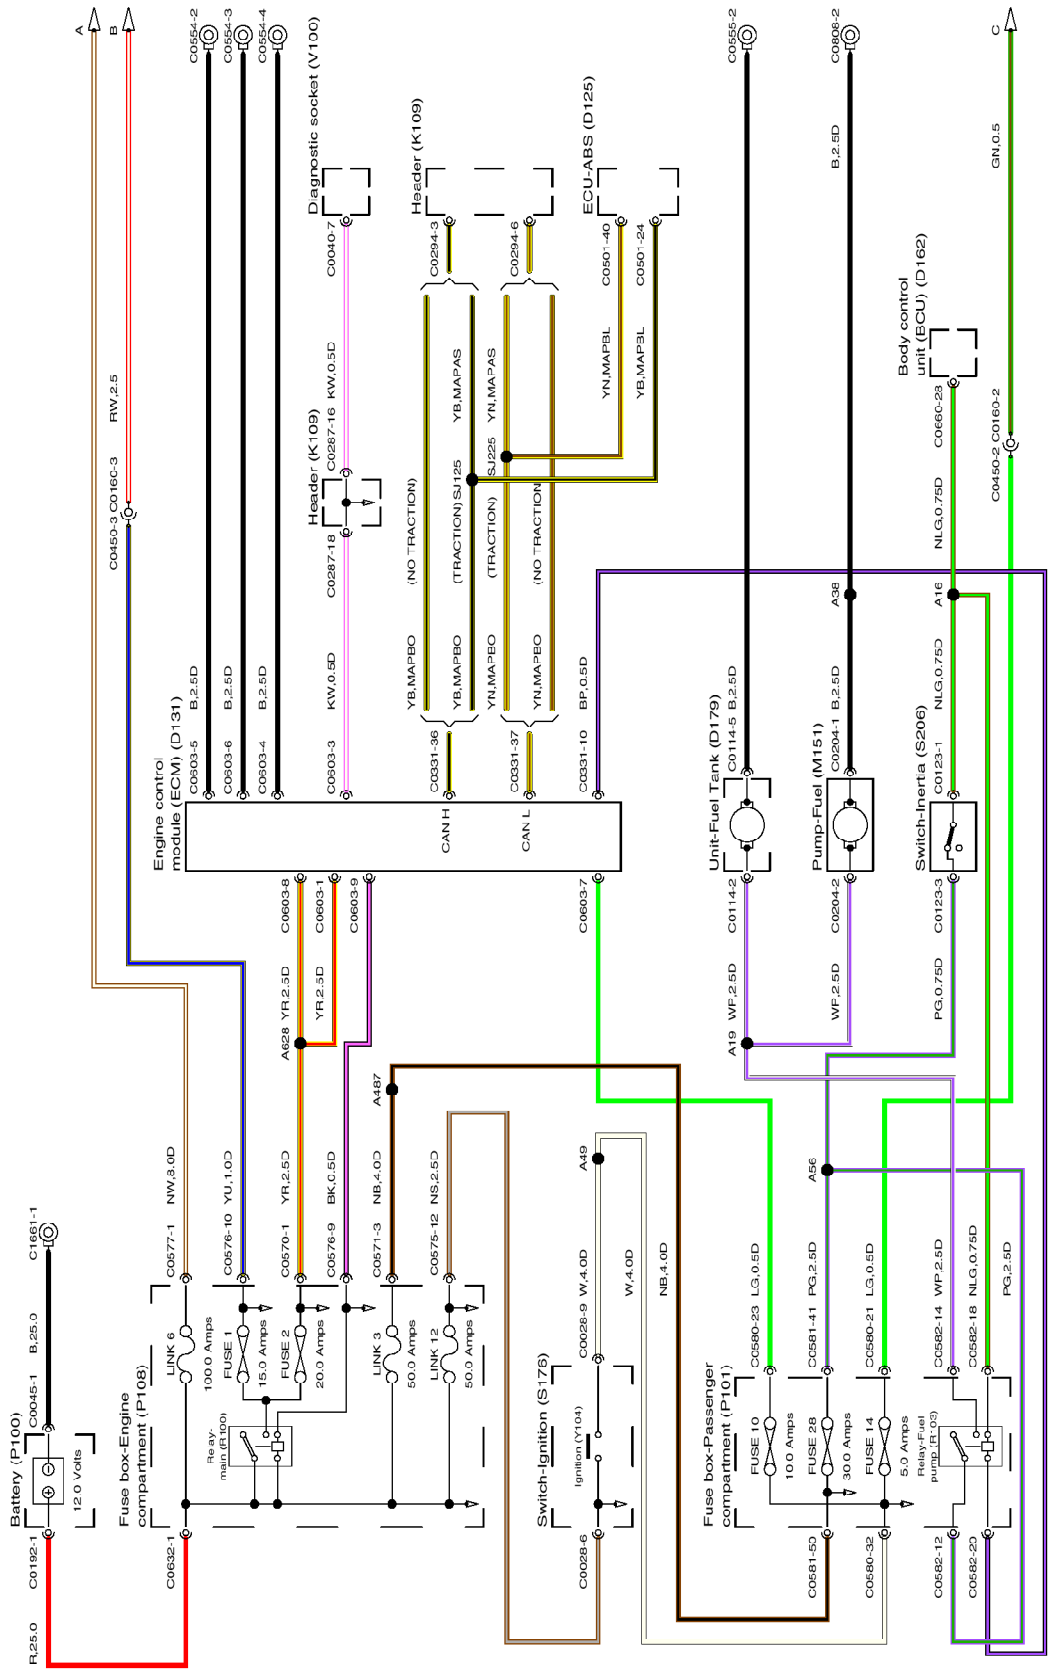


VWV403080-1

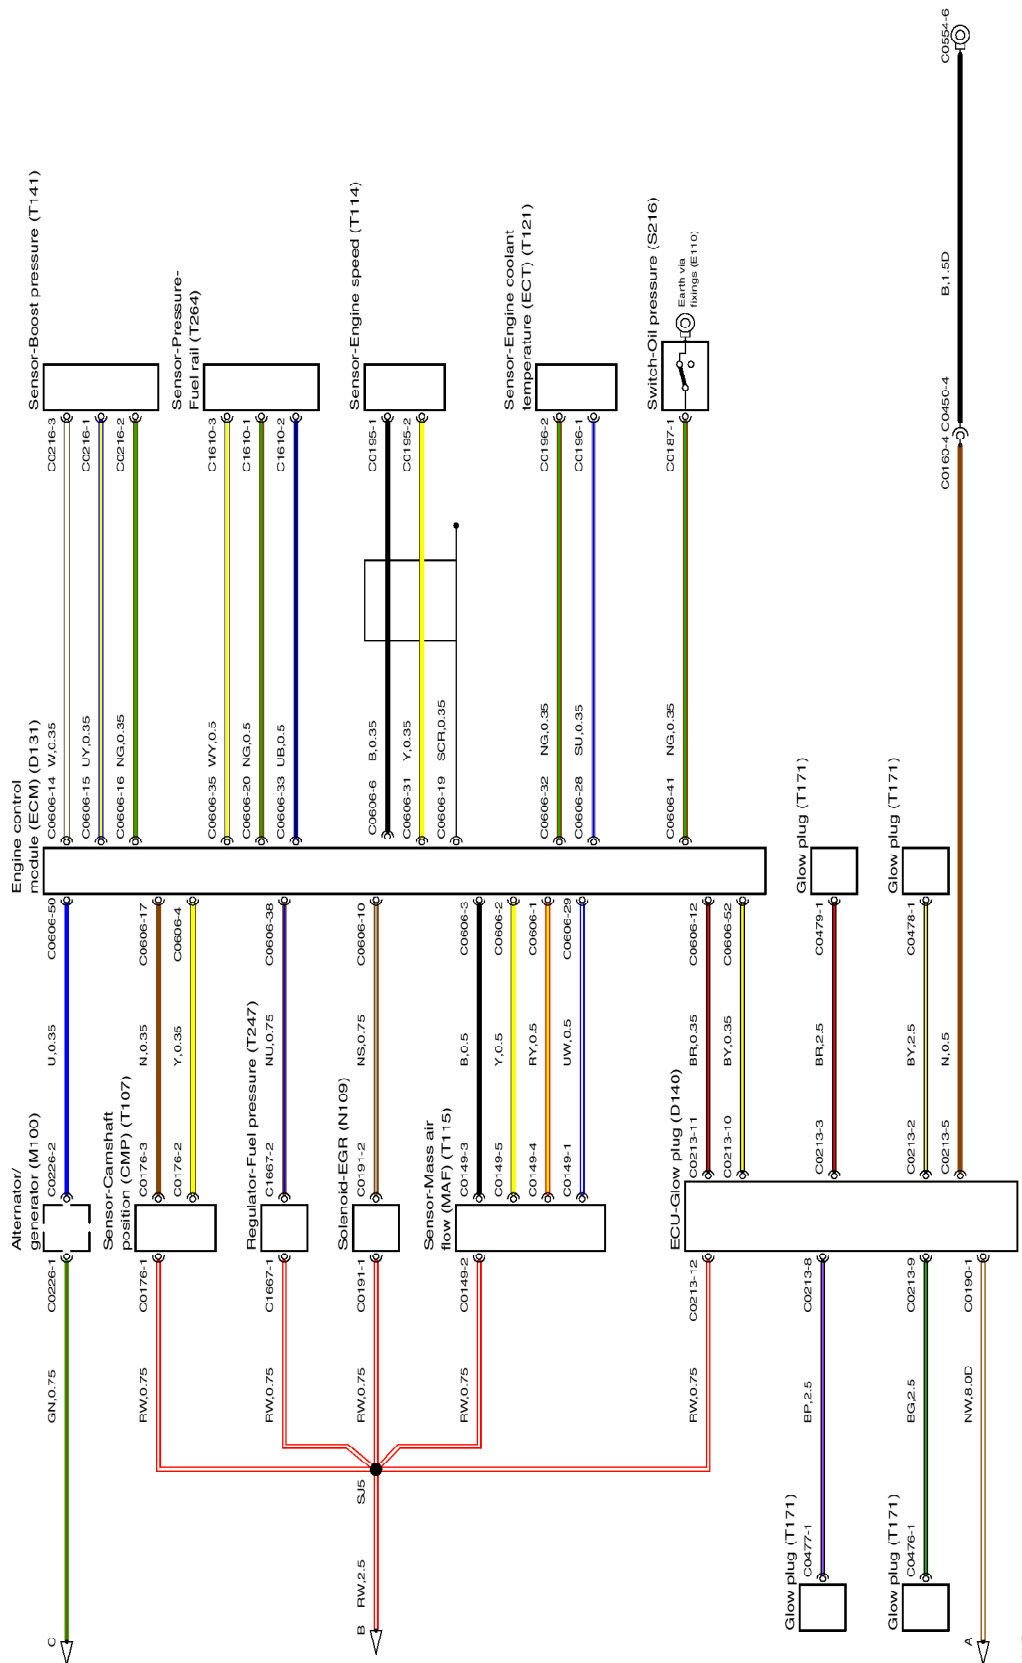


VWR403080-2

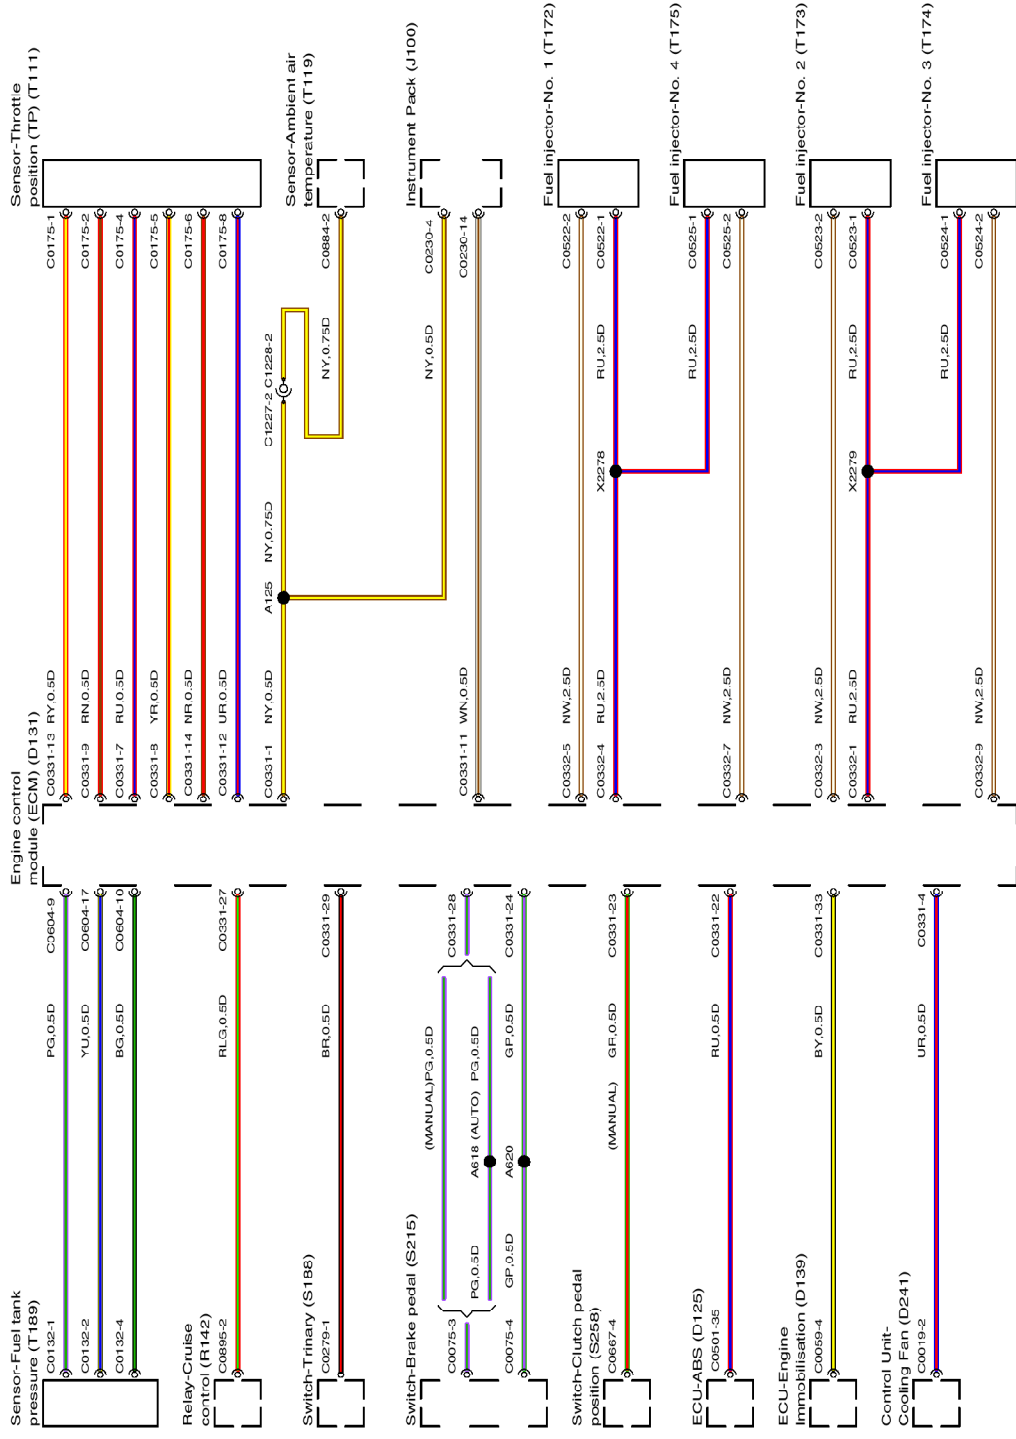


VWR403080-3

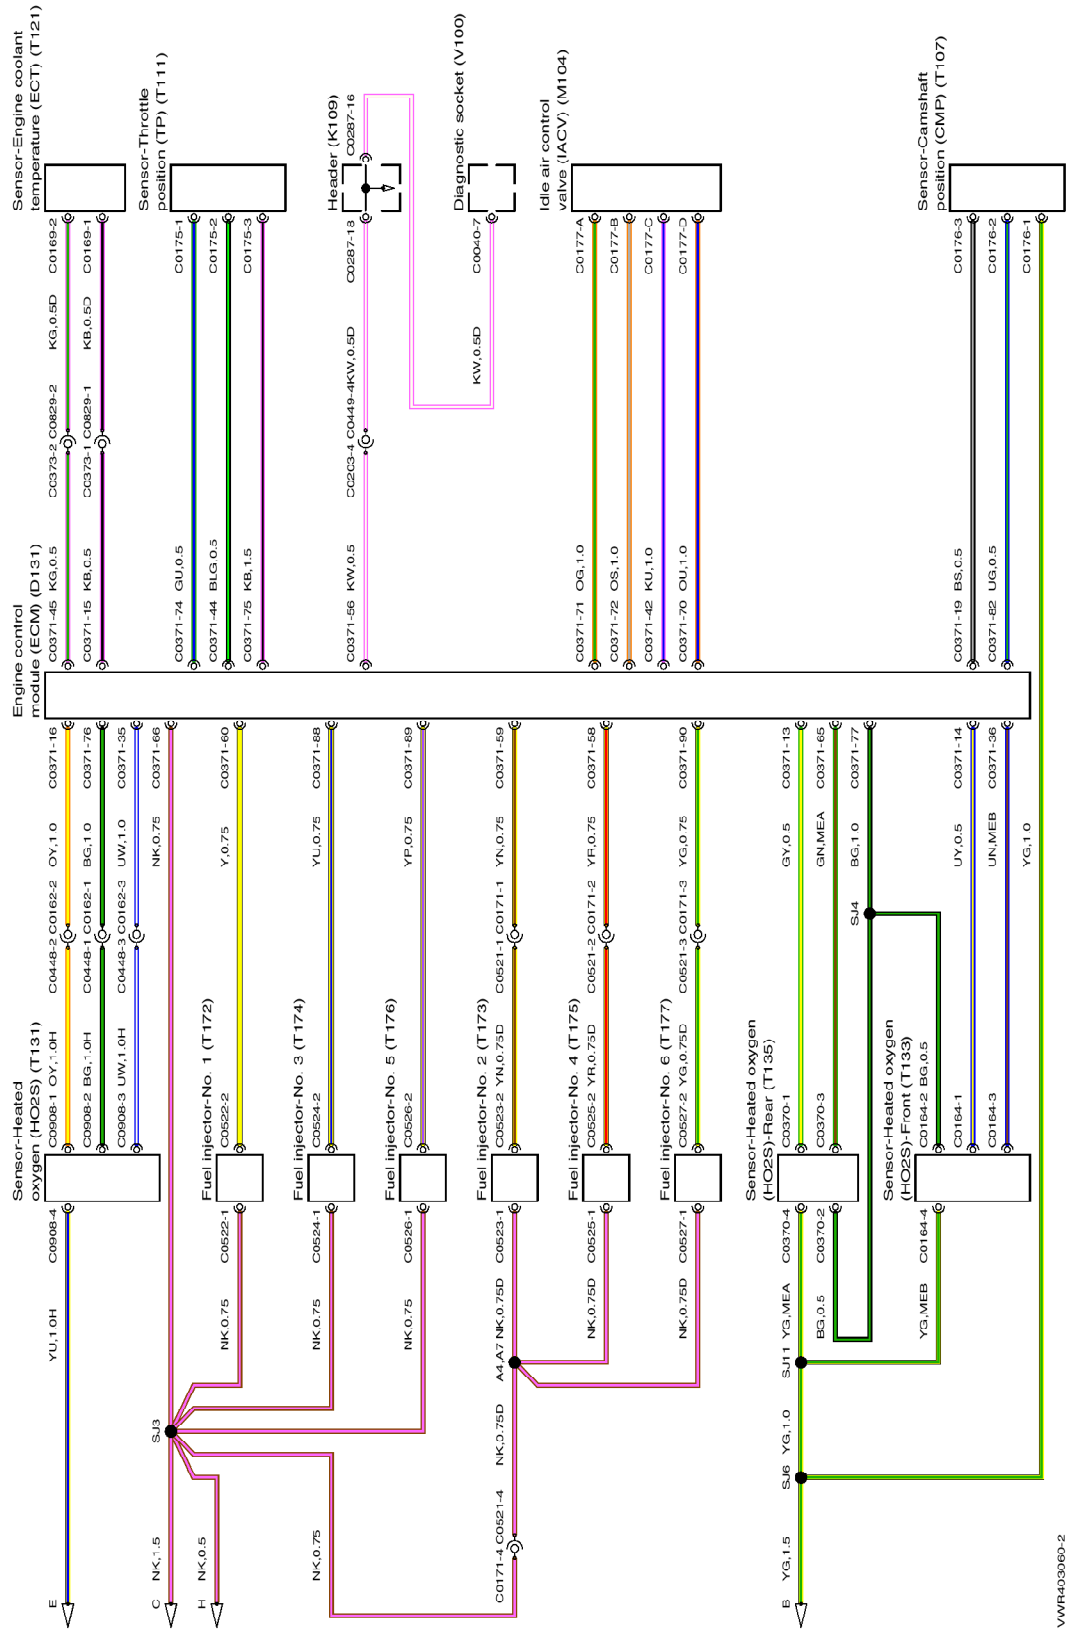


VWR403060-2

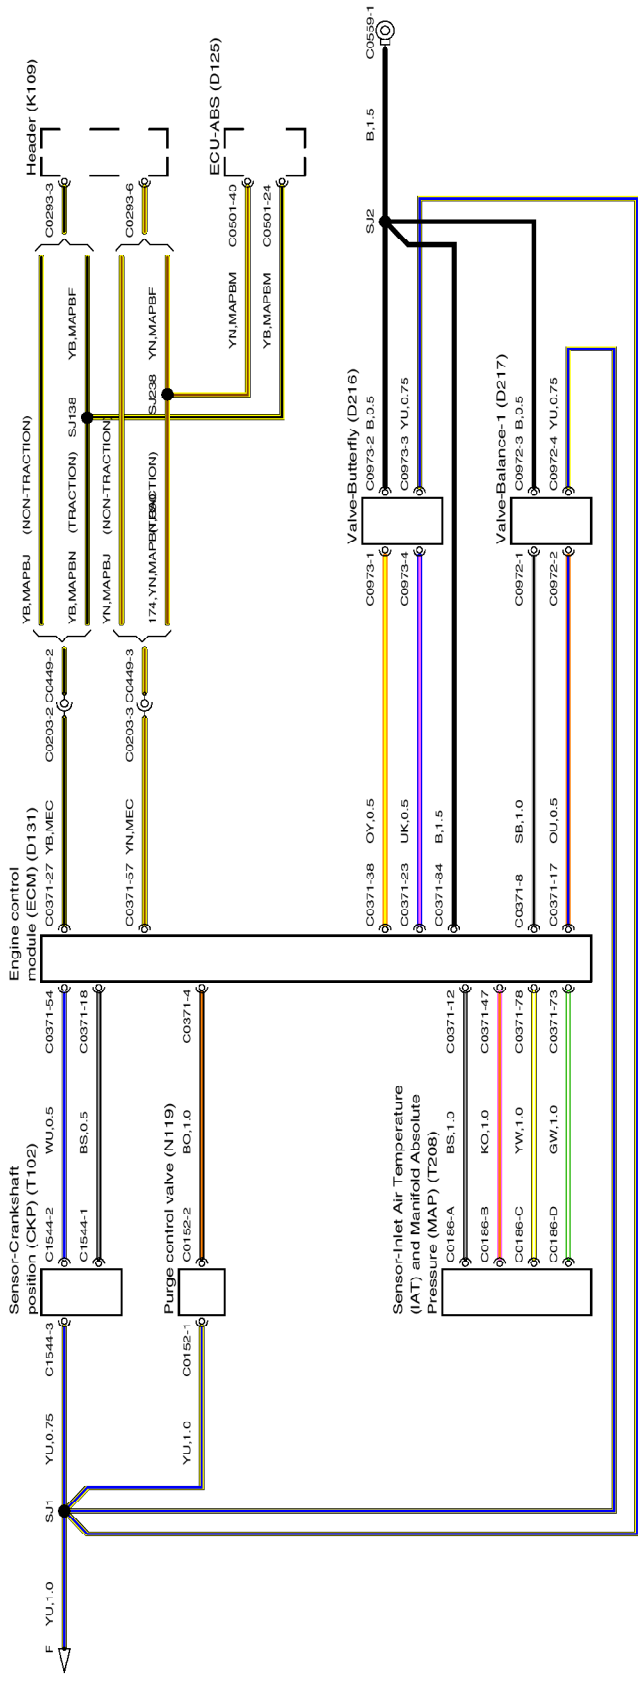


VWR403060-4

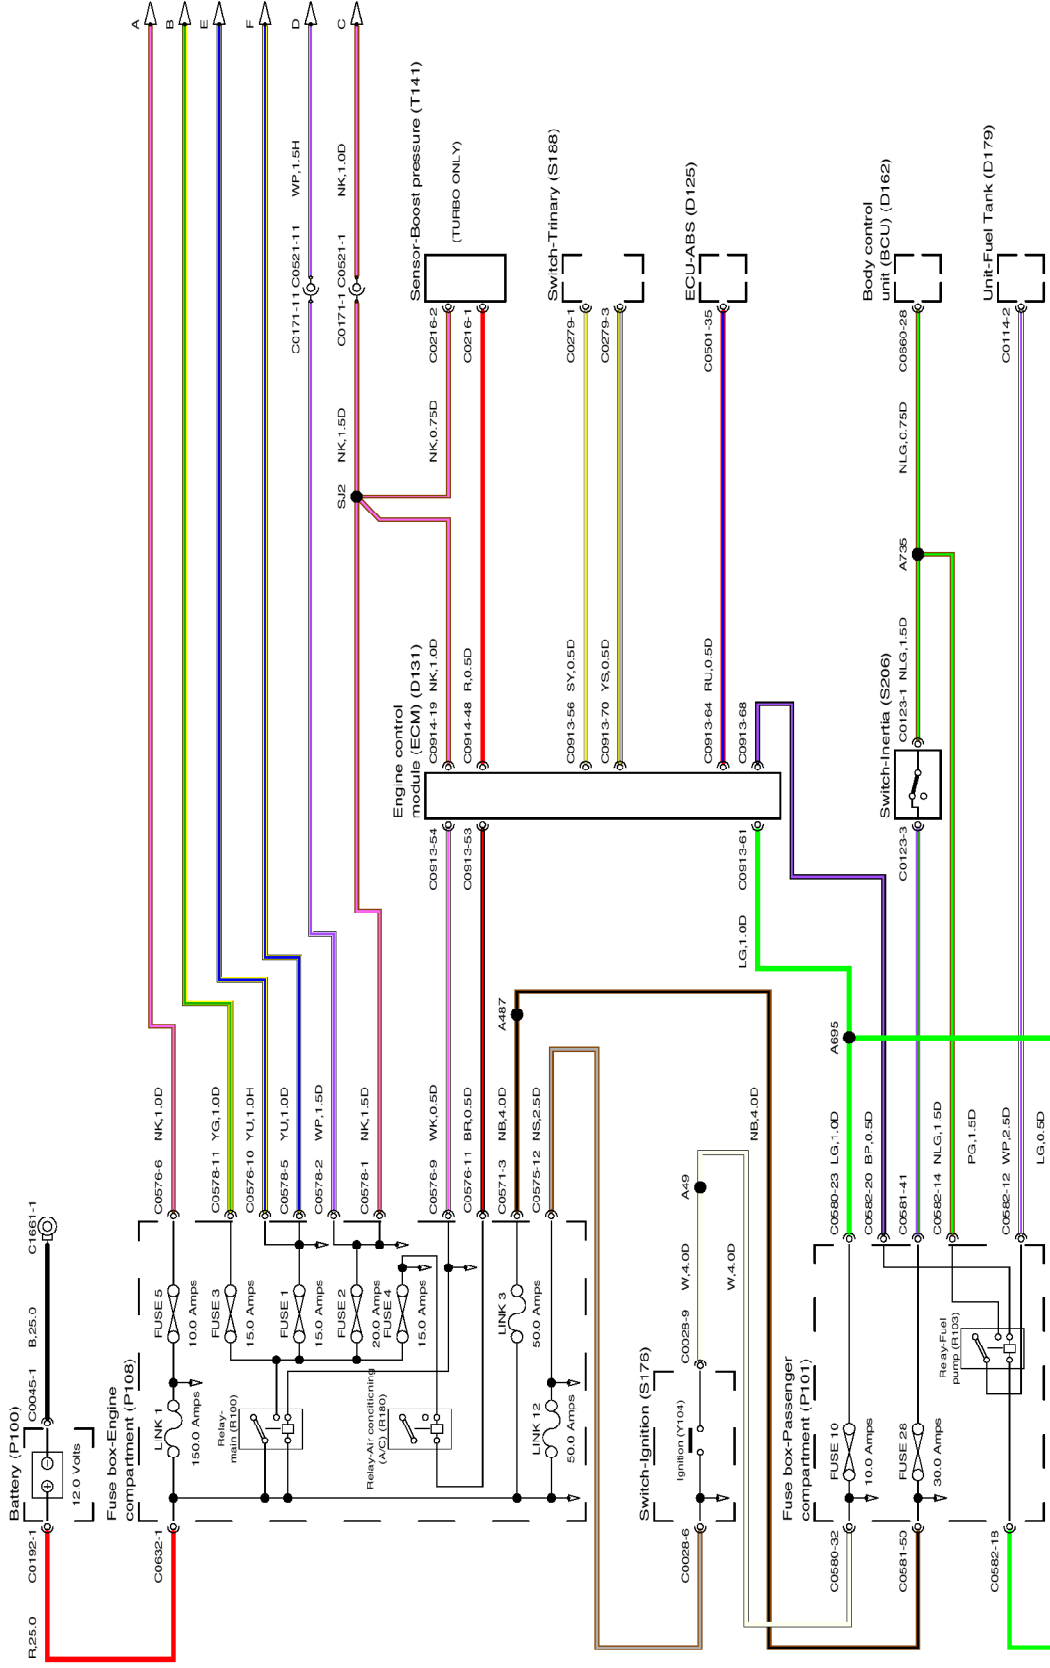


VWR403040-1

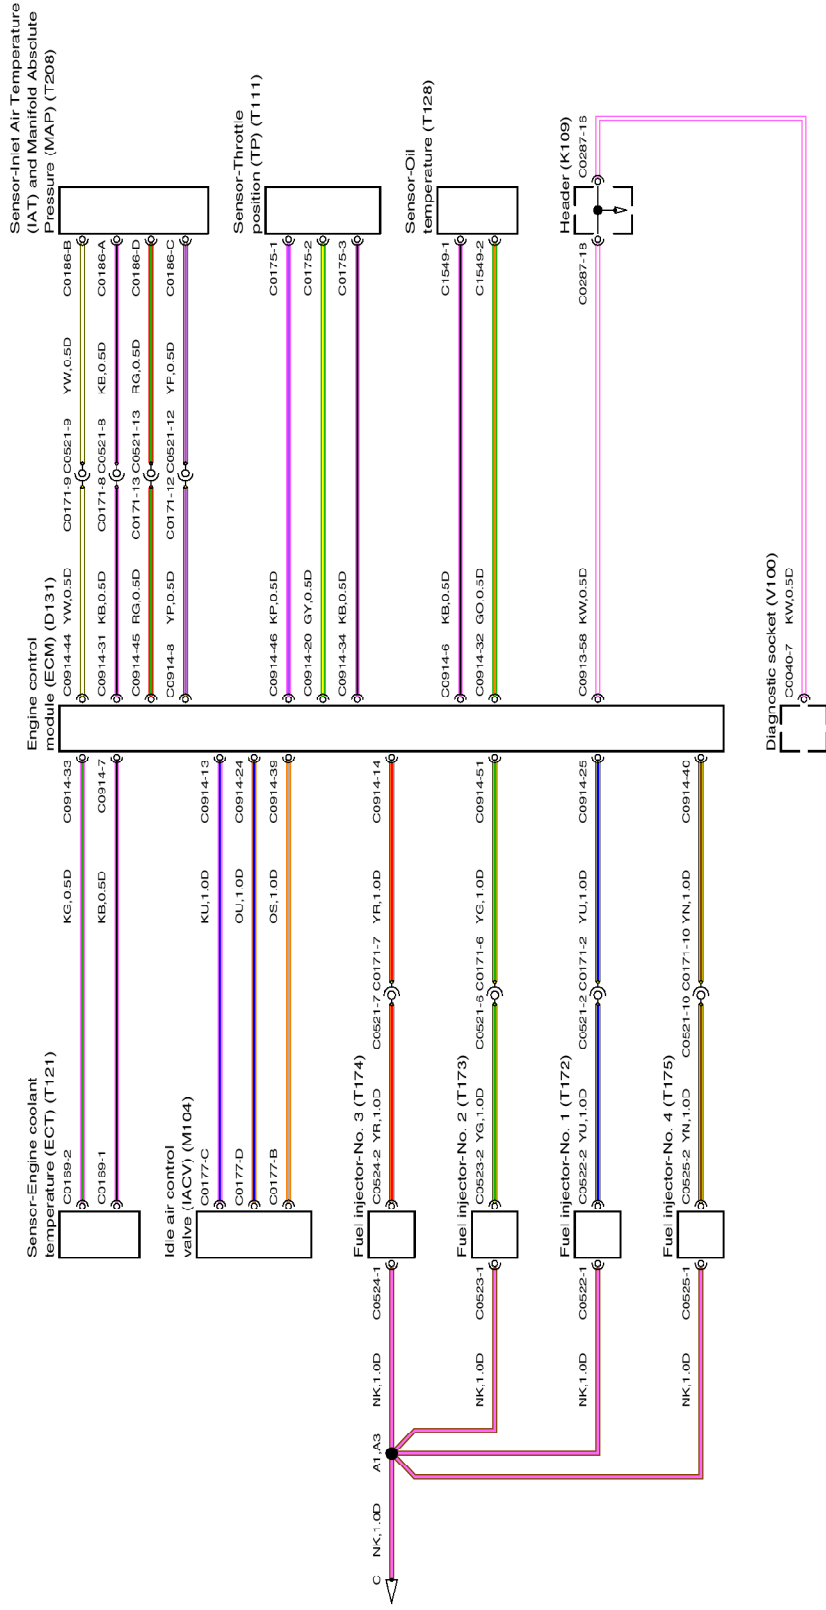


VWR403040-3

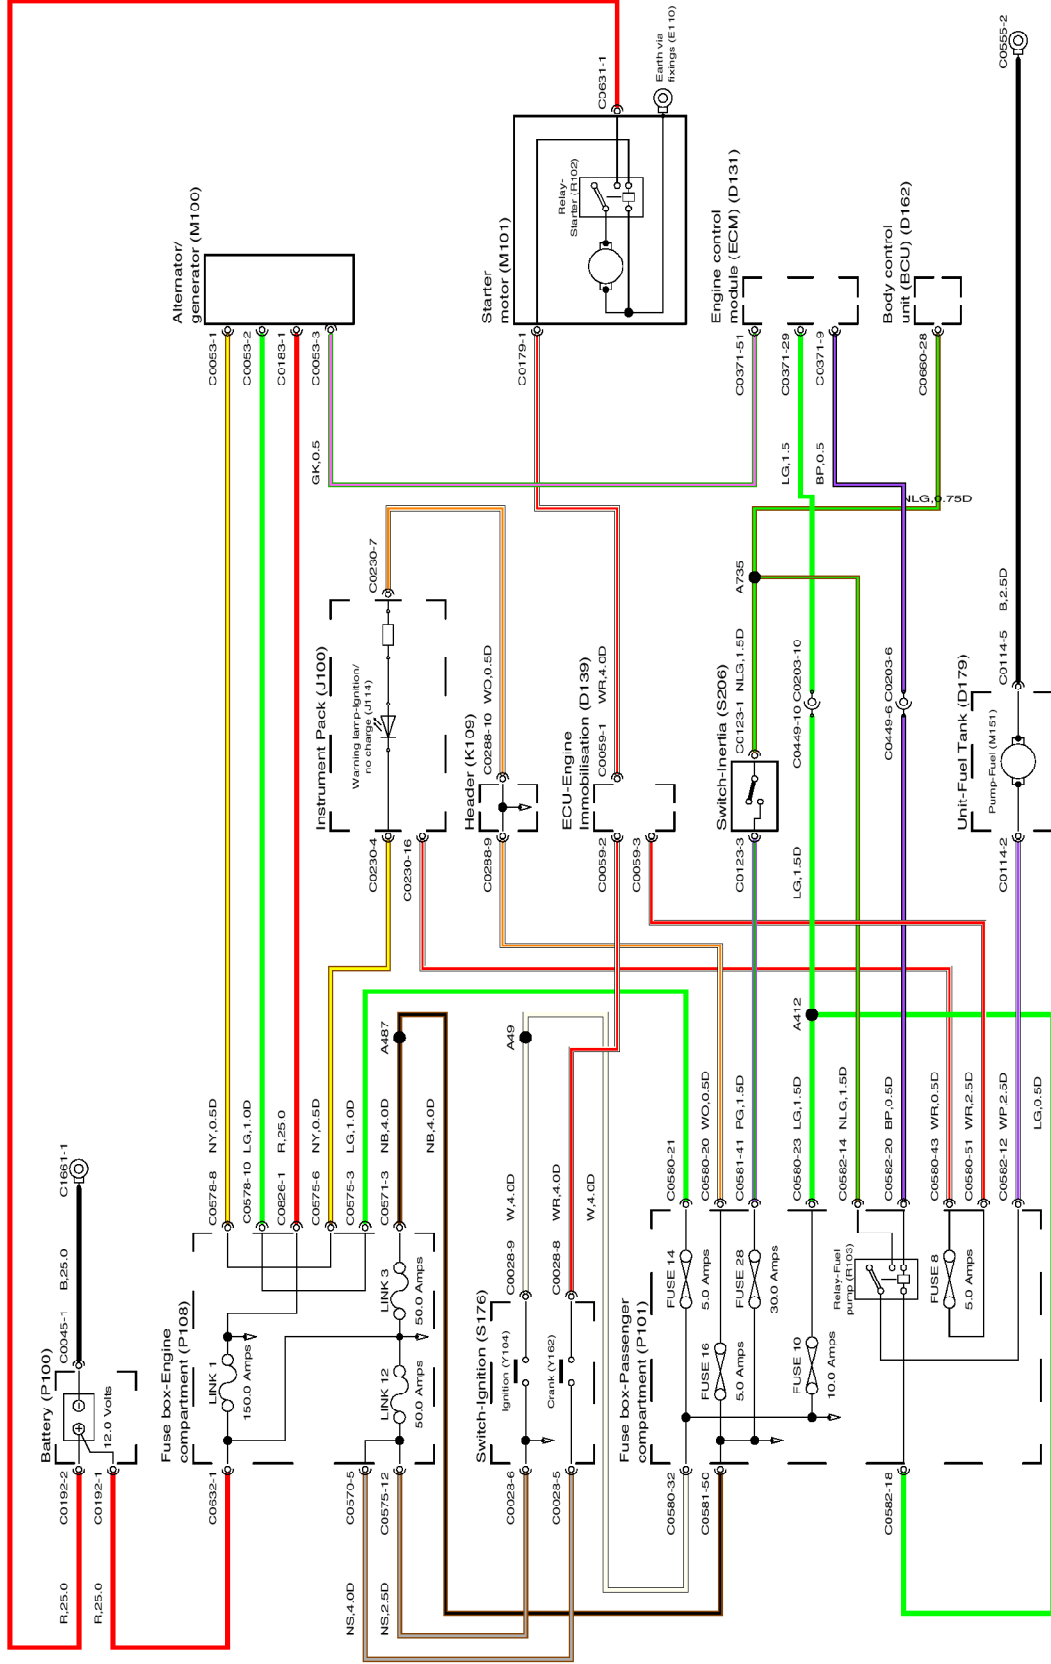

VWR403980-1

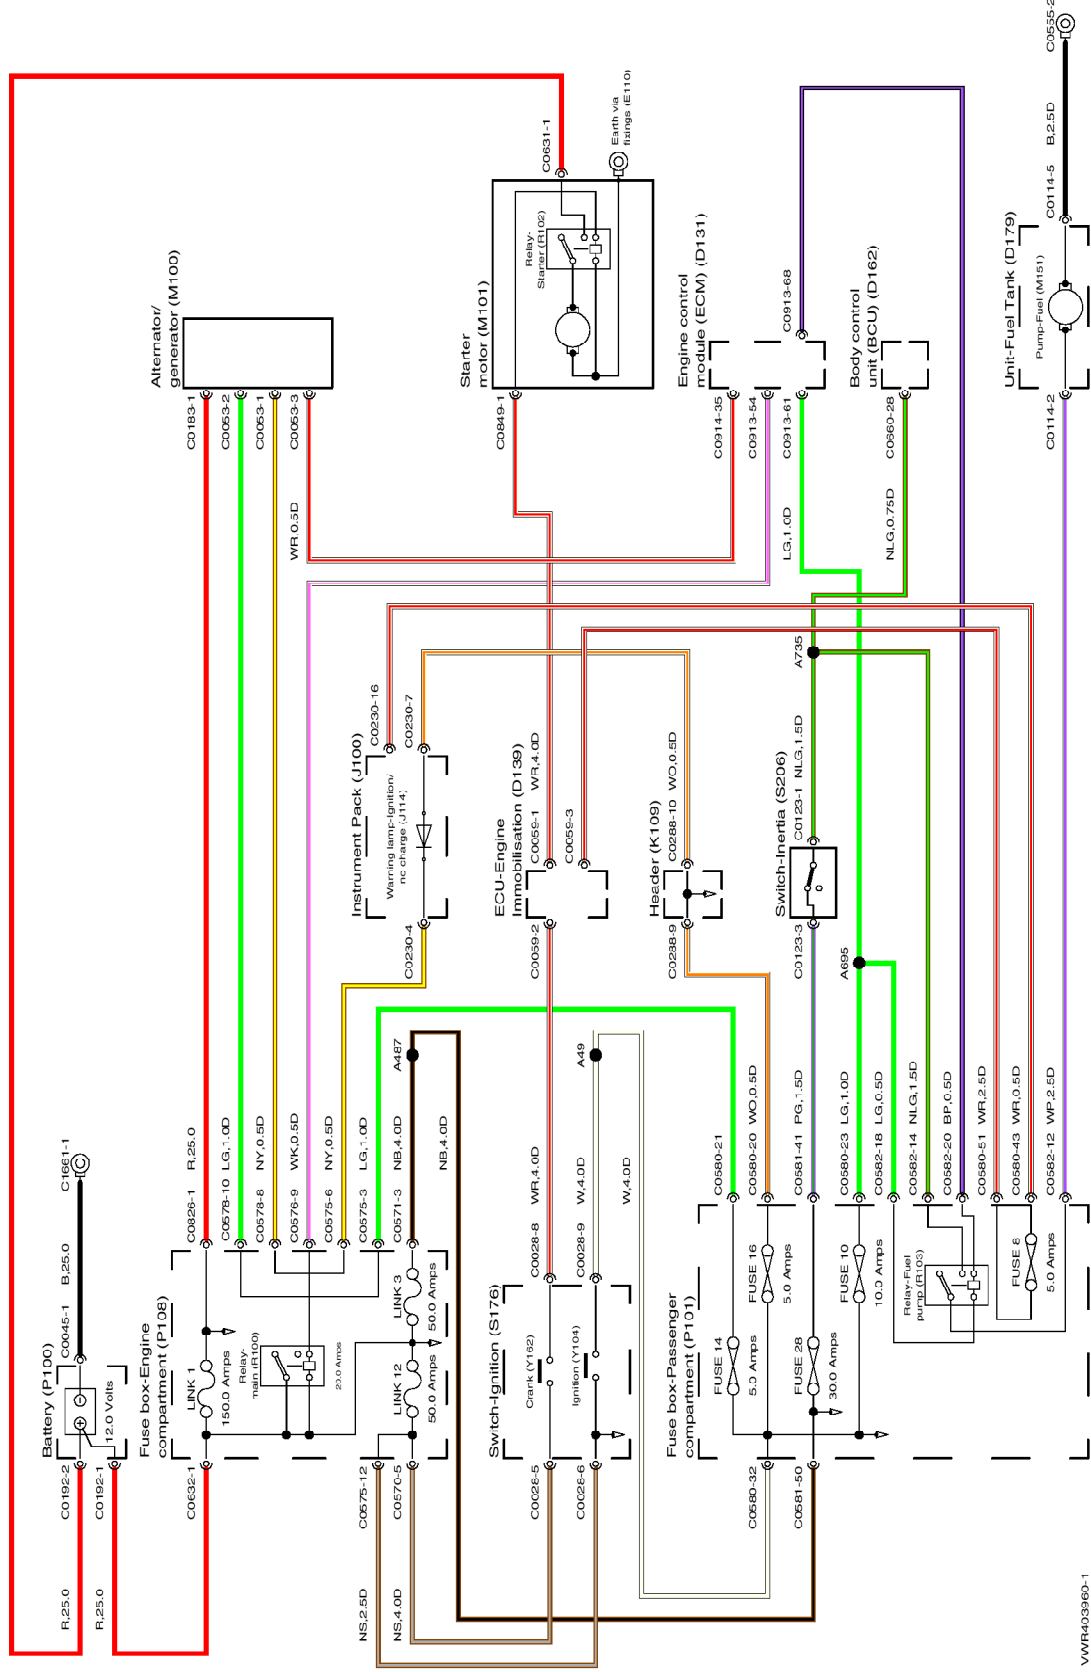


VWR403960-1

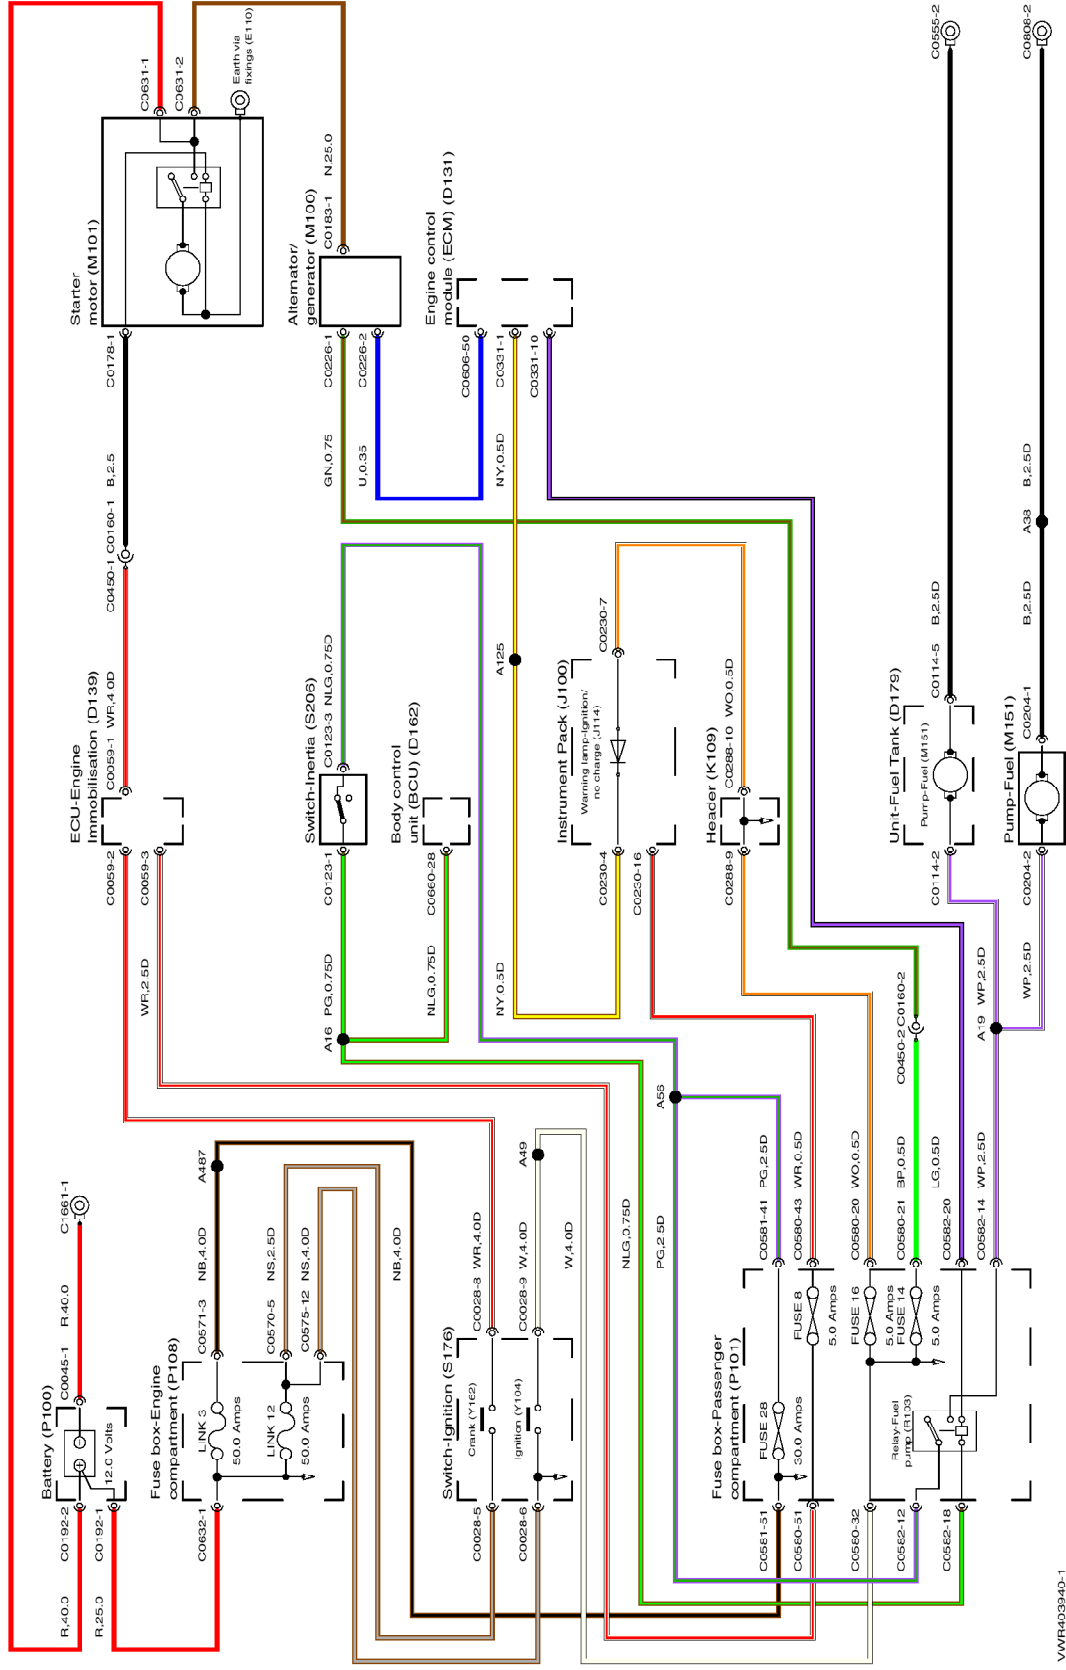


VWR403940-1


20 FUEL PUMP

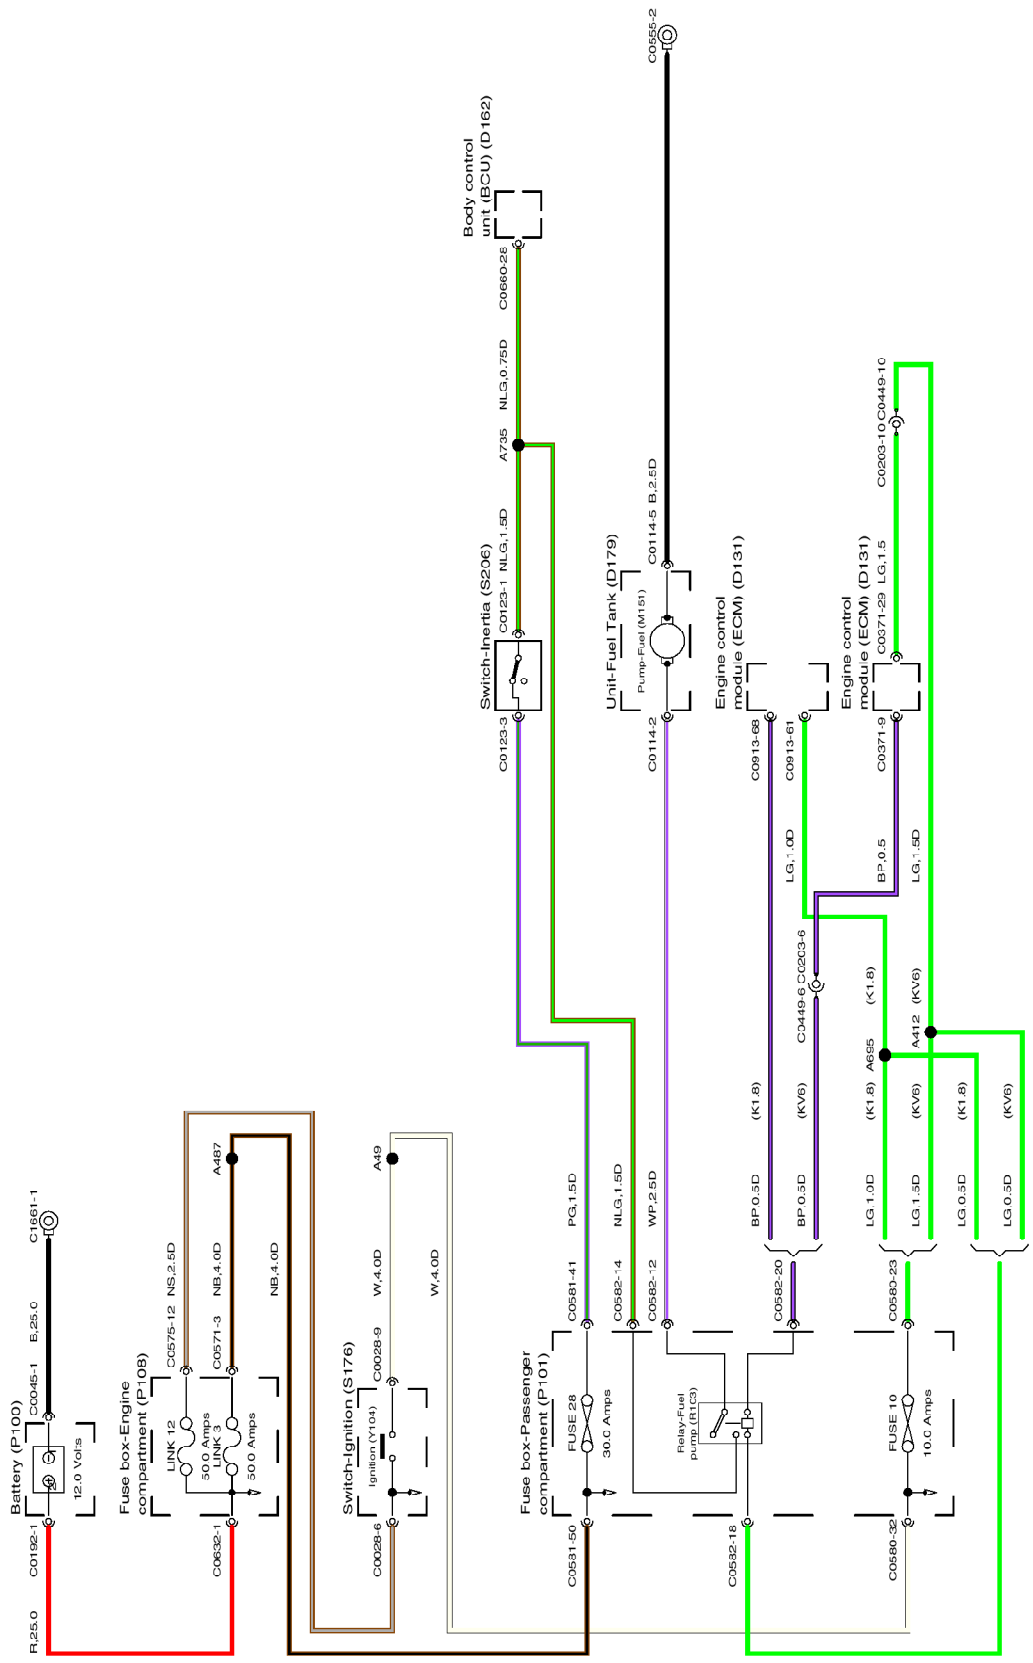


VWR403160-1

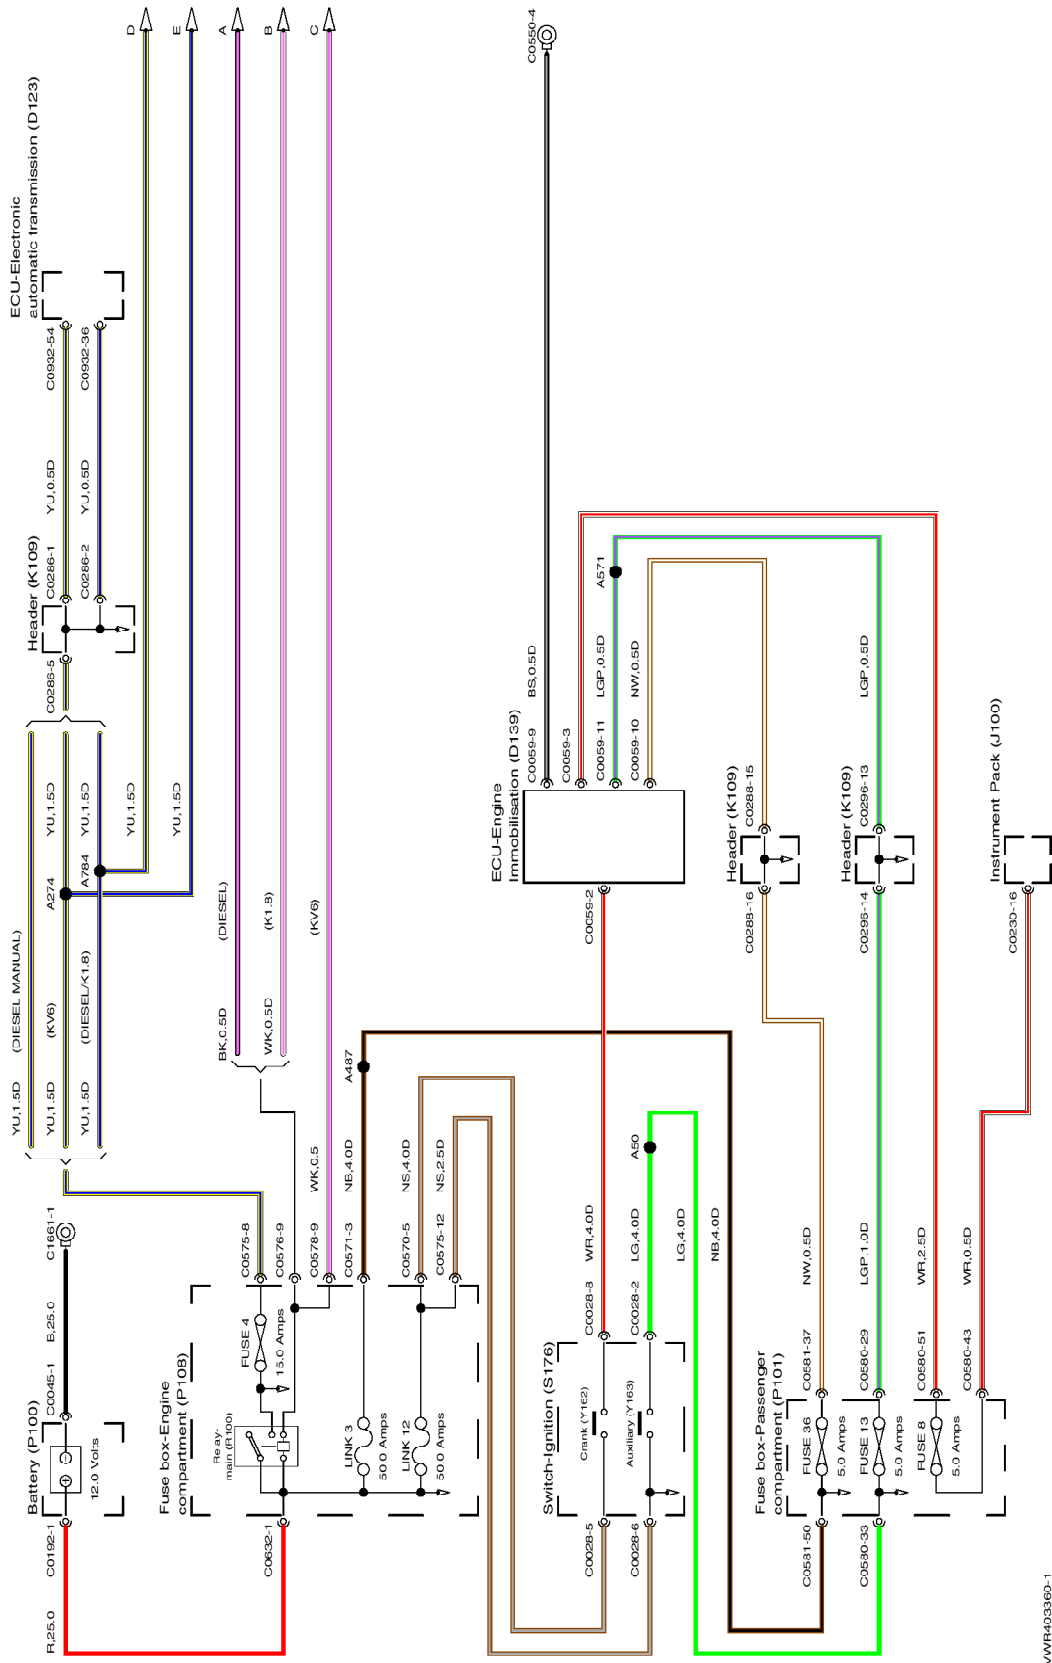


VWR403360-1

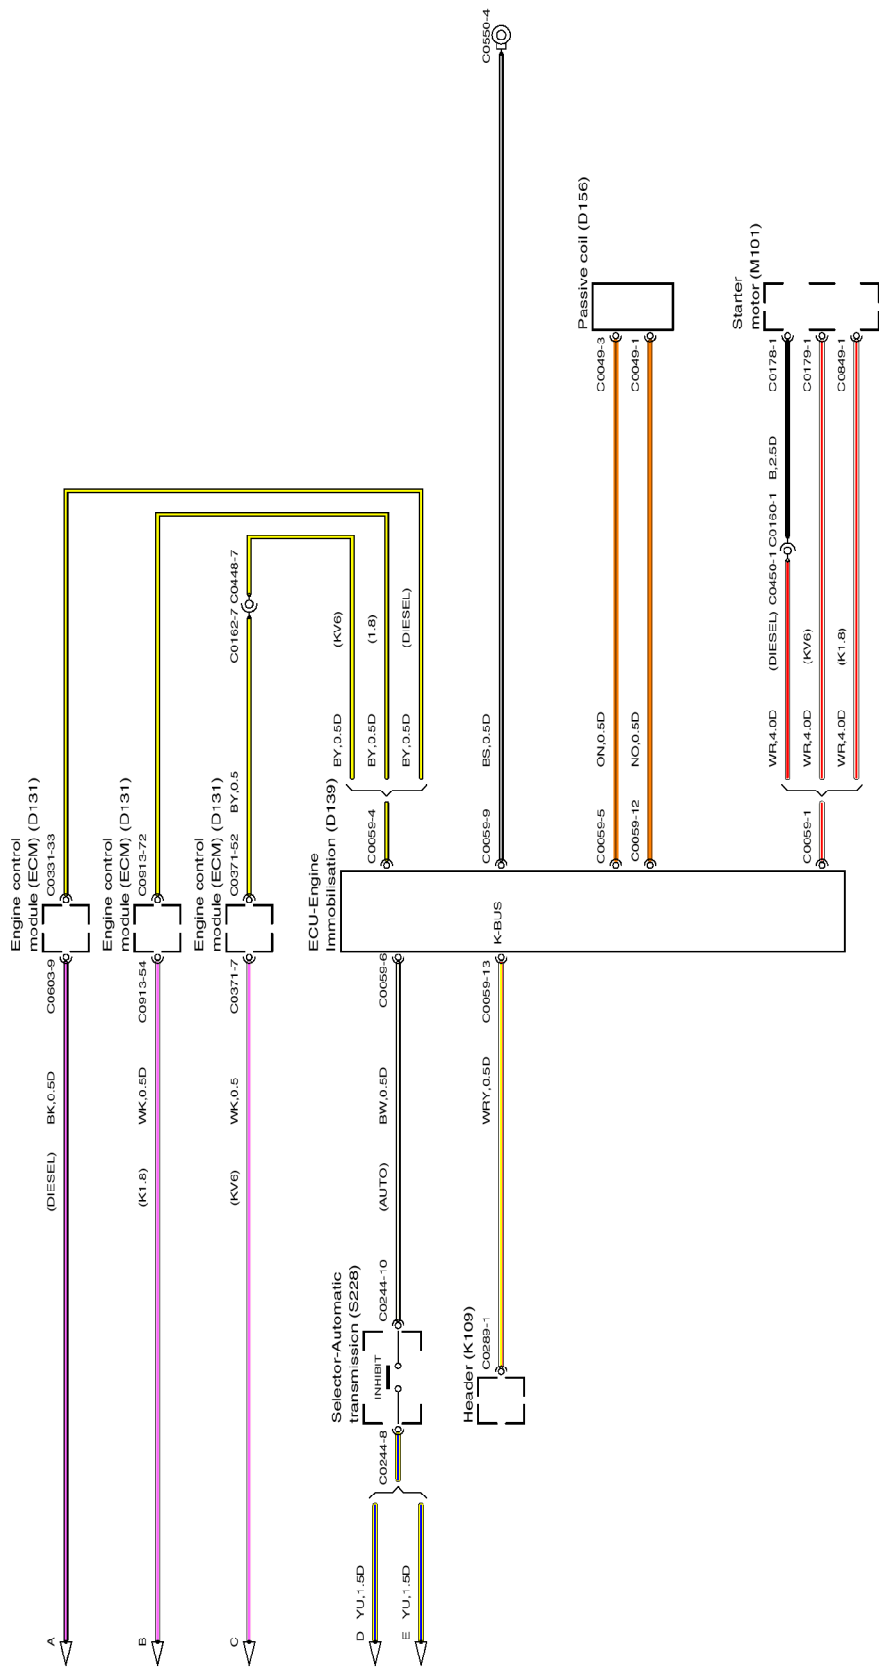


VWR403360-2

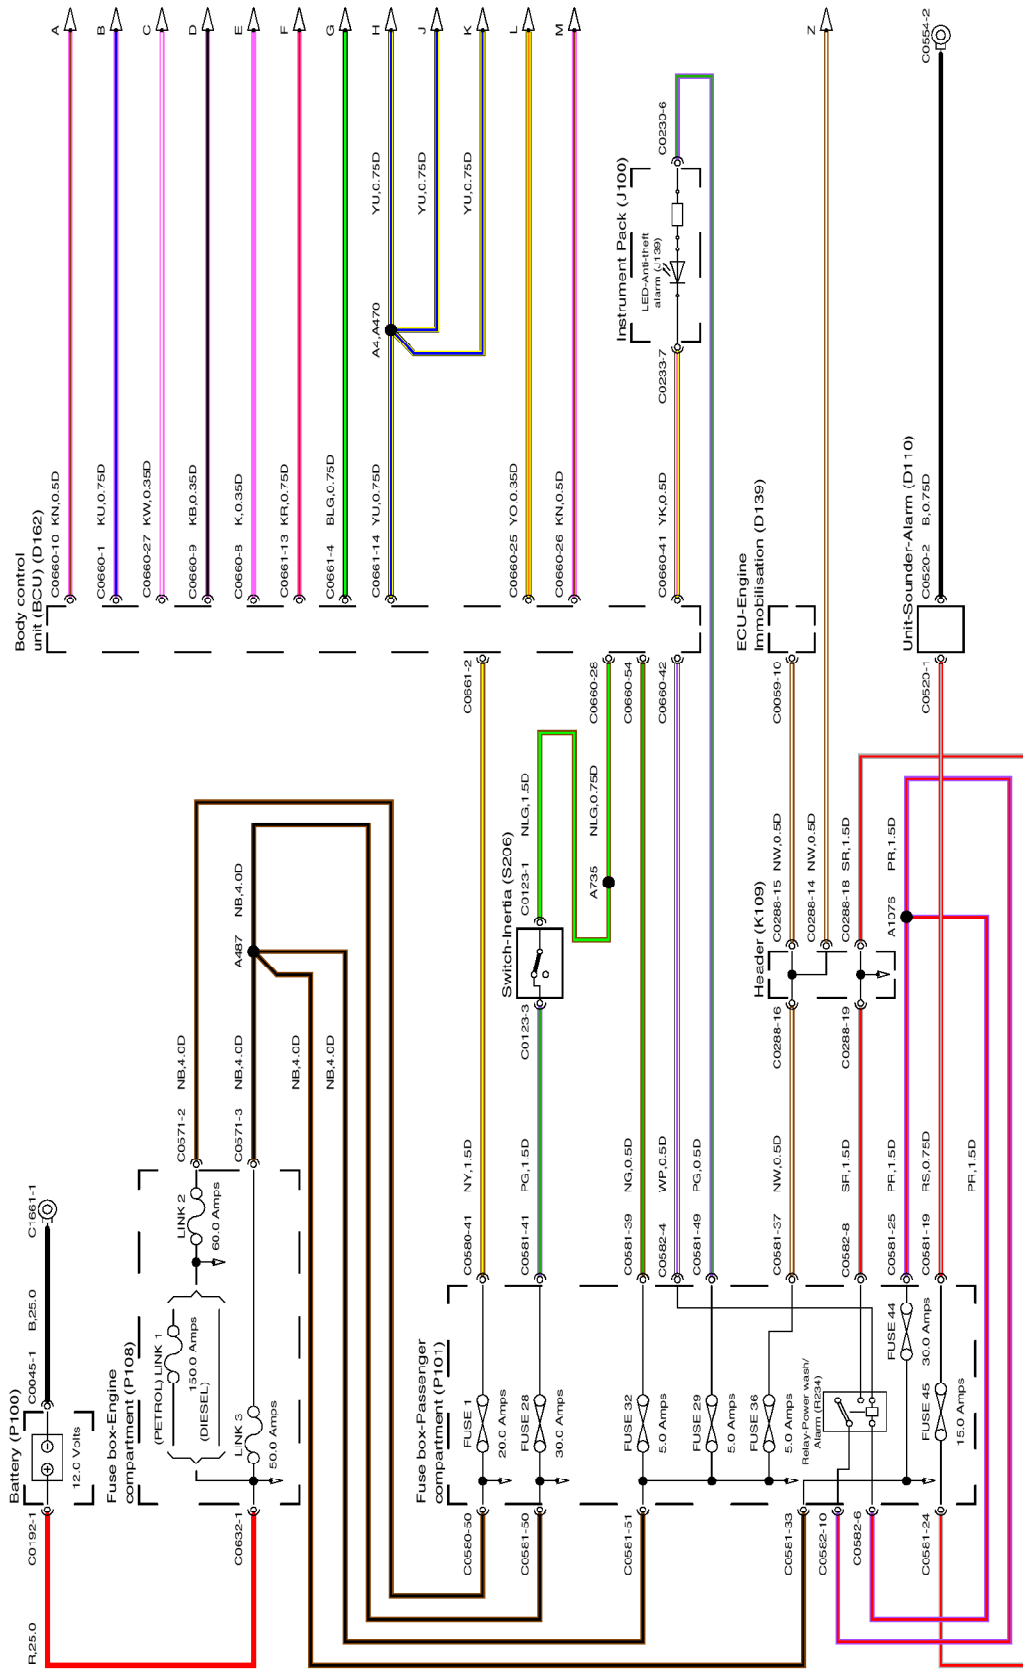


VWR402780-1

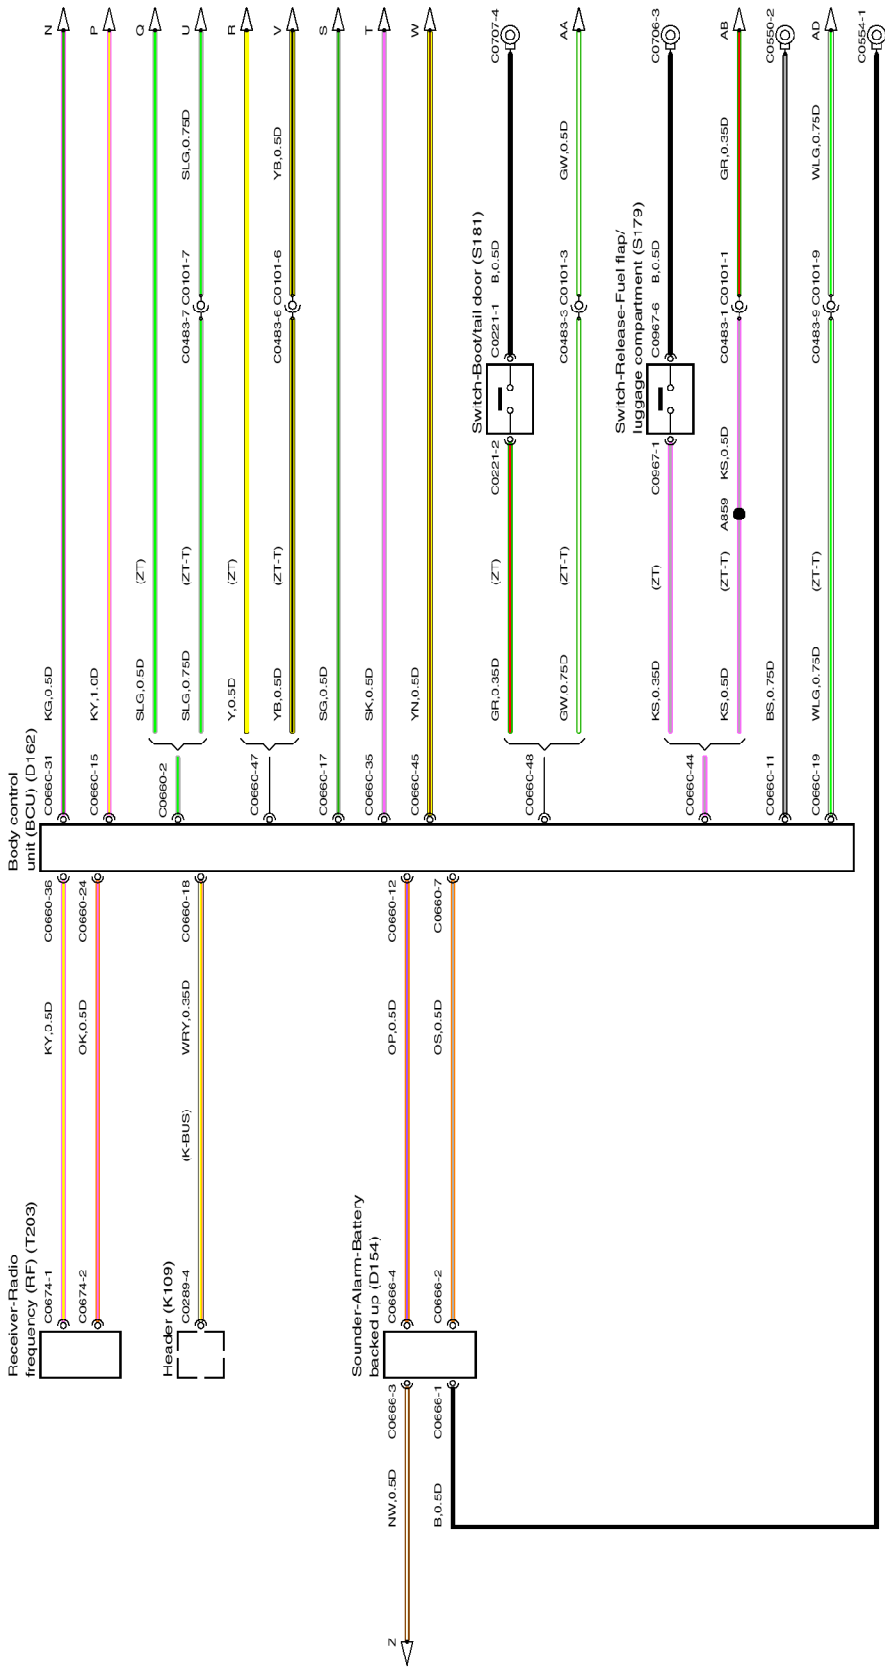


VWR402780-2

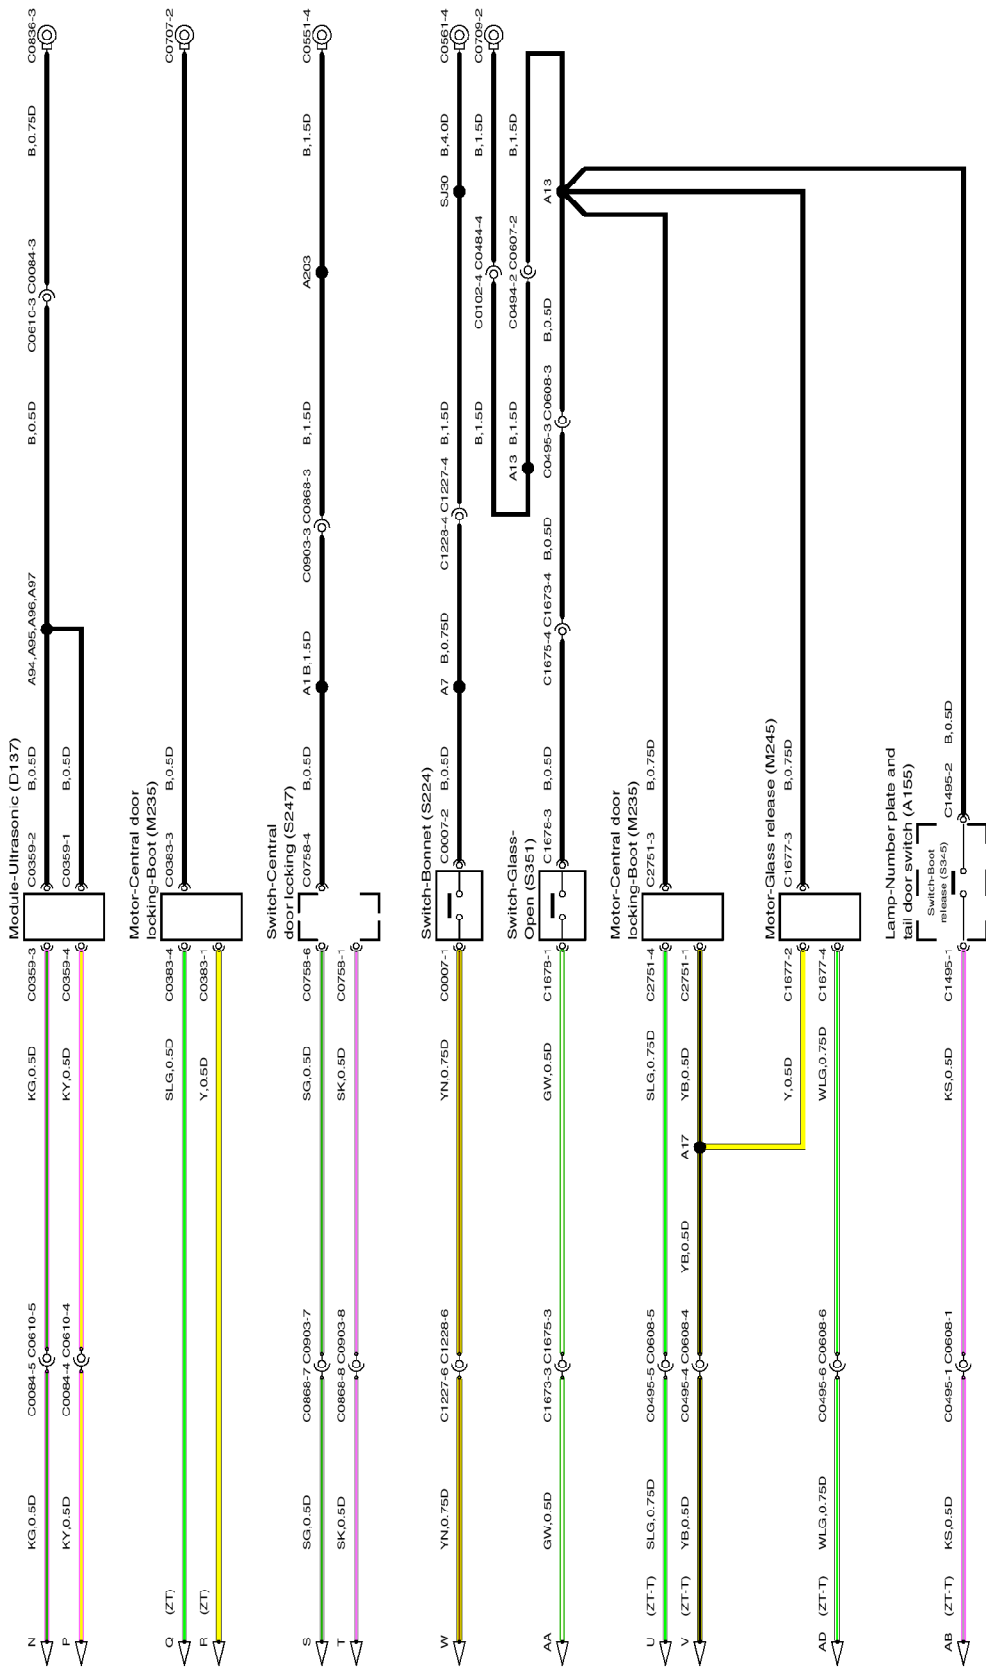


VWR402780-3

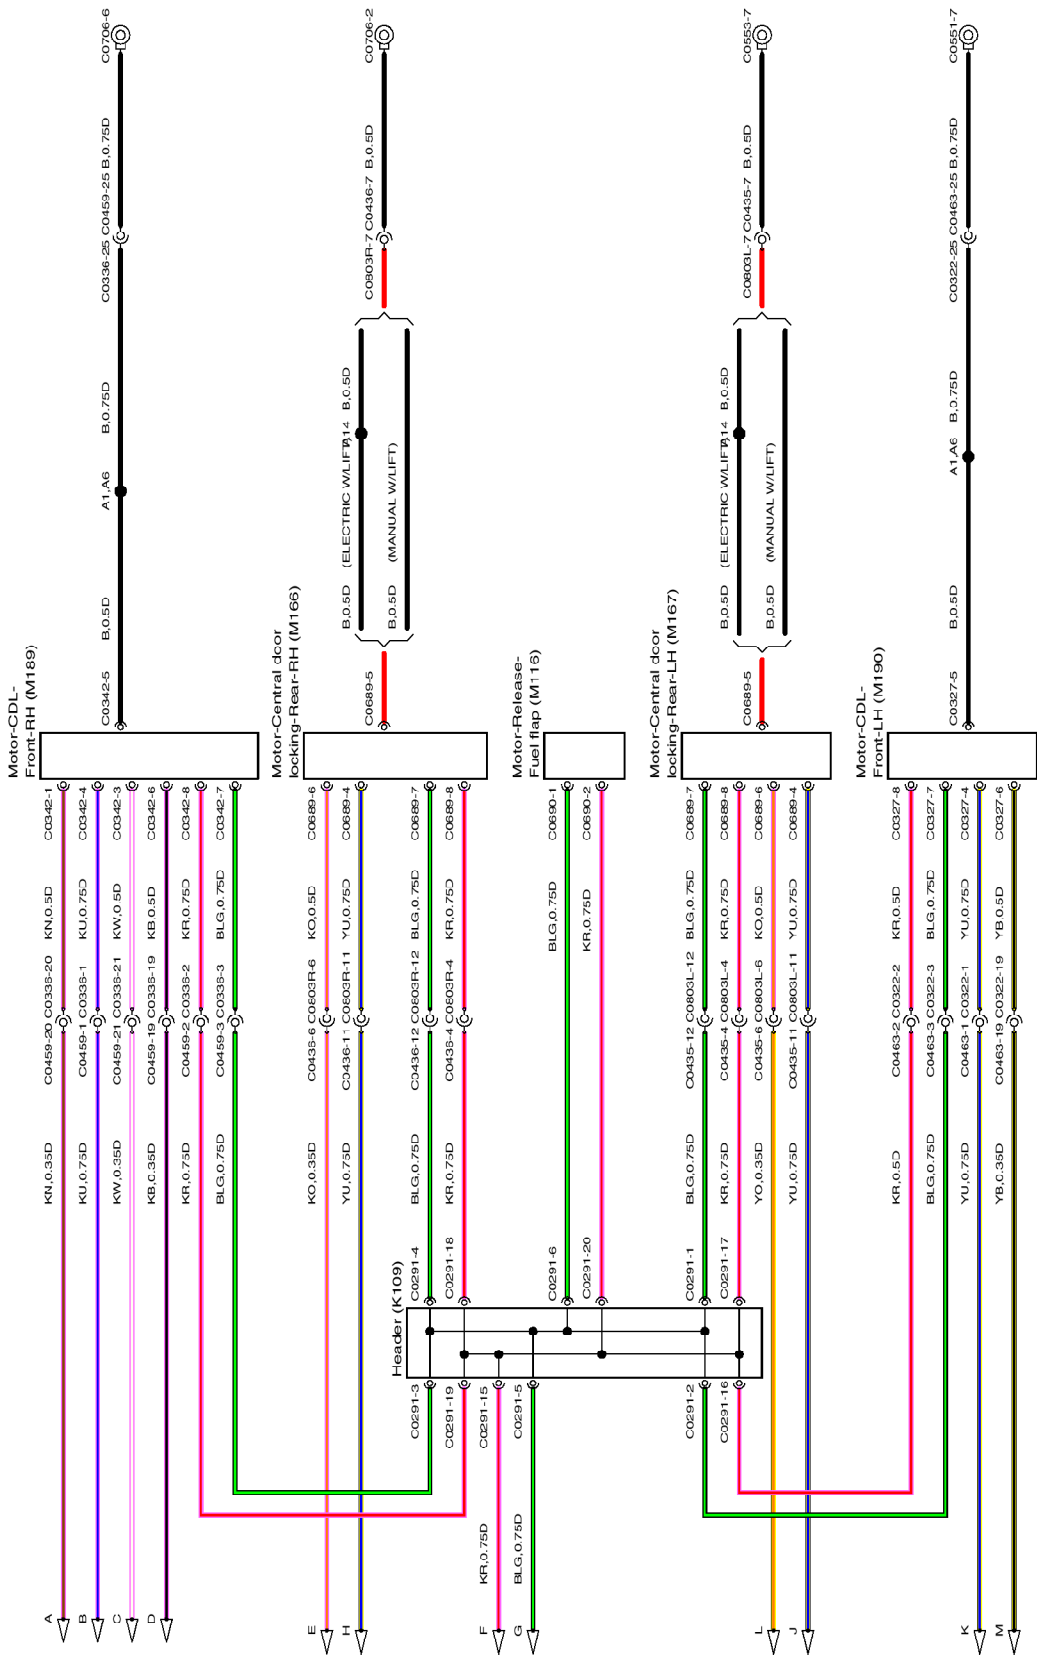


VWR402780-4

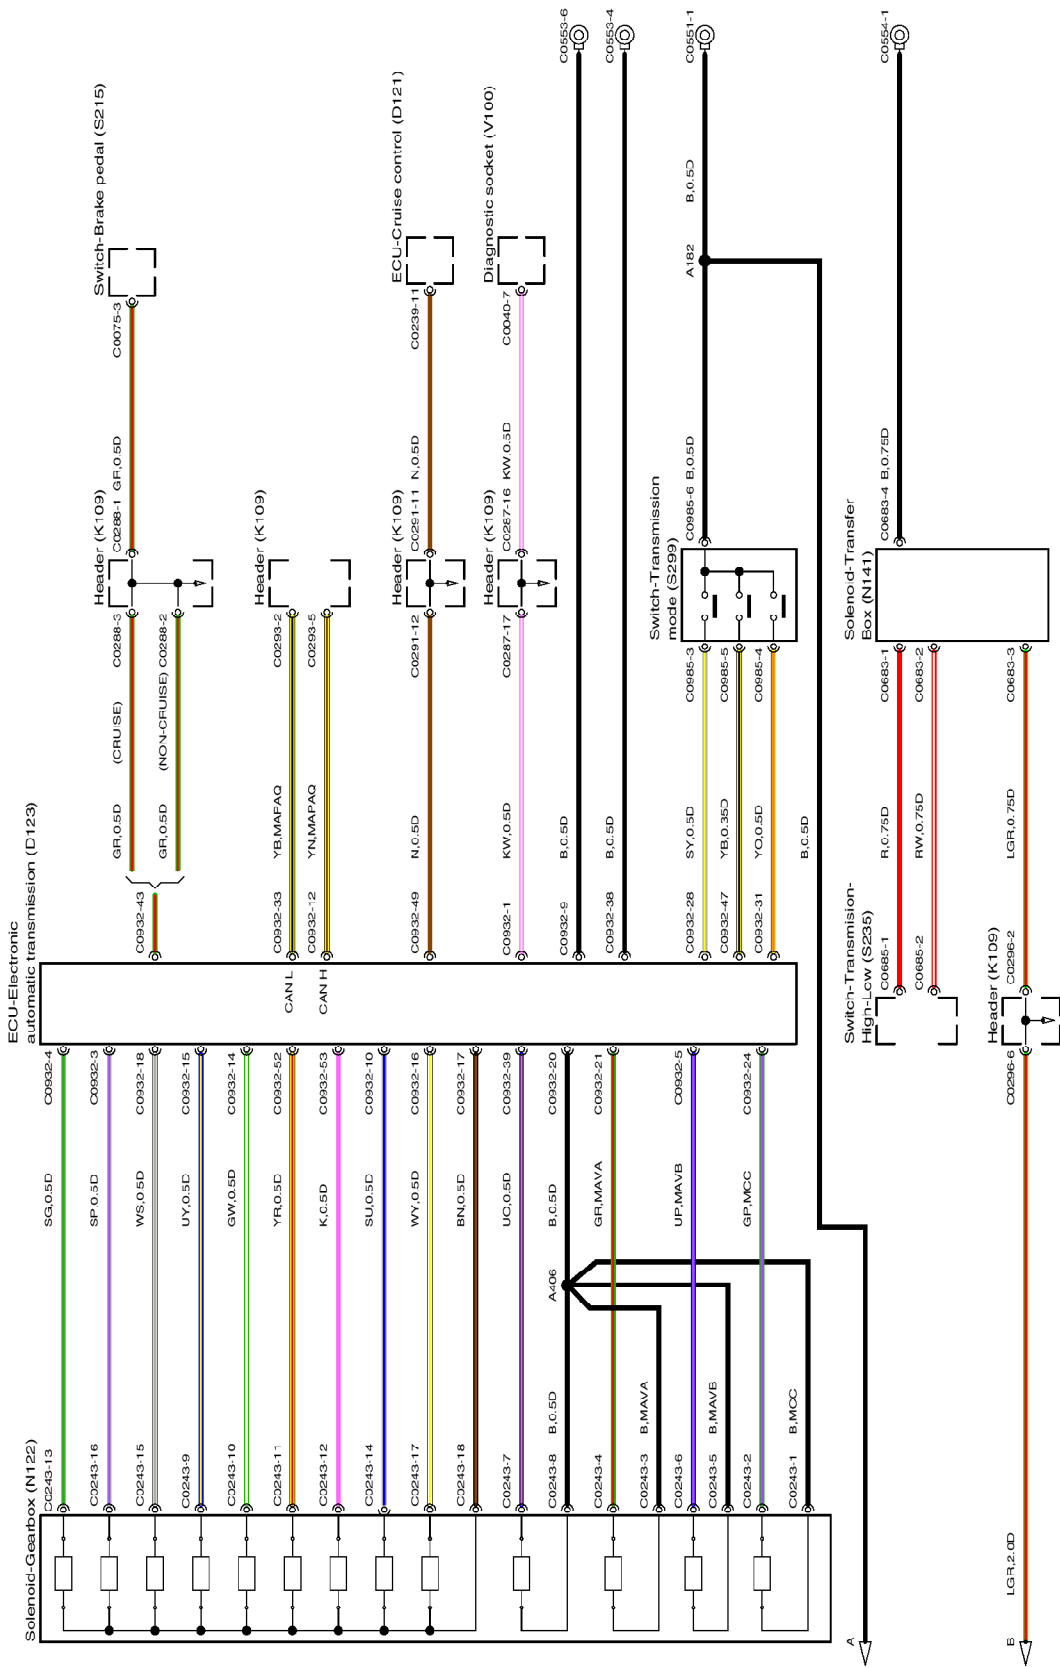


VWFR404090-2

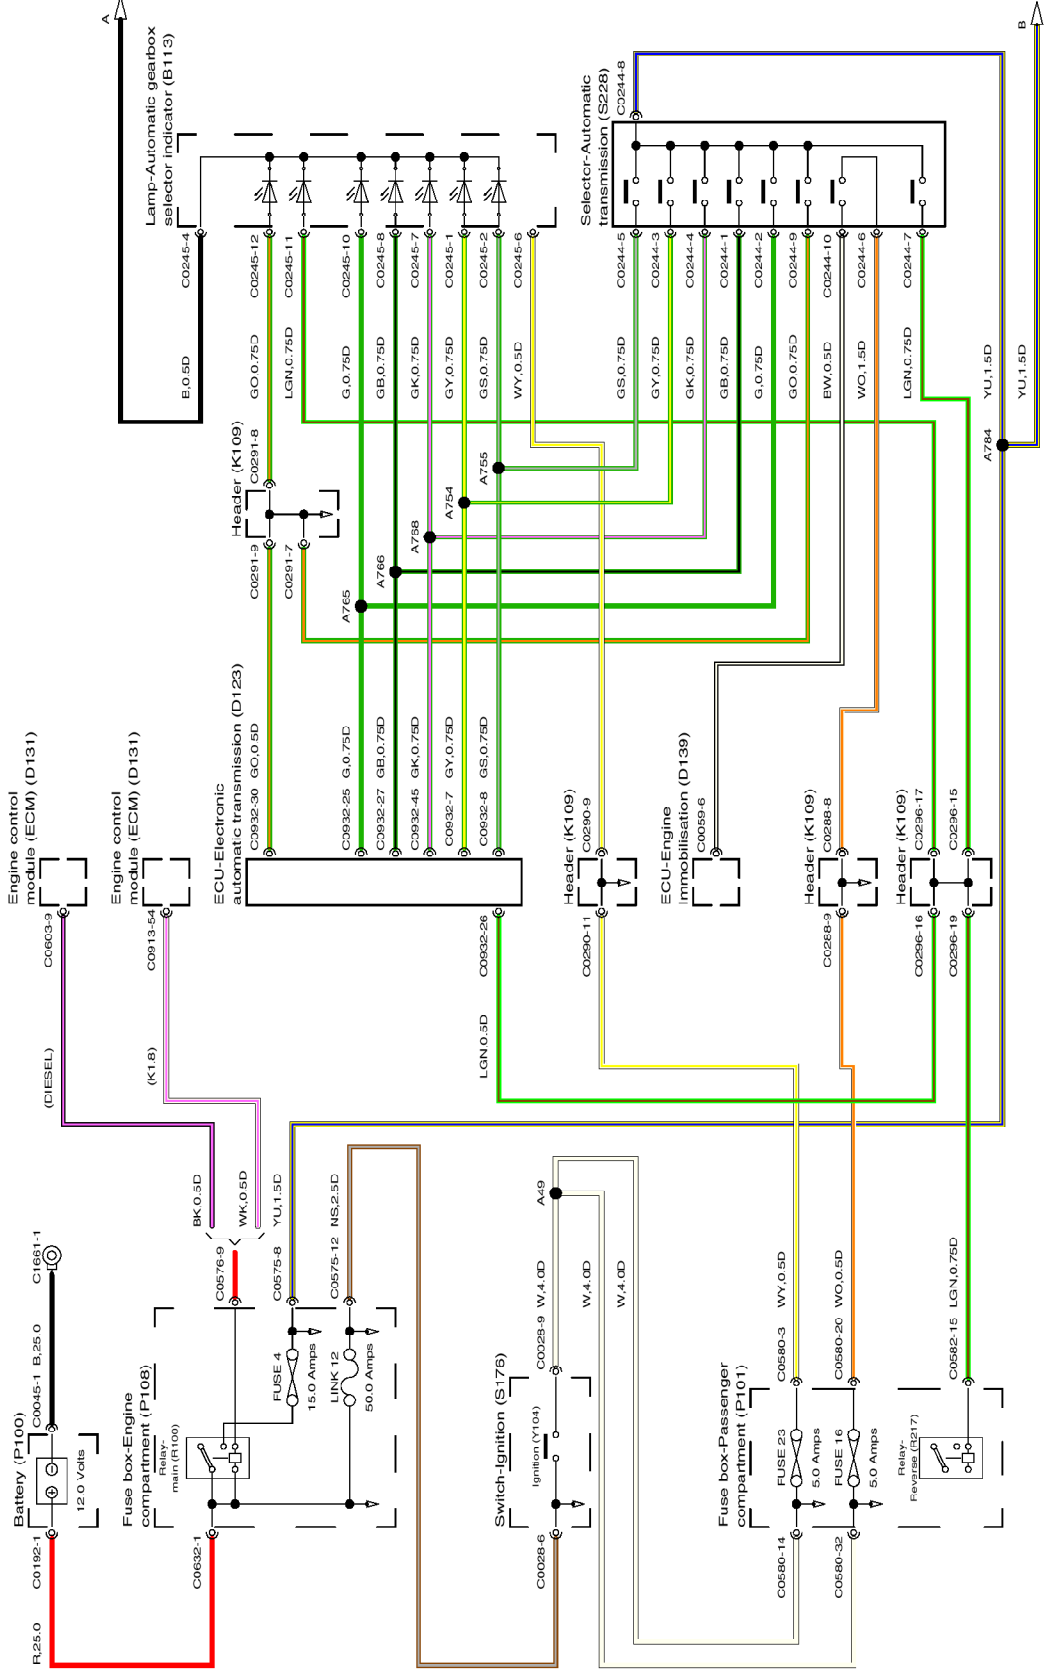


VWVR404090-1

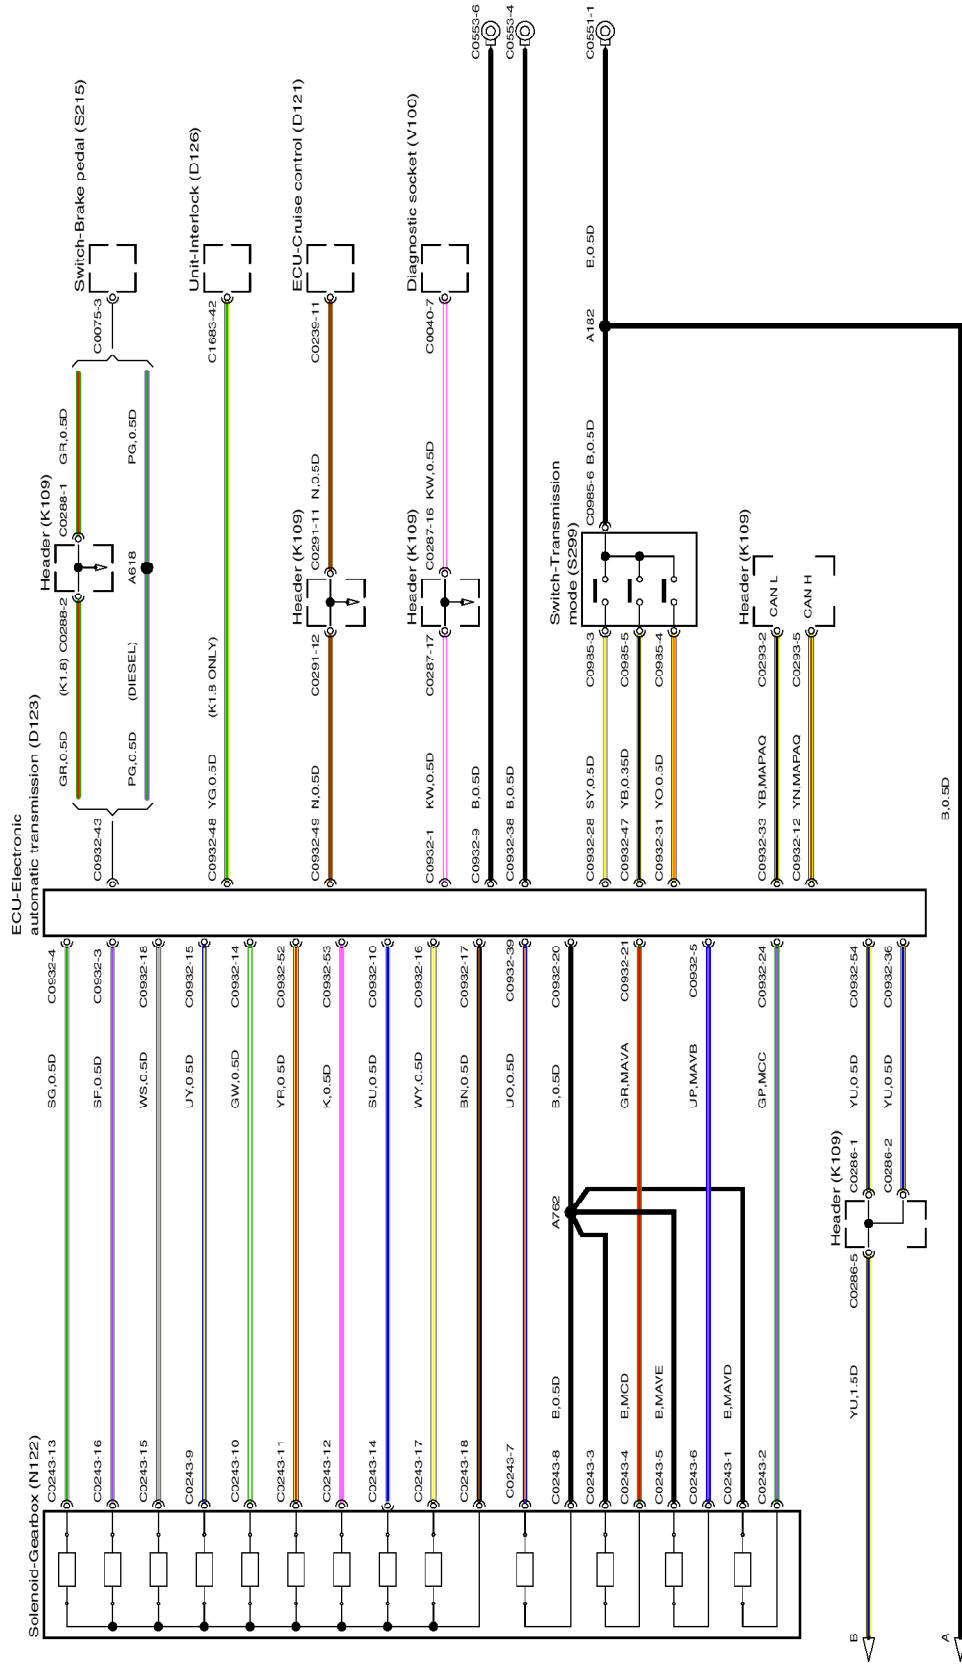


VWR404060-2

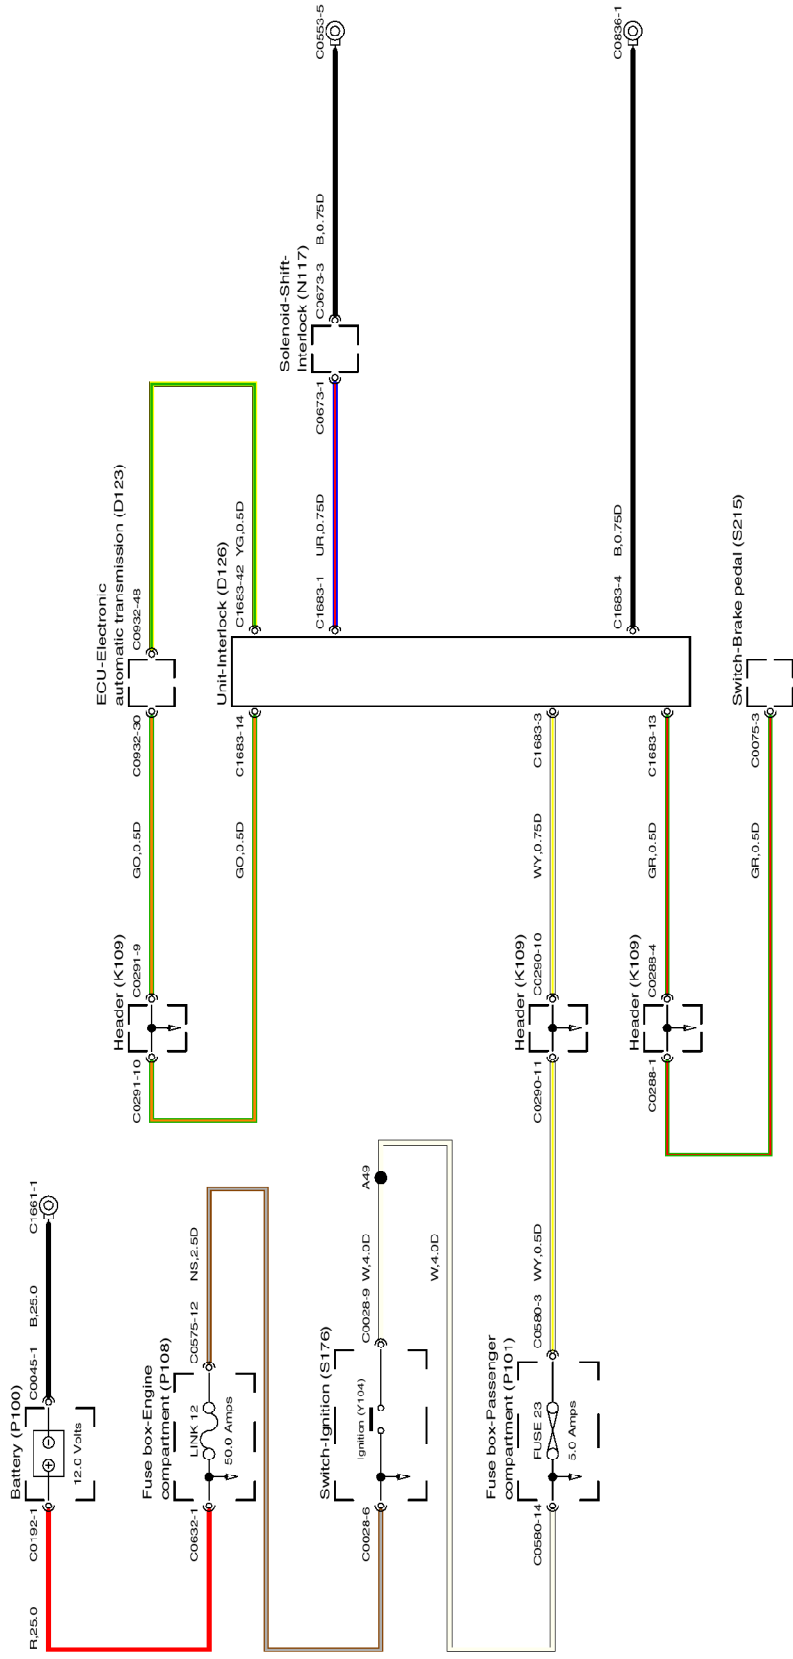


VWR403860-1

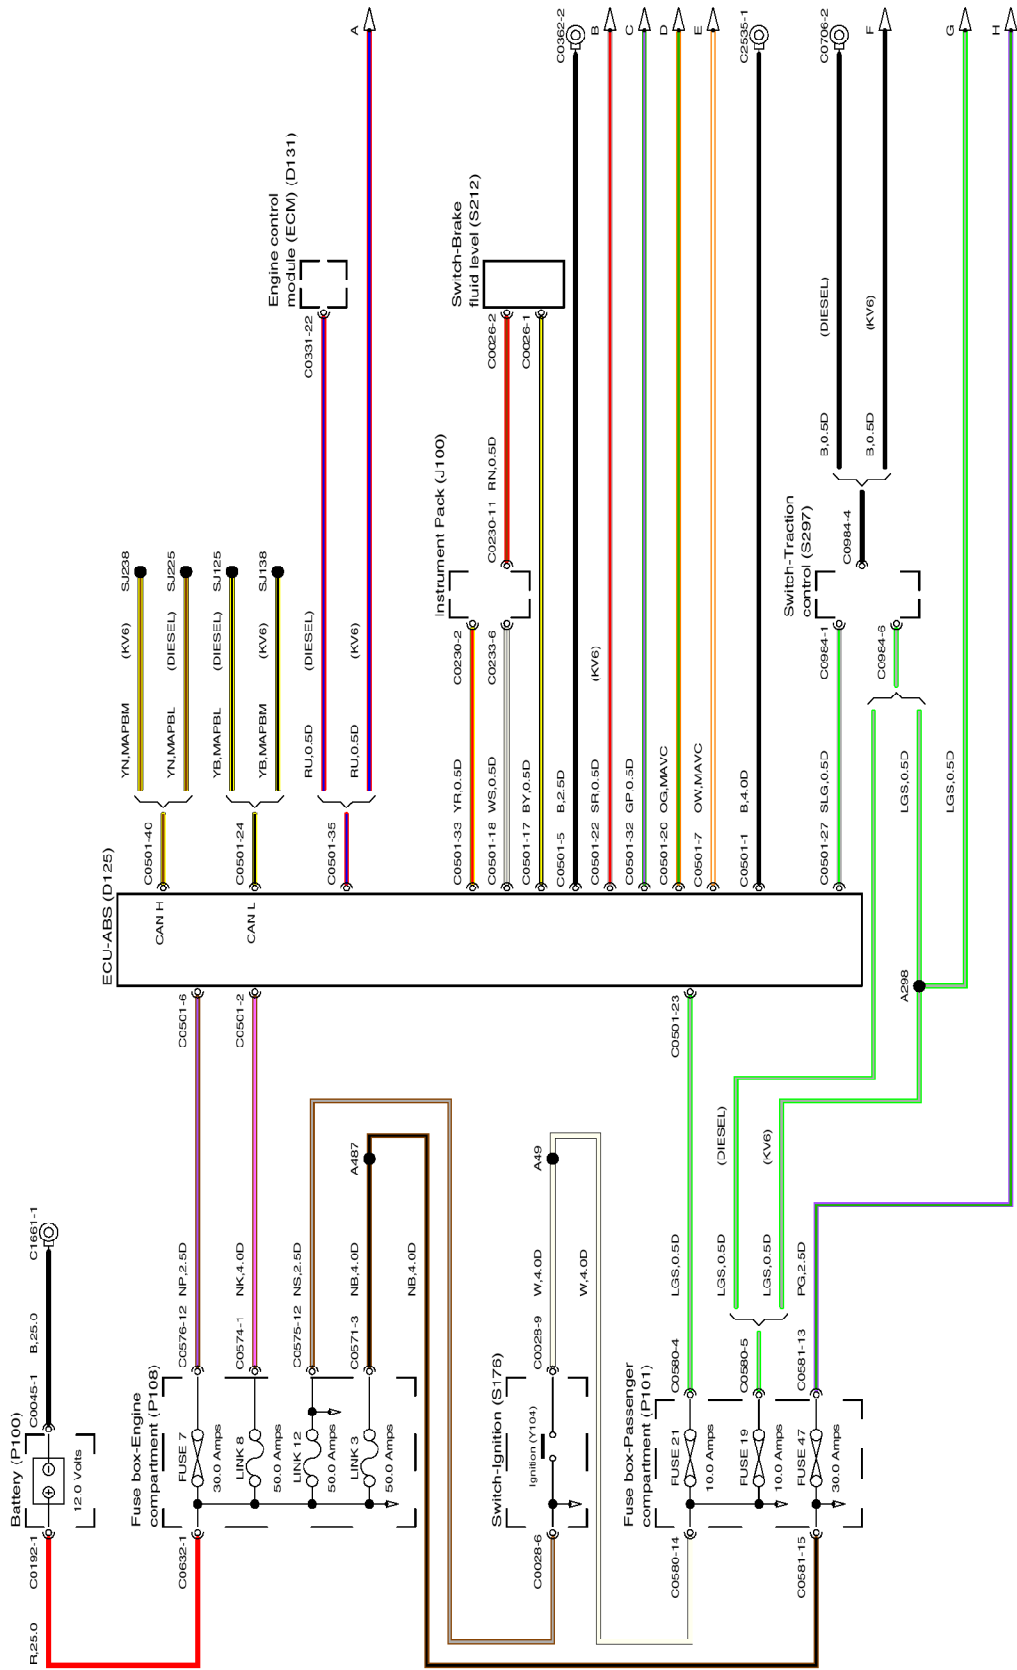


VWR402700-1

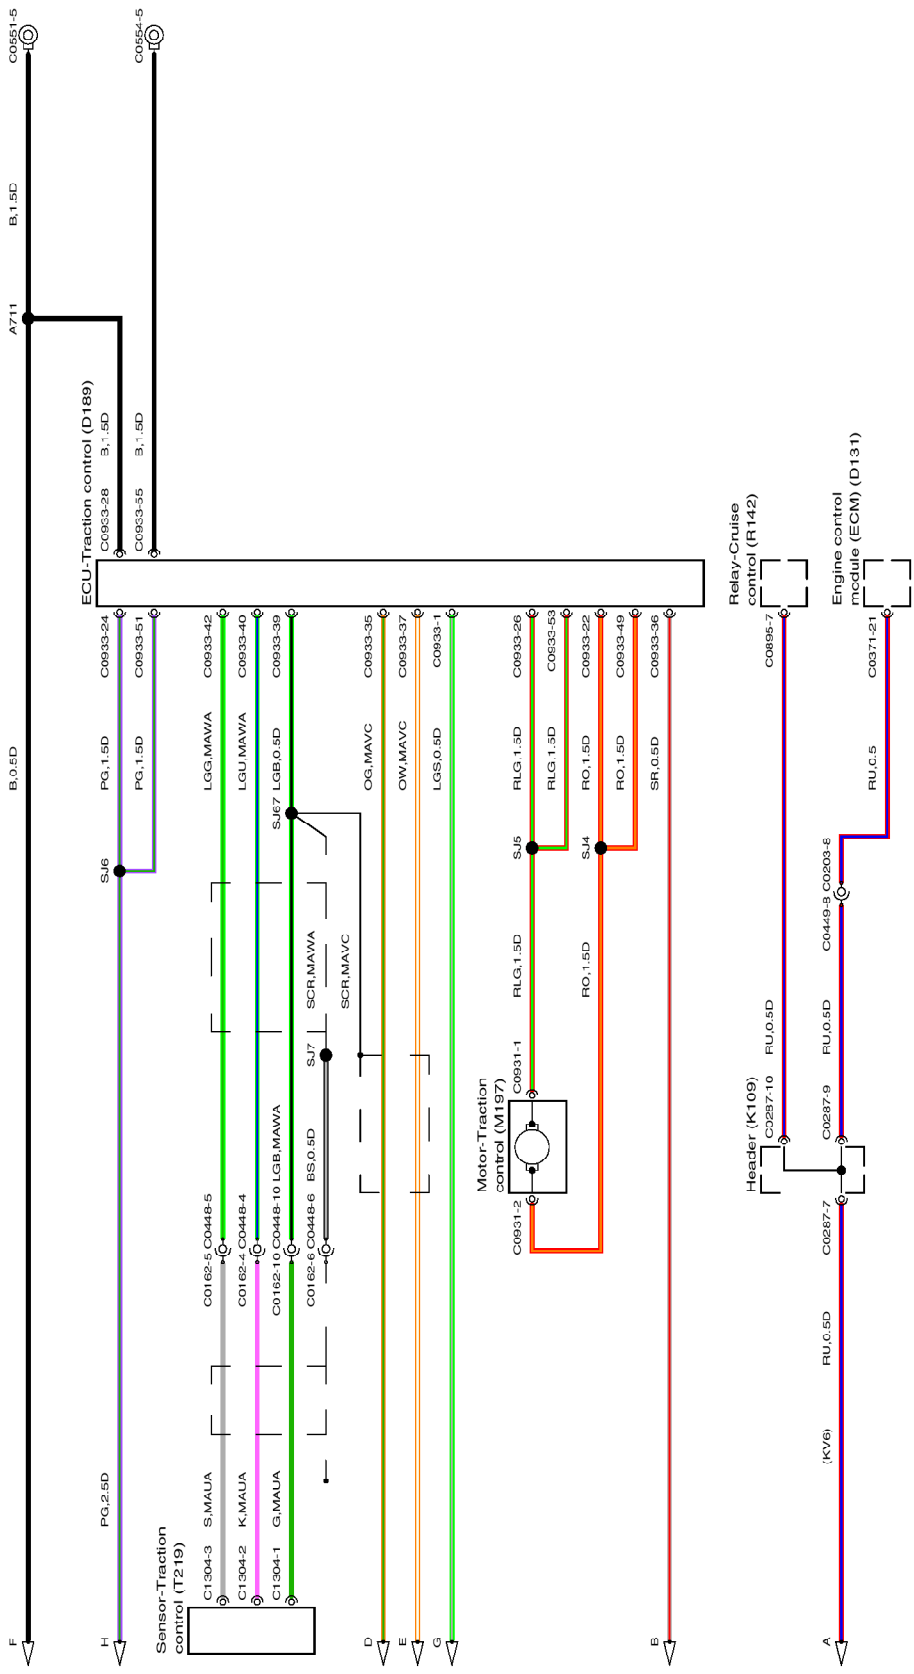


VWR402700-2

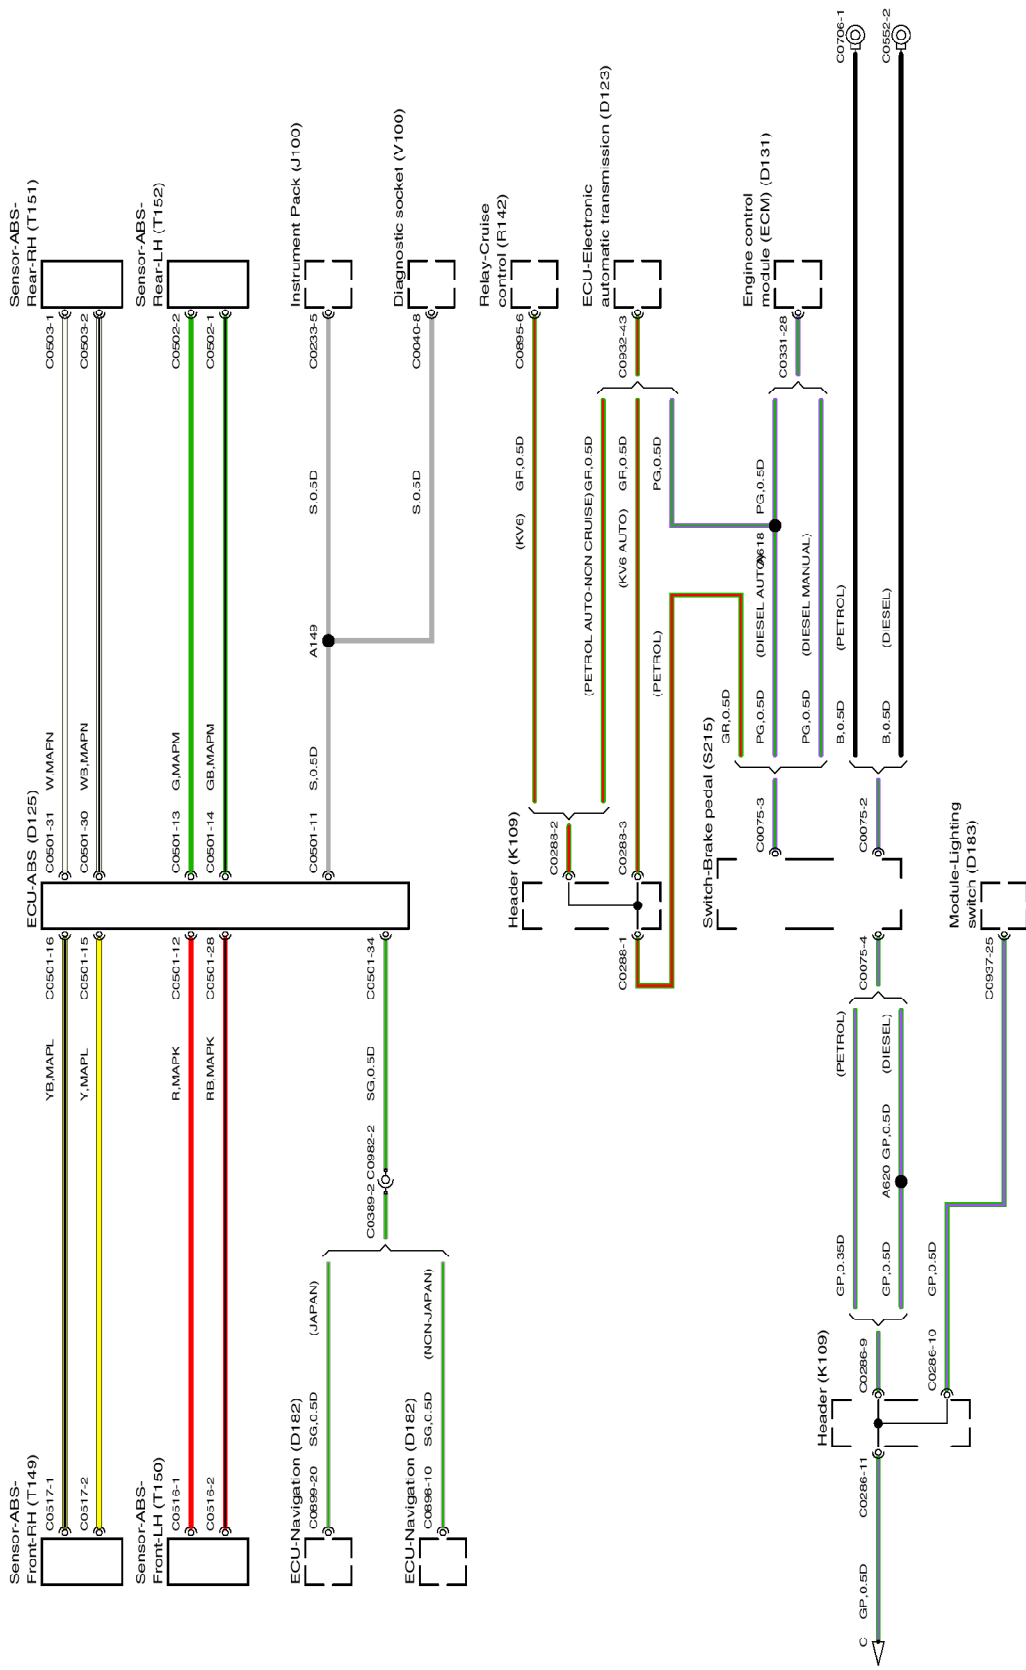


VWR402700-3

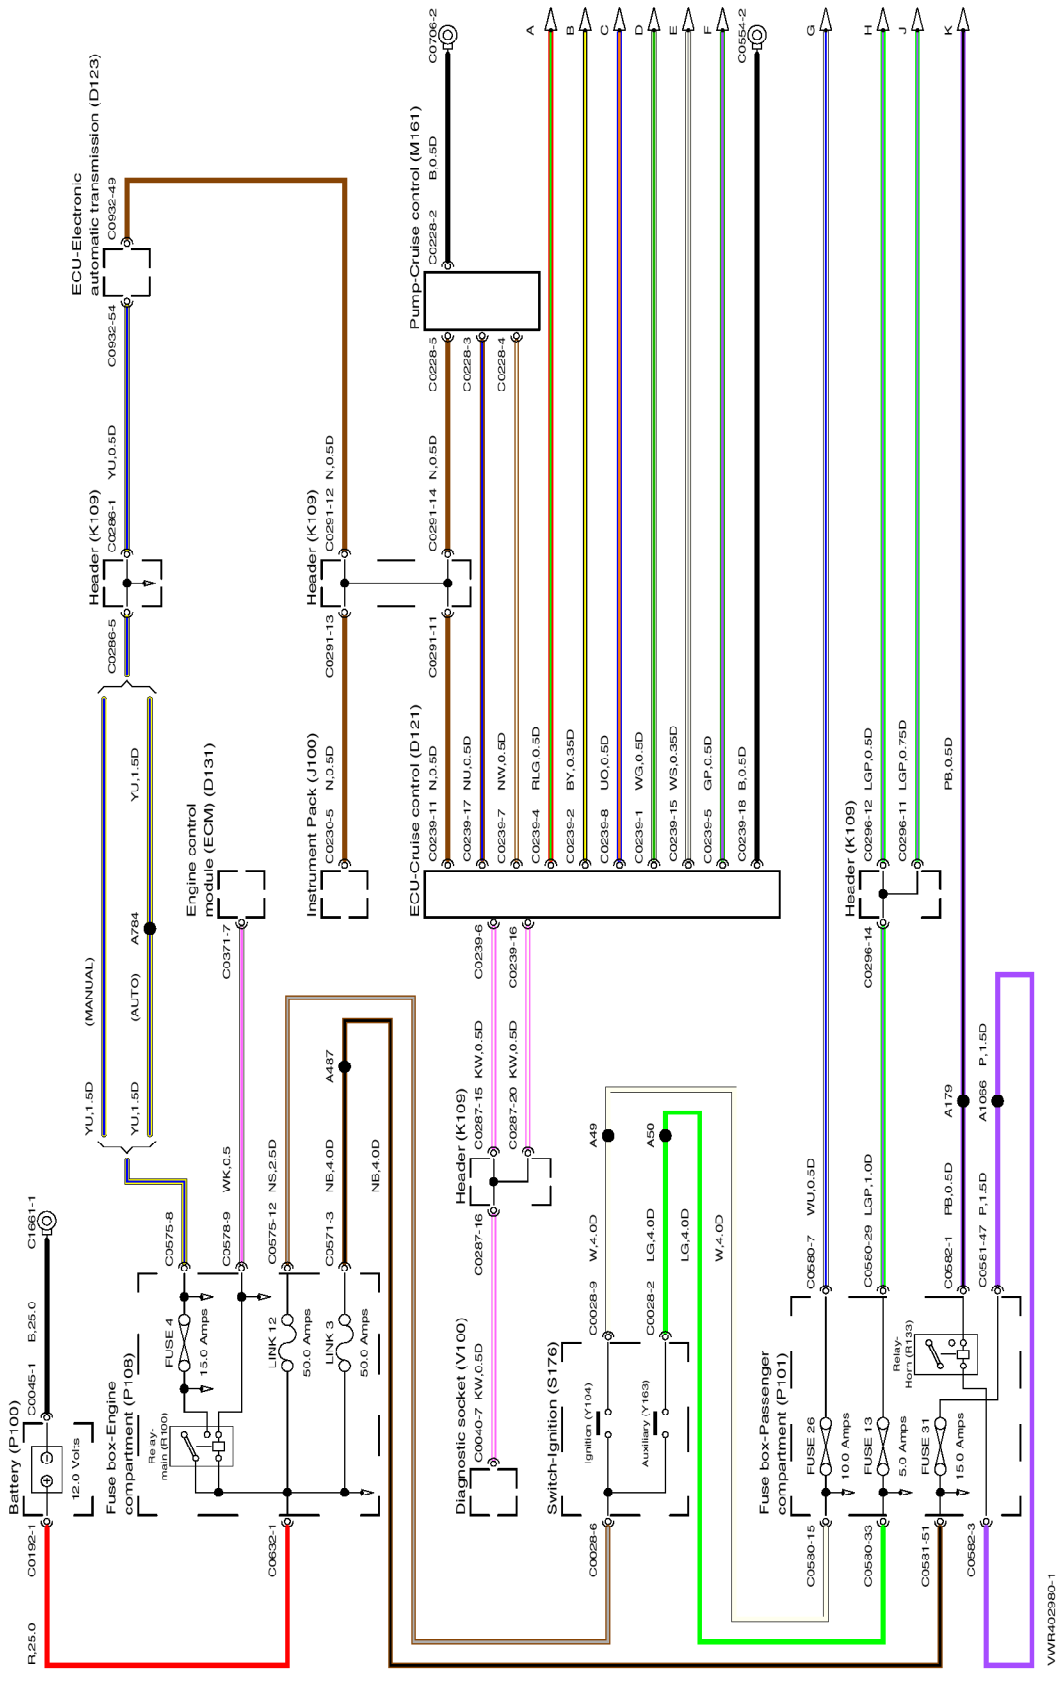


VWR402980-1

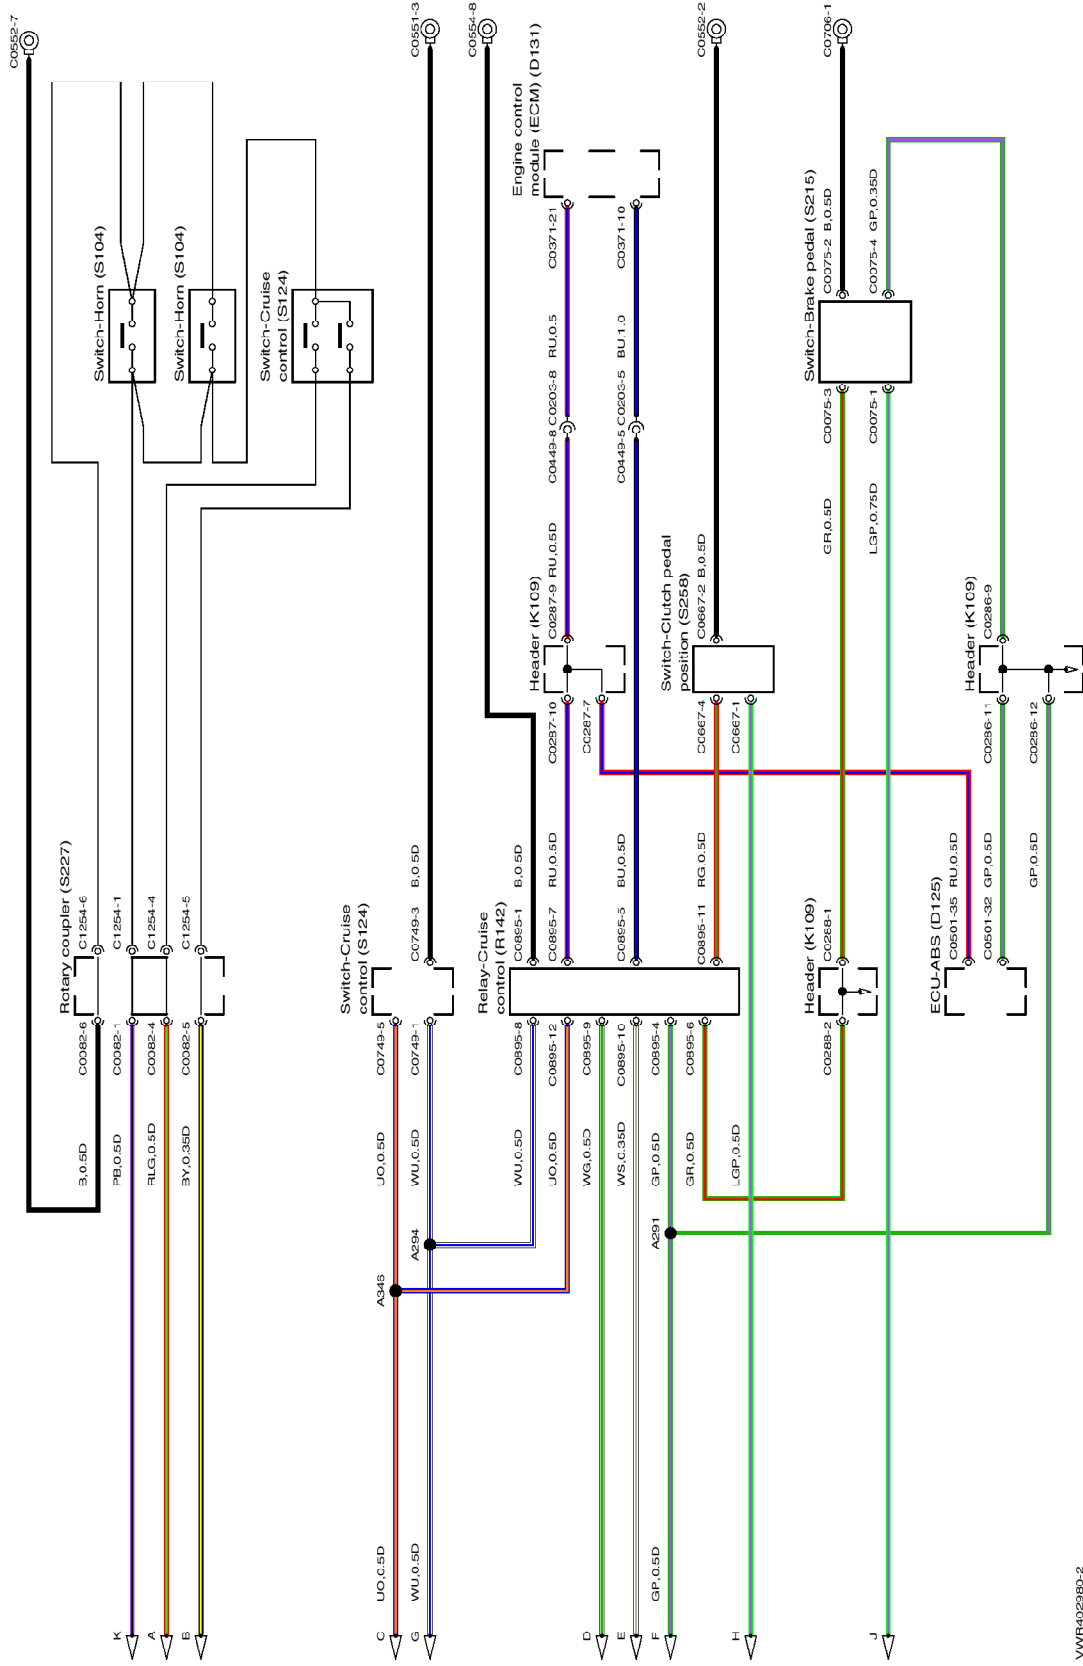


VWR402380-2

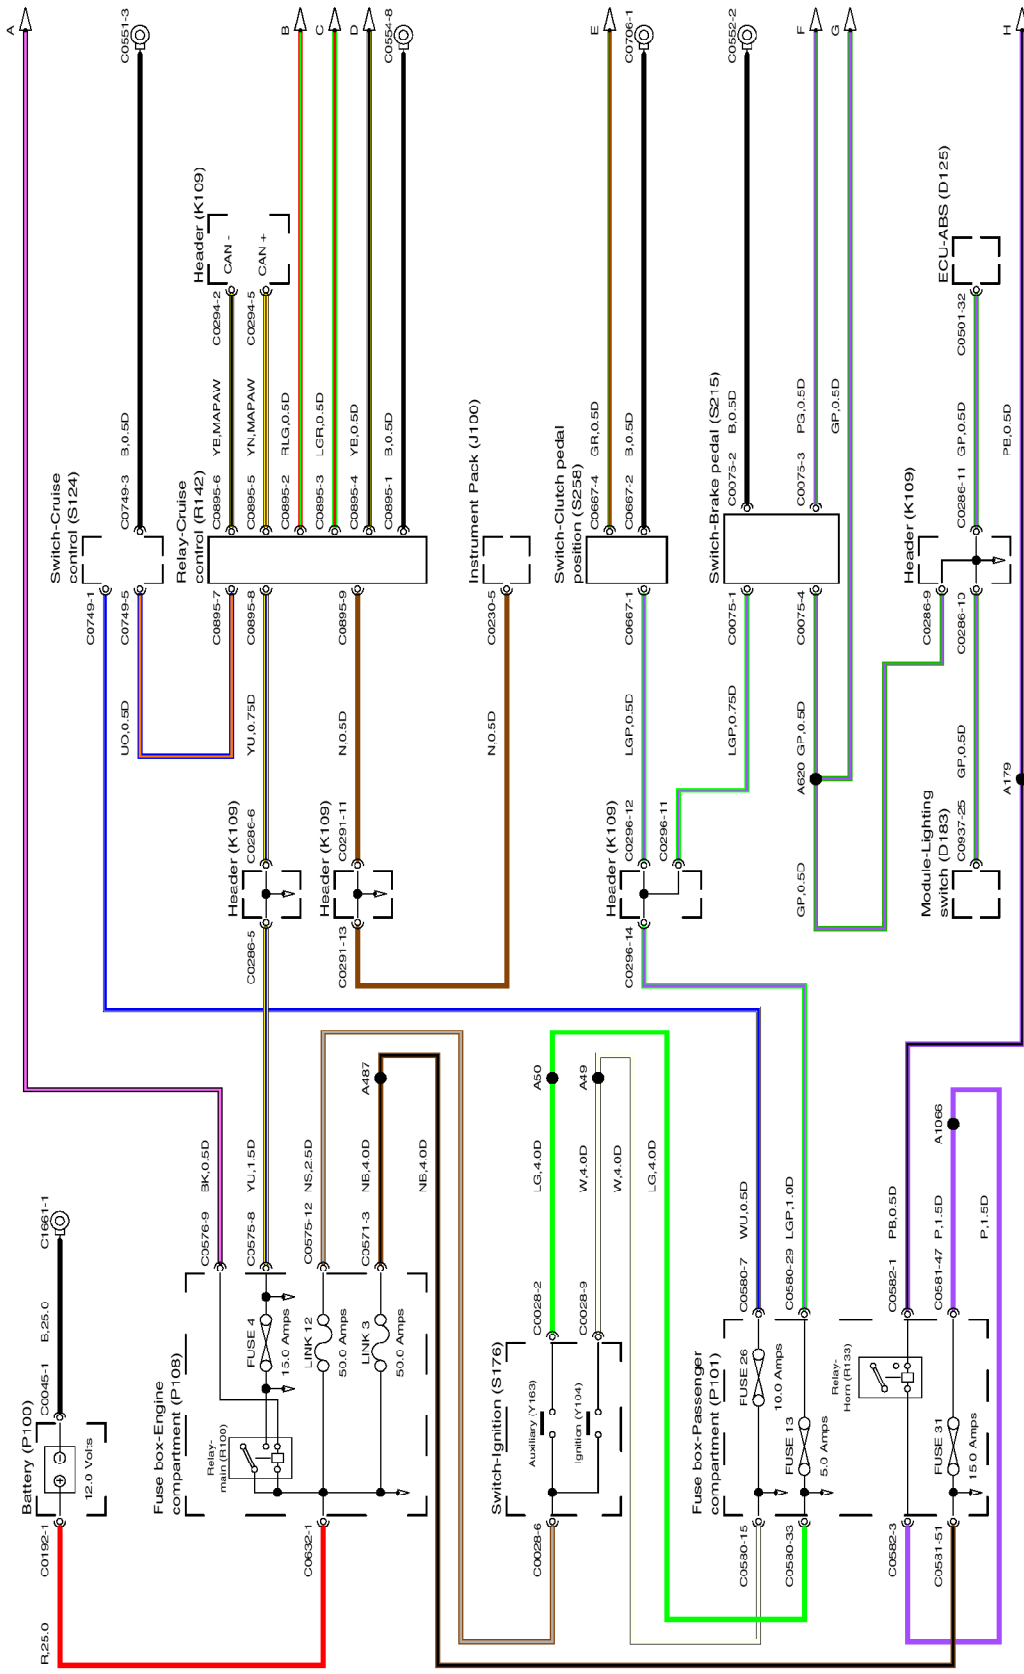


VWR402960-1

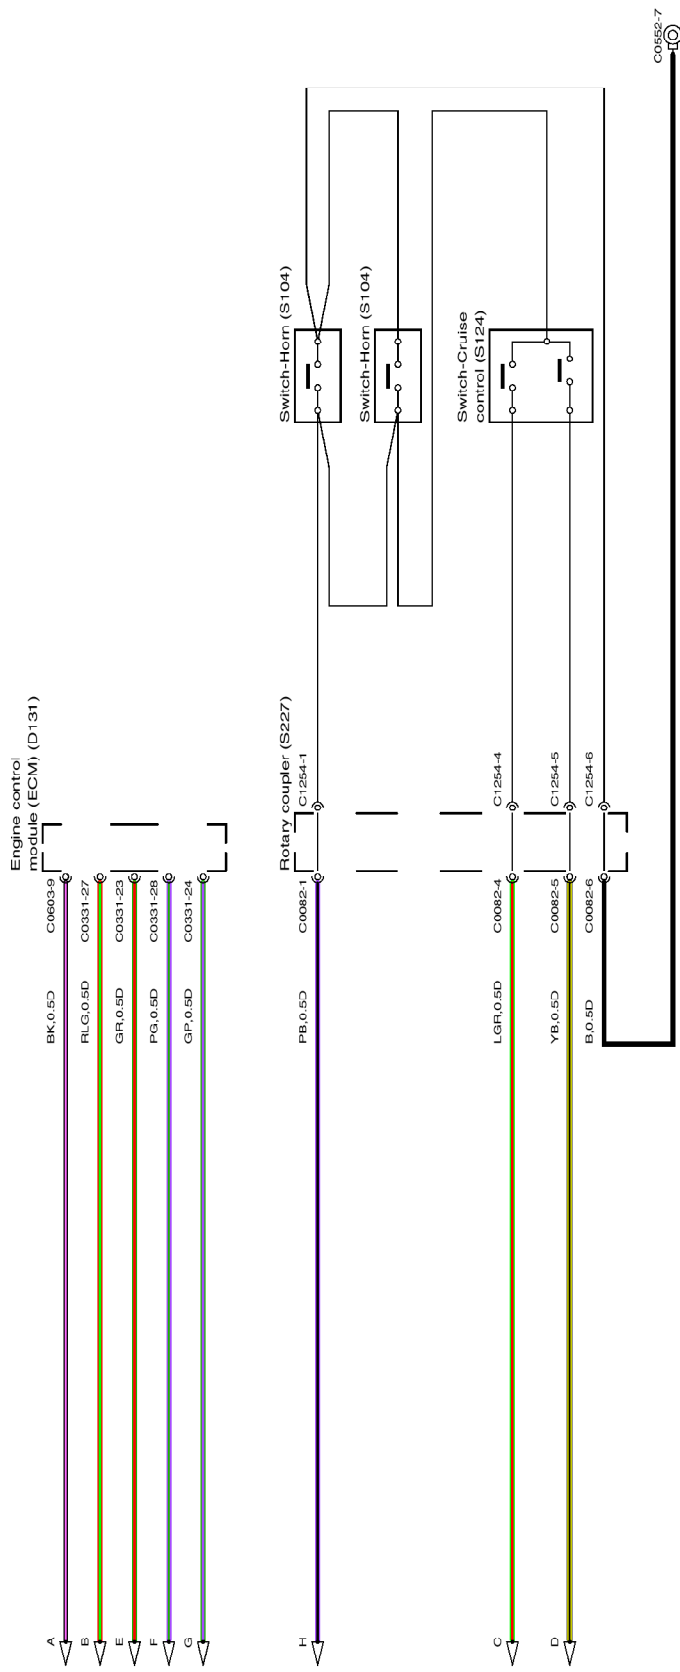


VWR402960-2

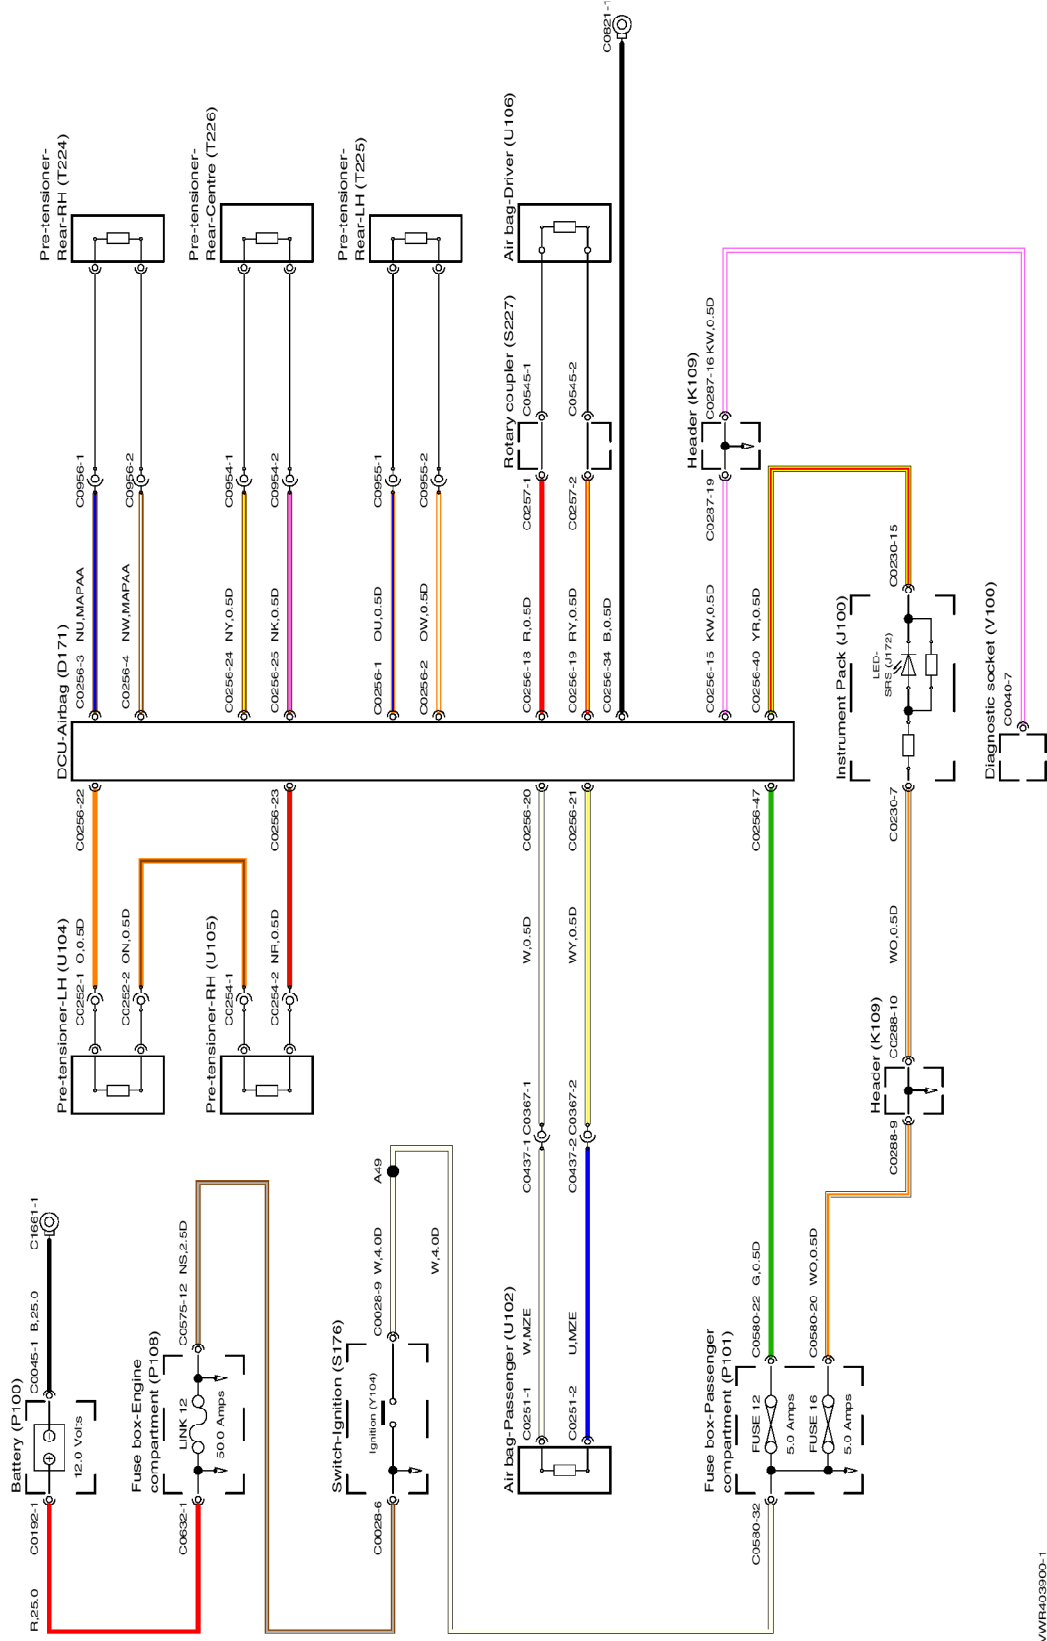


VWR403900-1

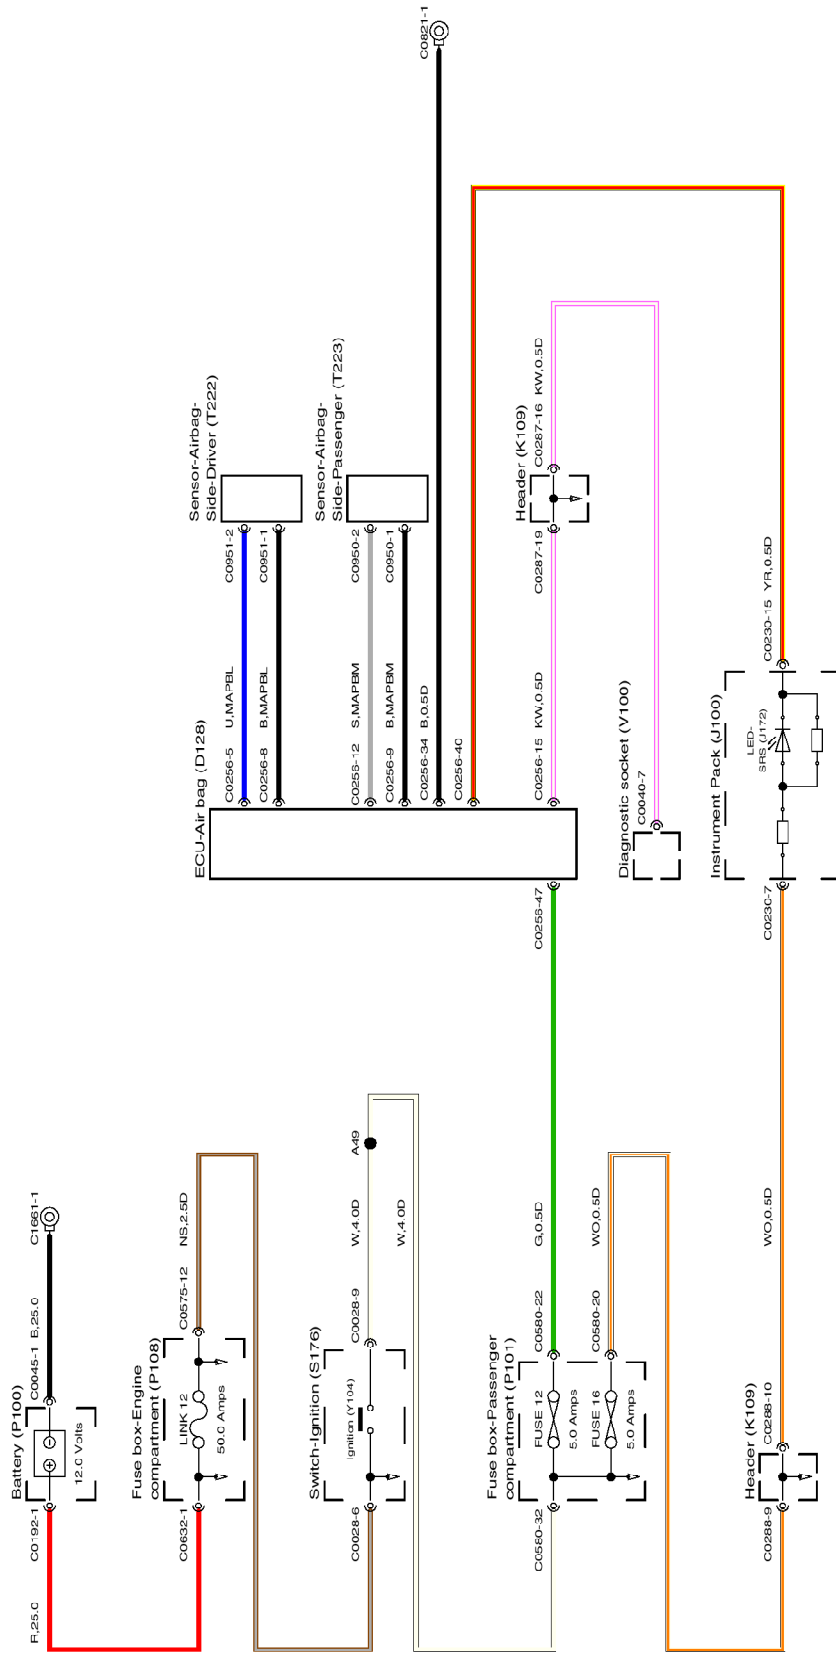

VWR403920-1

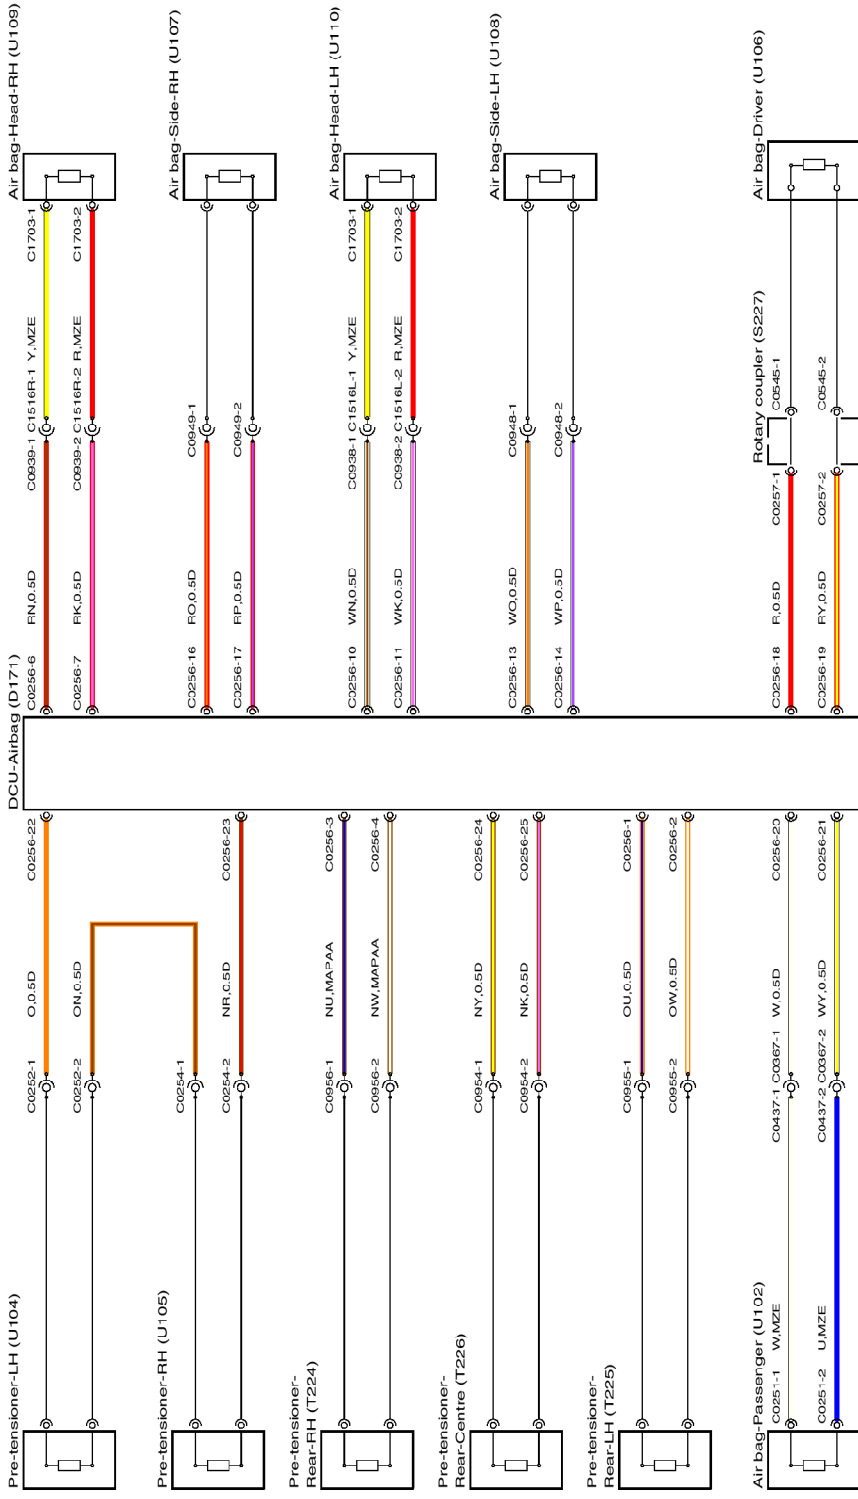


VWR403920-2

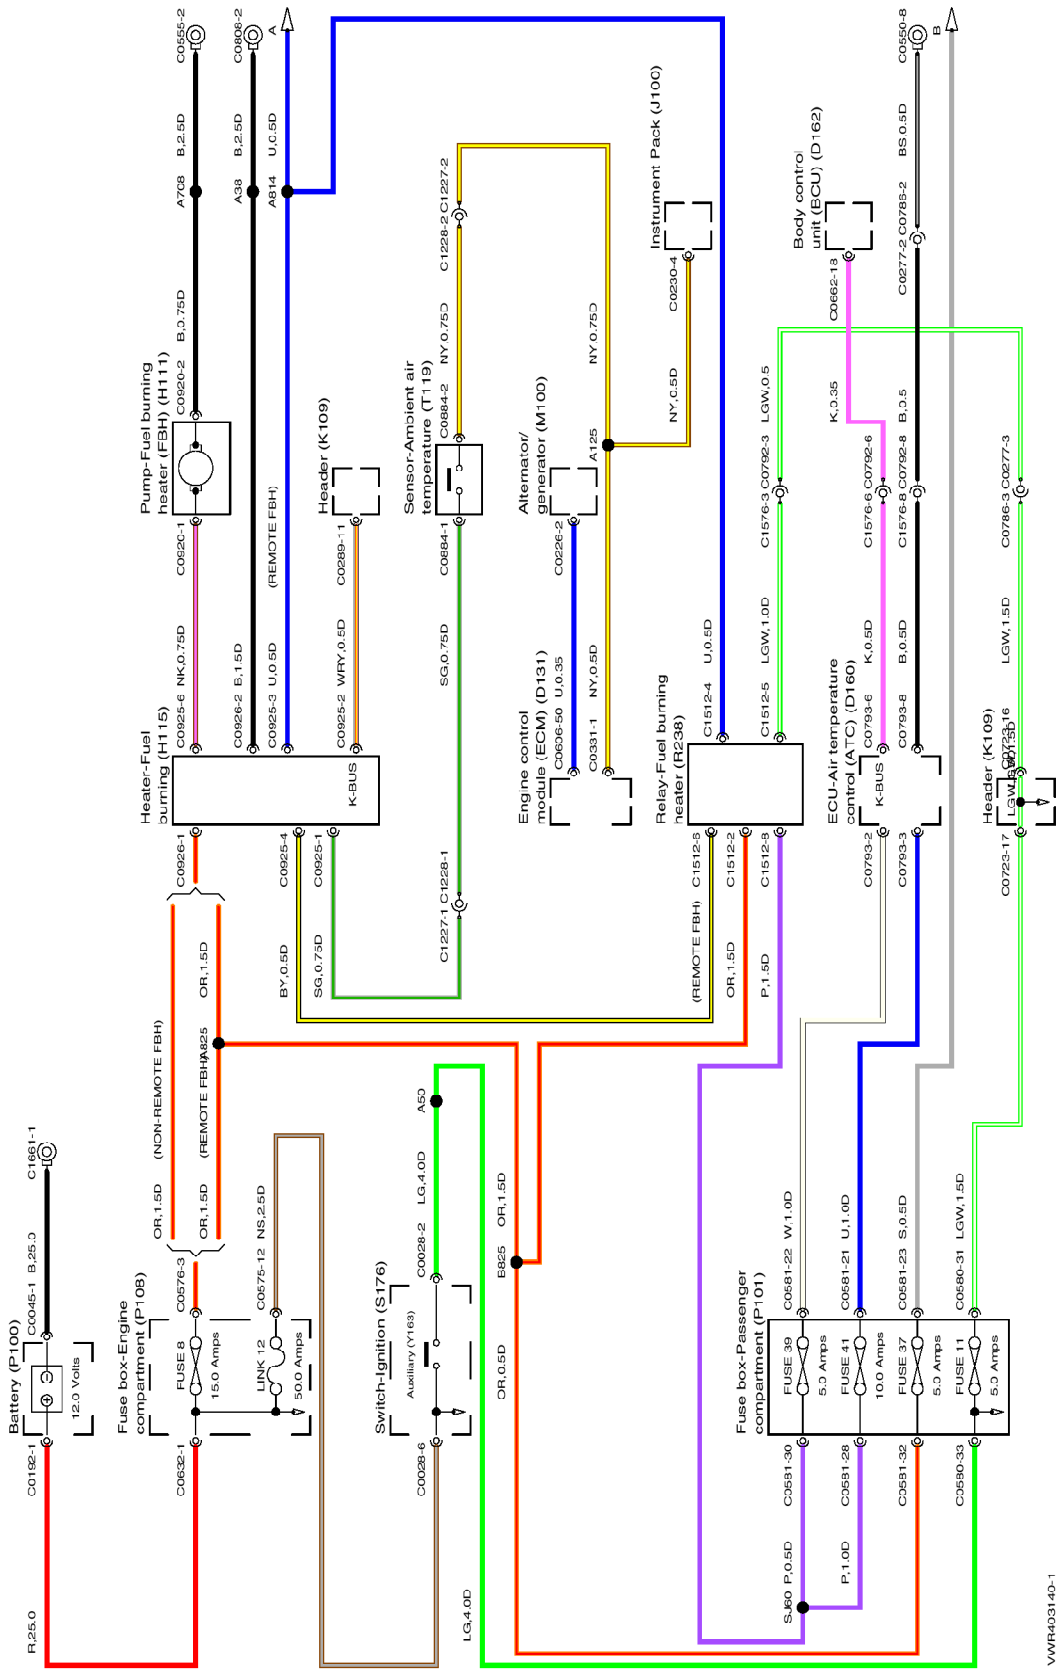



VWR403140-1

80 FUEL BURNING HEATER

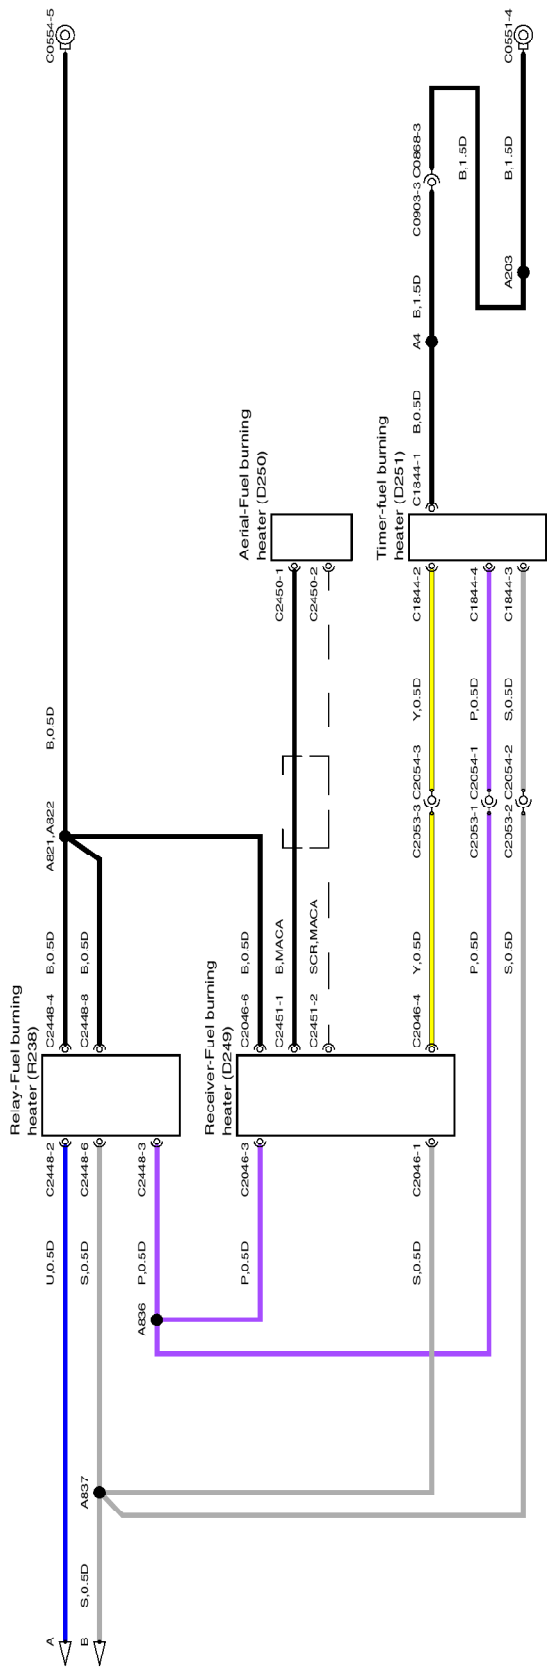


VWR403140-2

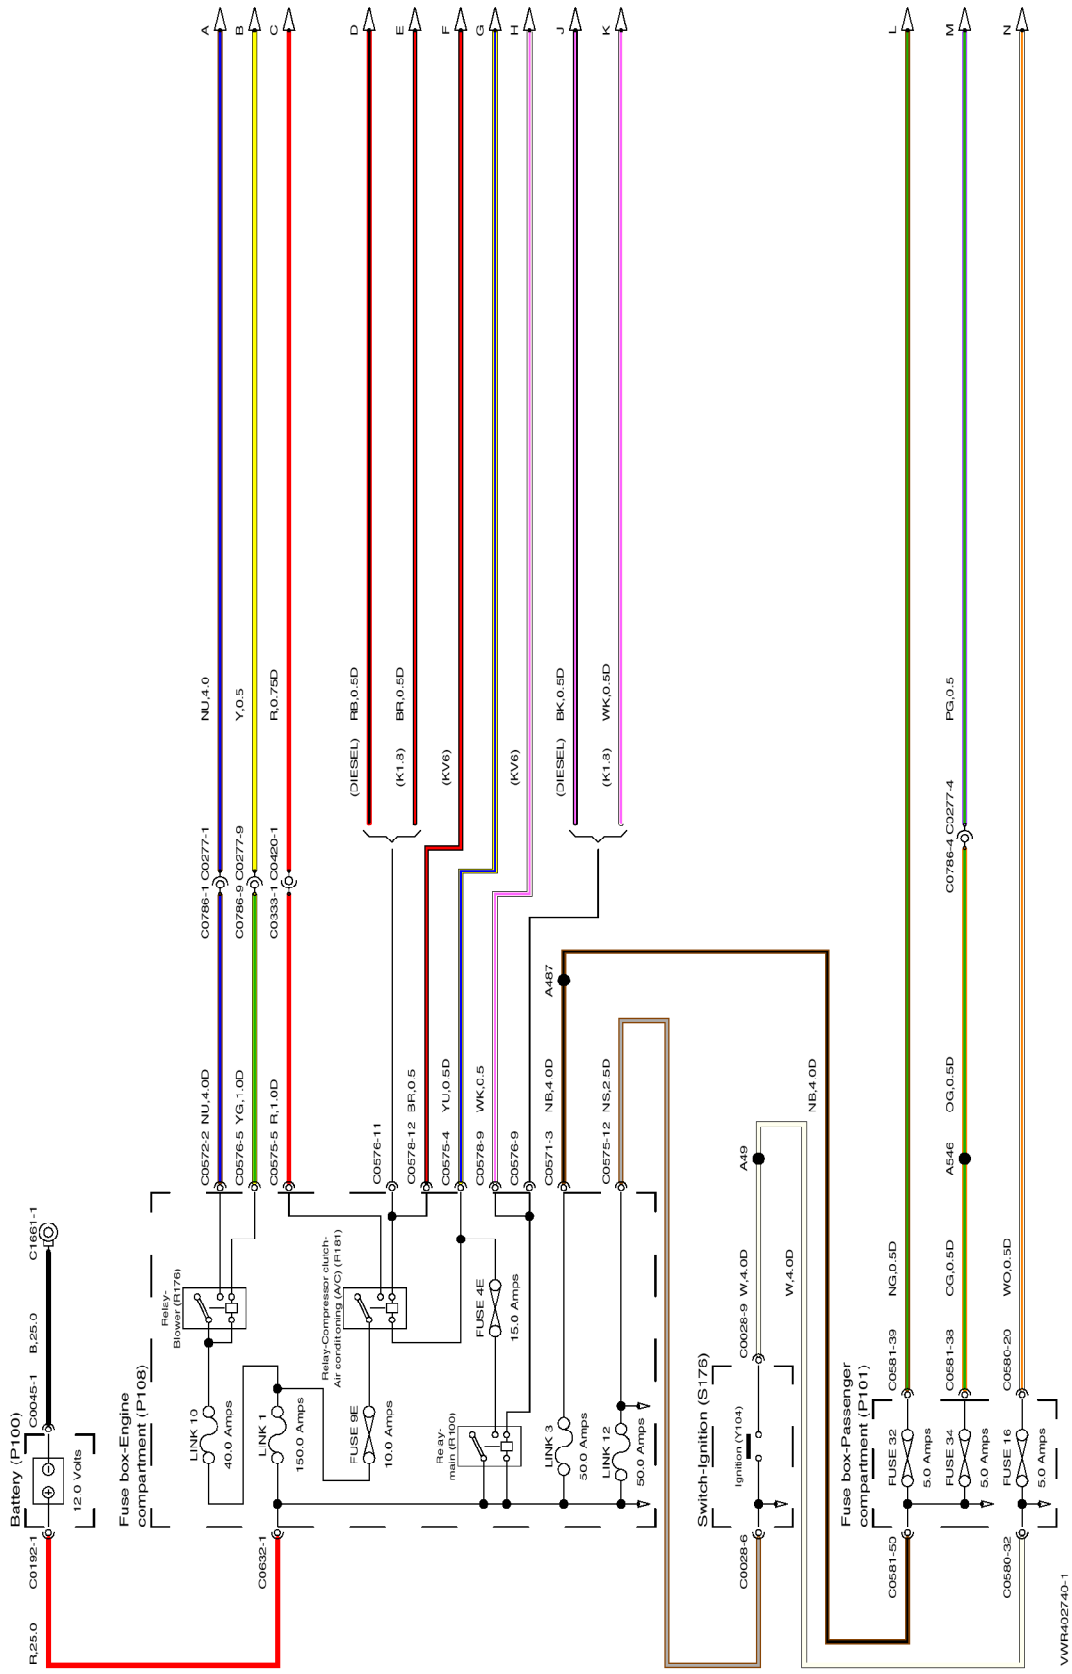

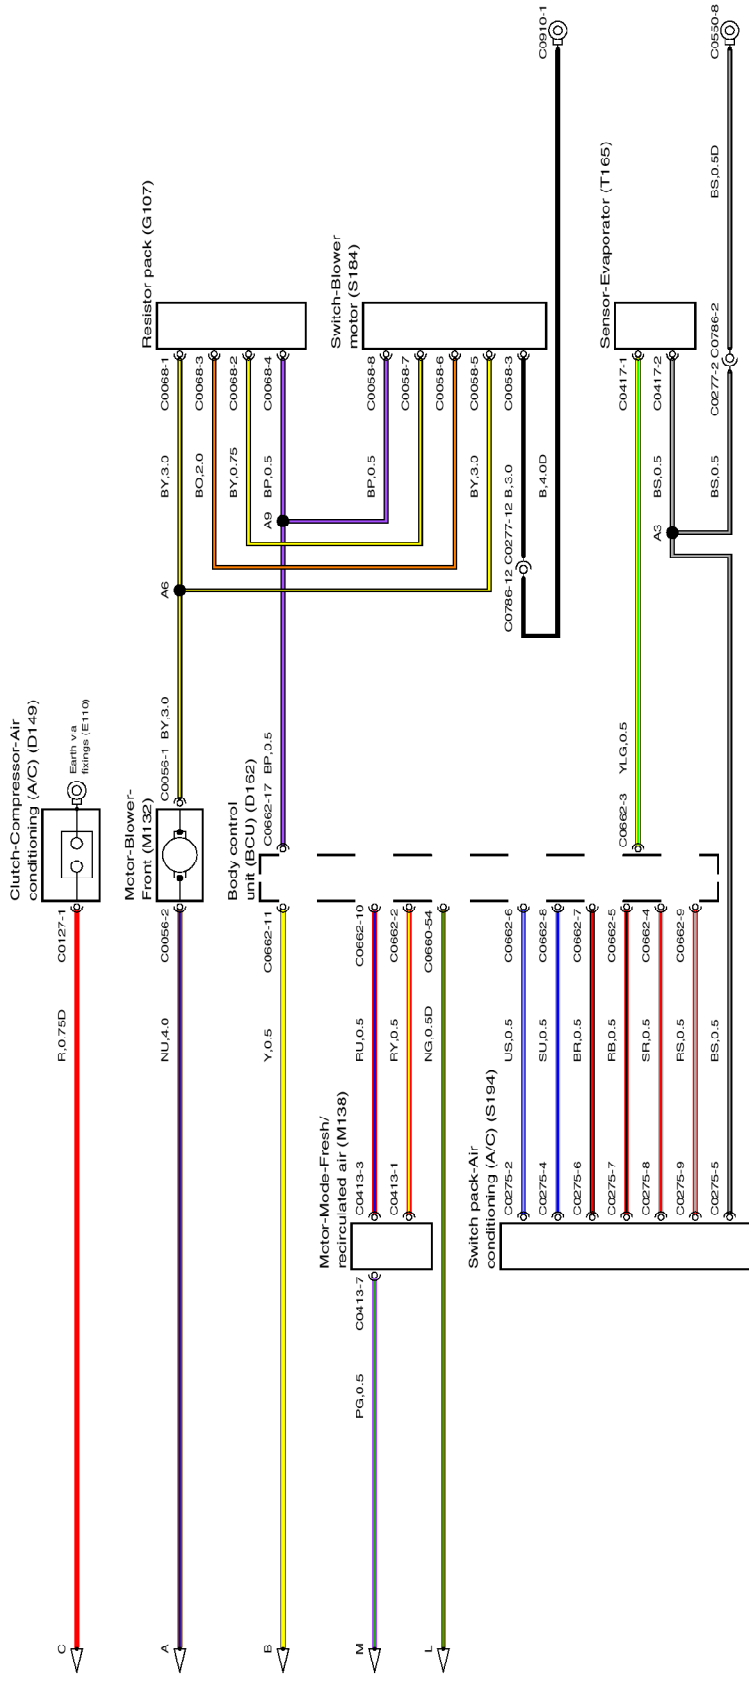


VWR402740-3

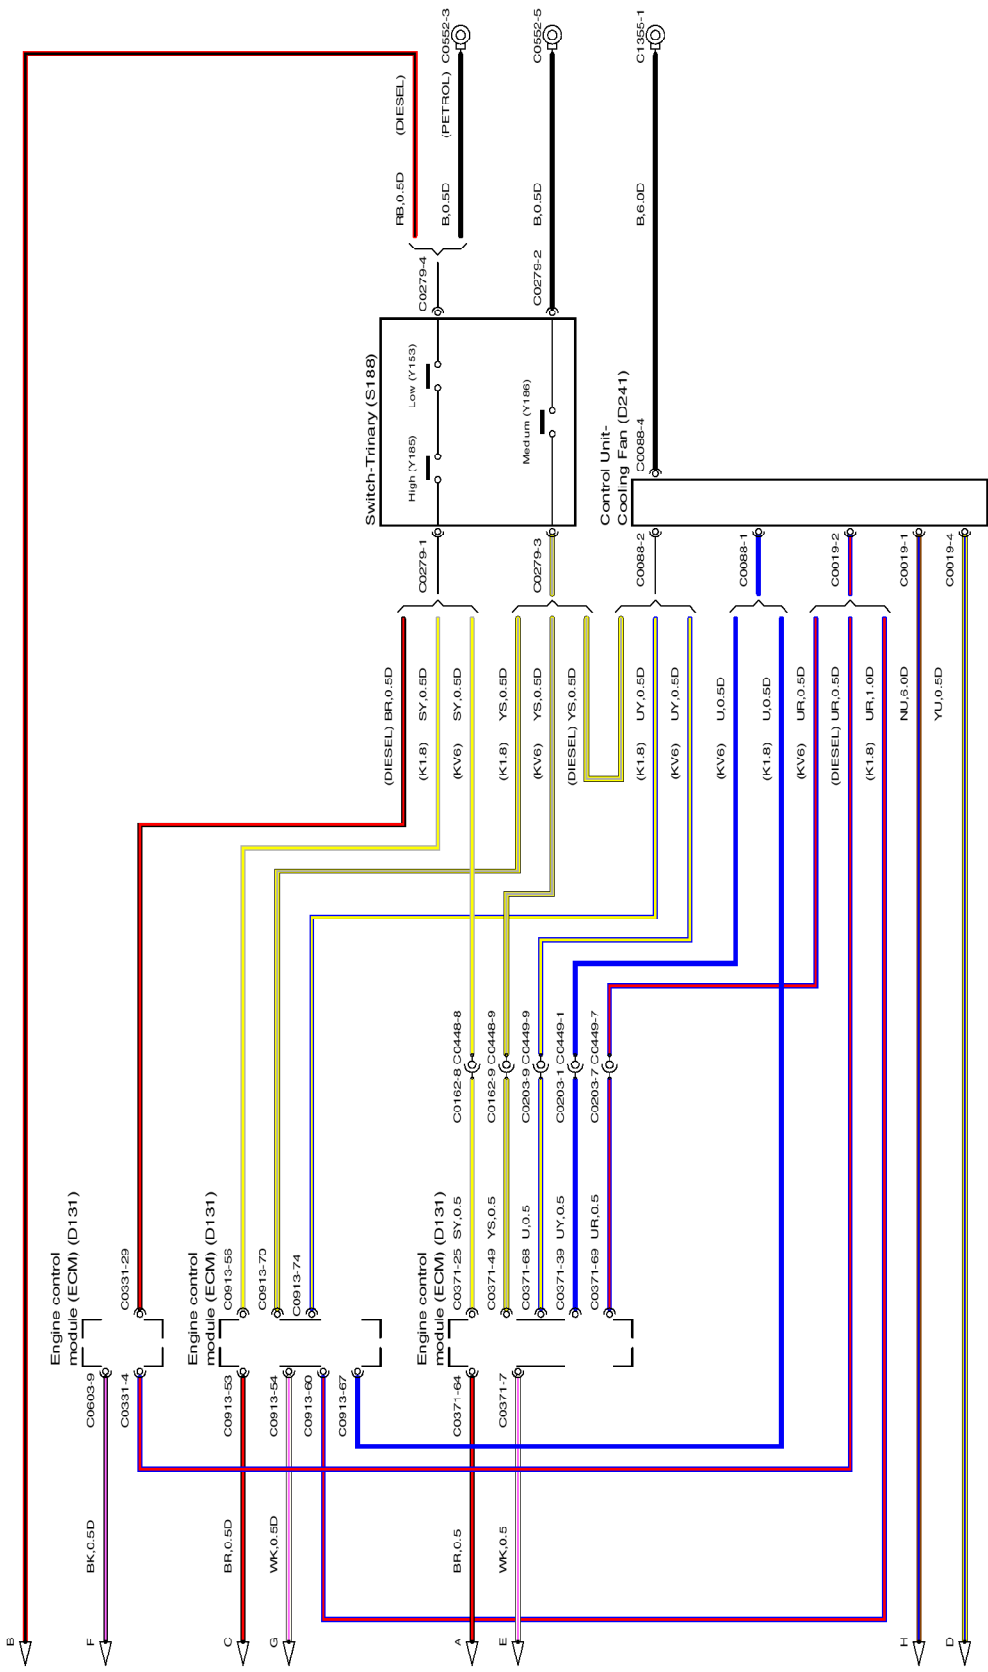


VWR402760-2


85 AIR TEMPERATURE CONTROL

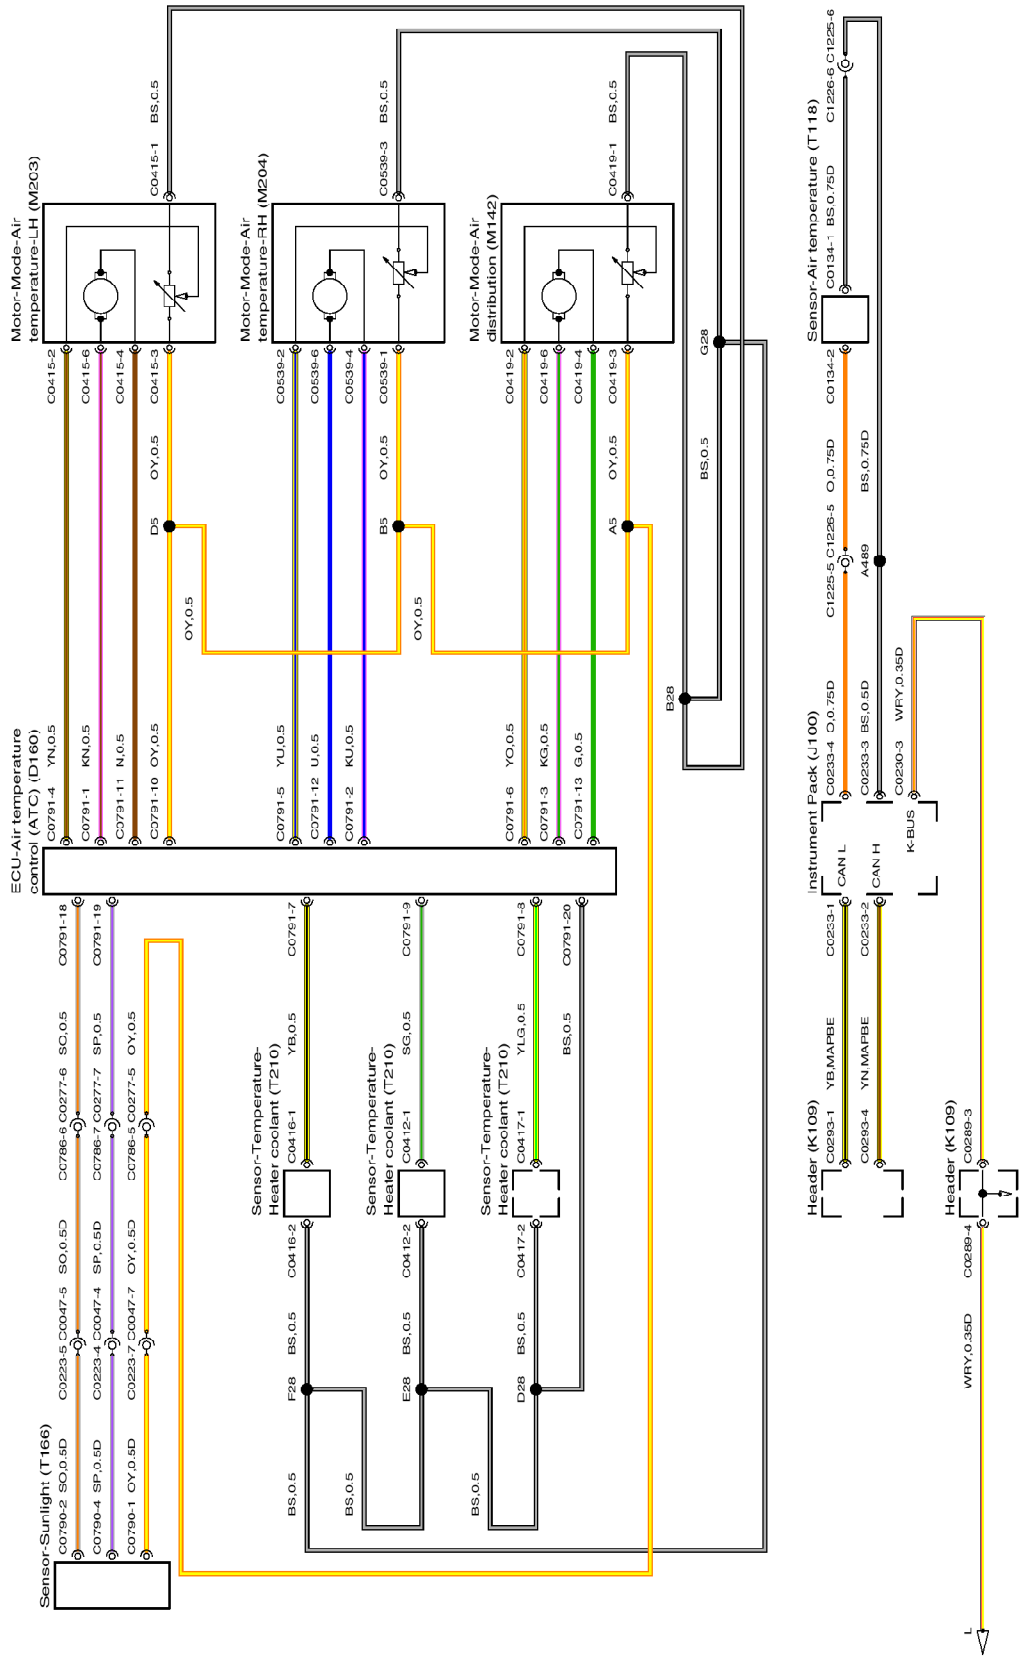


VWR402760-3

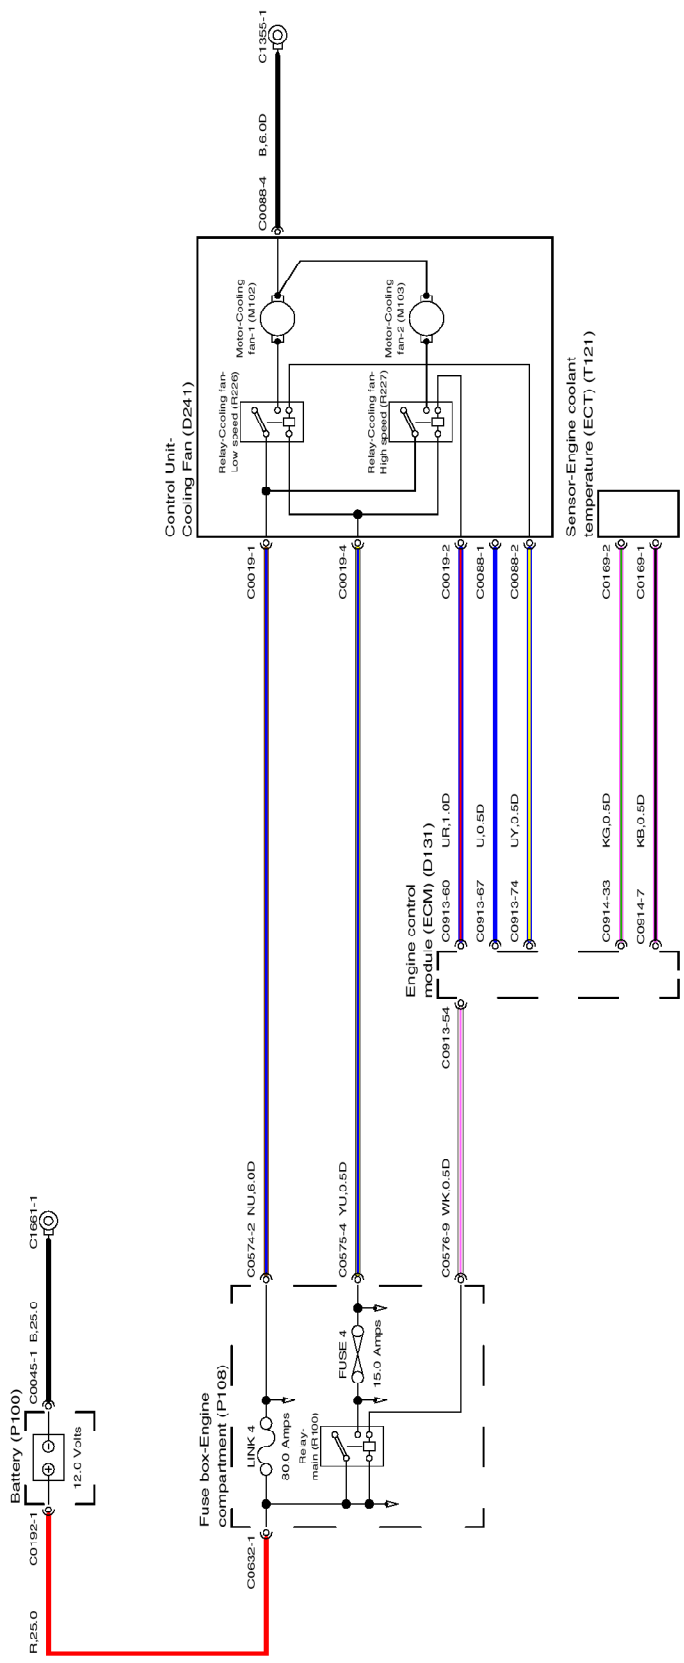


VWVR402380-1

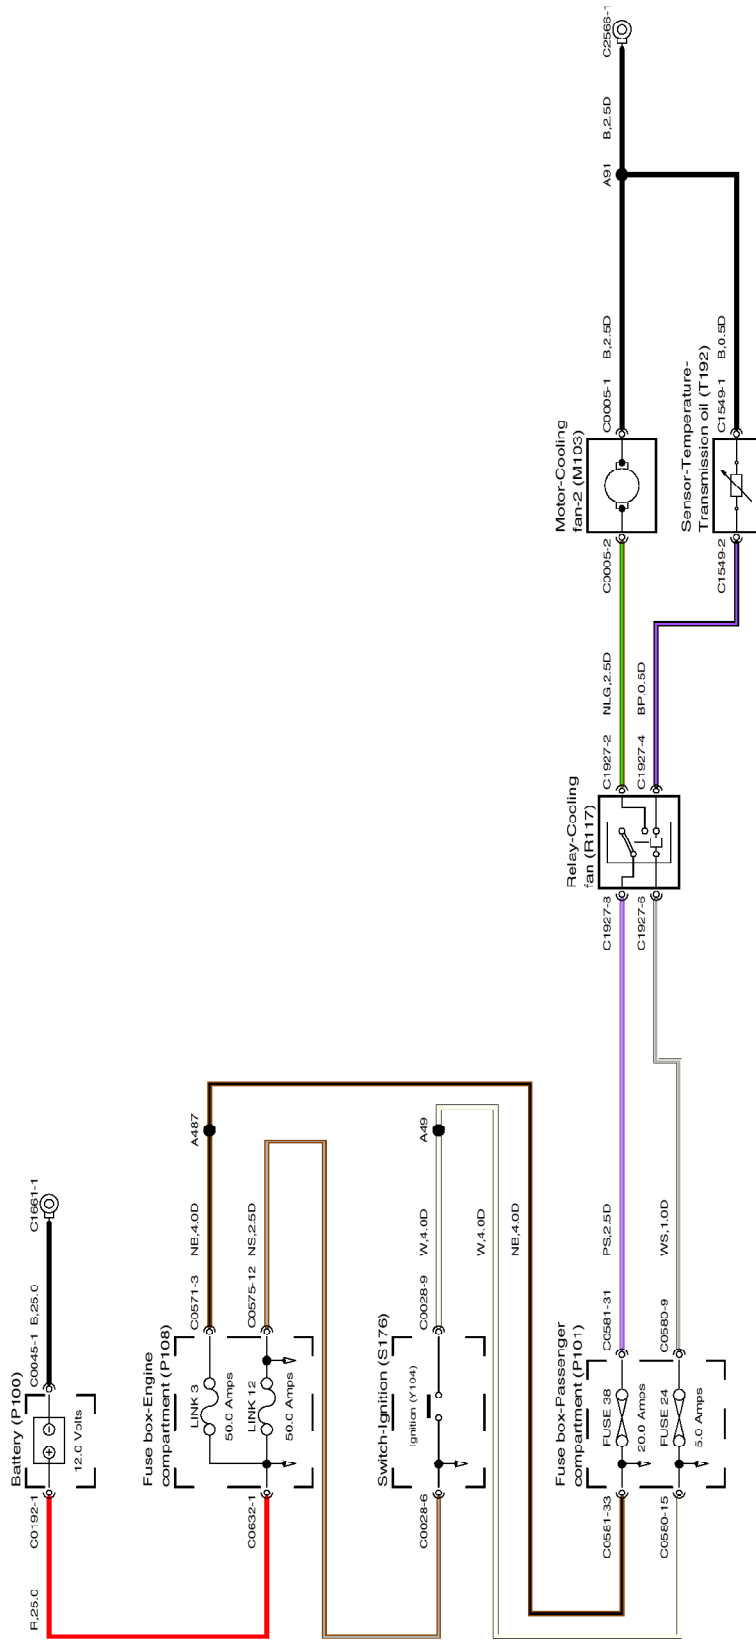


VWR402900-1

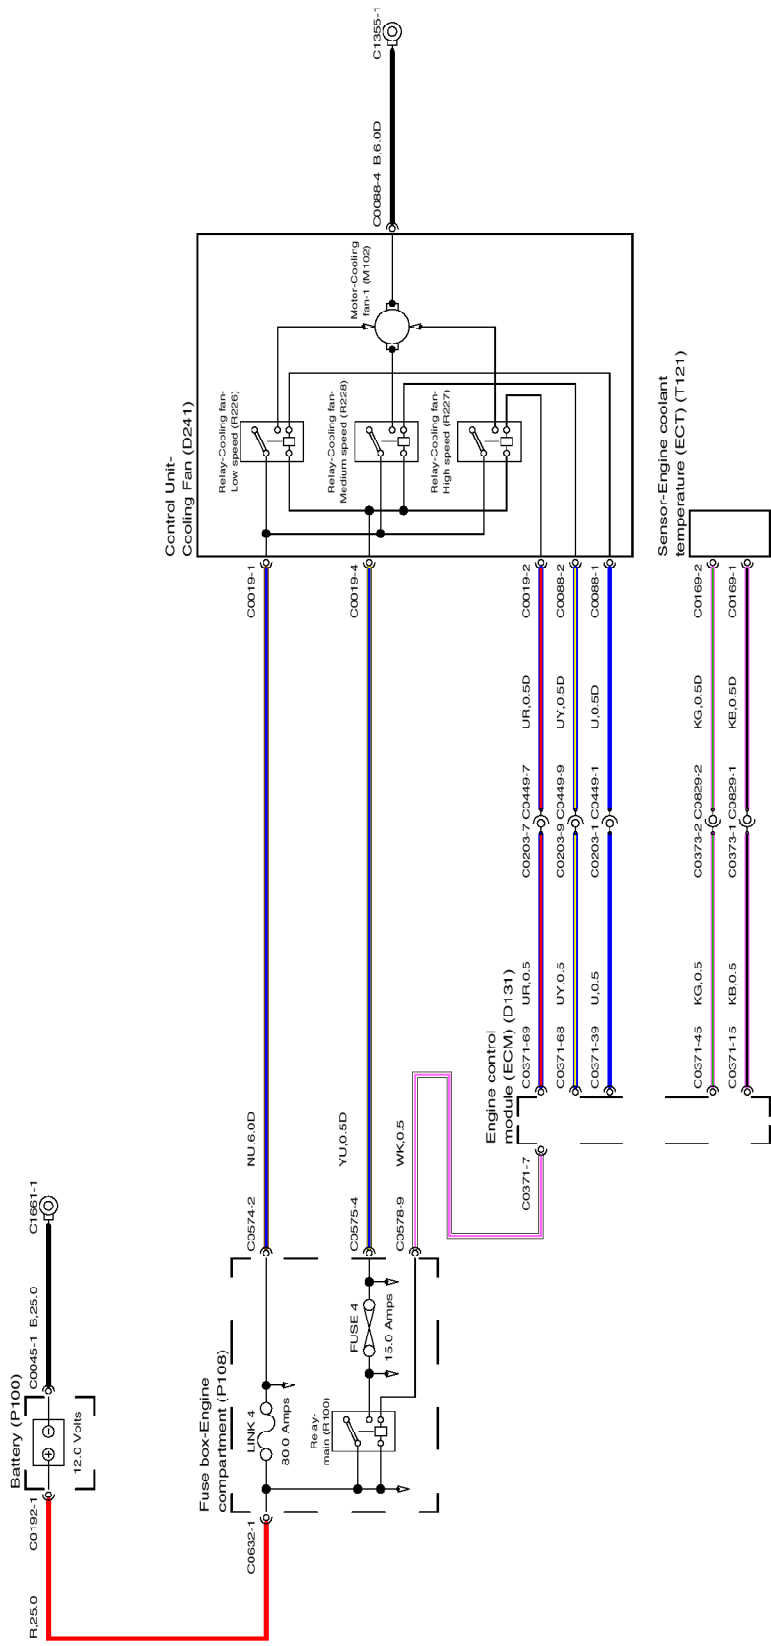

VWR402940-1

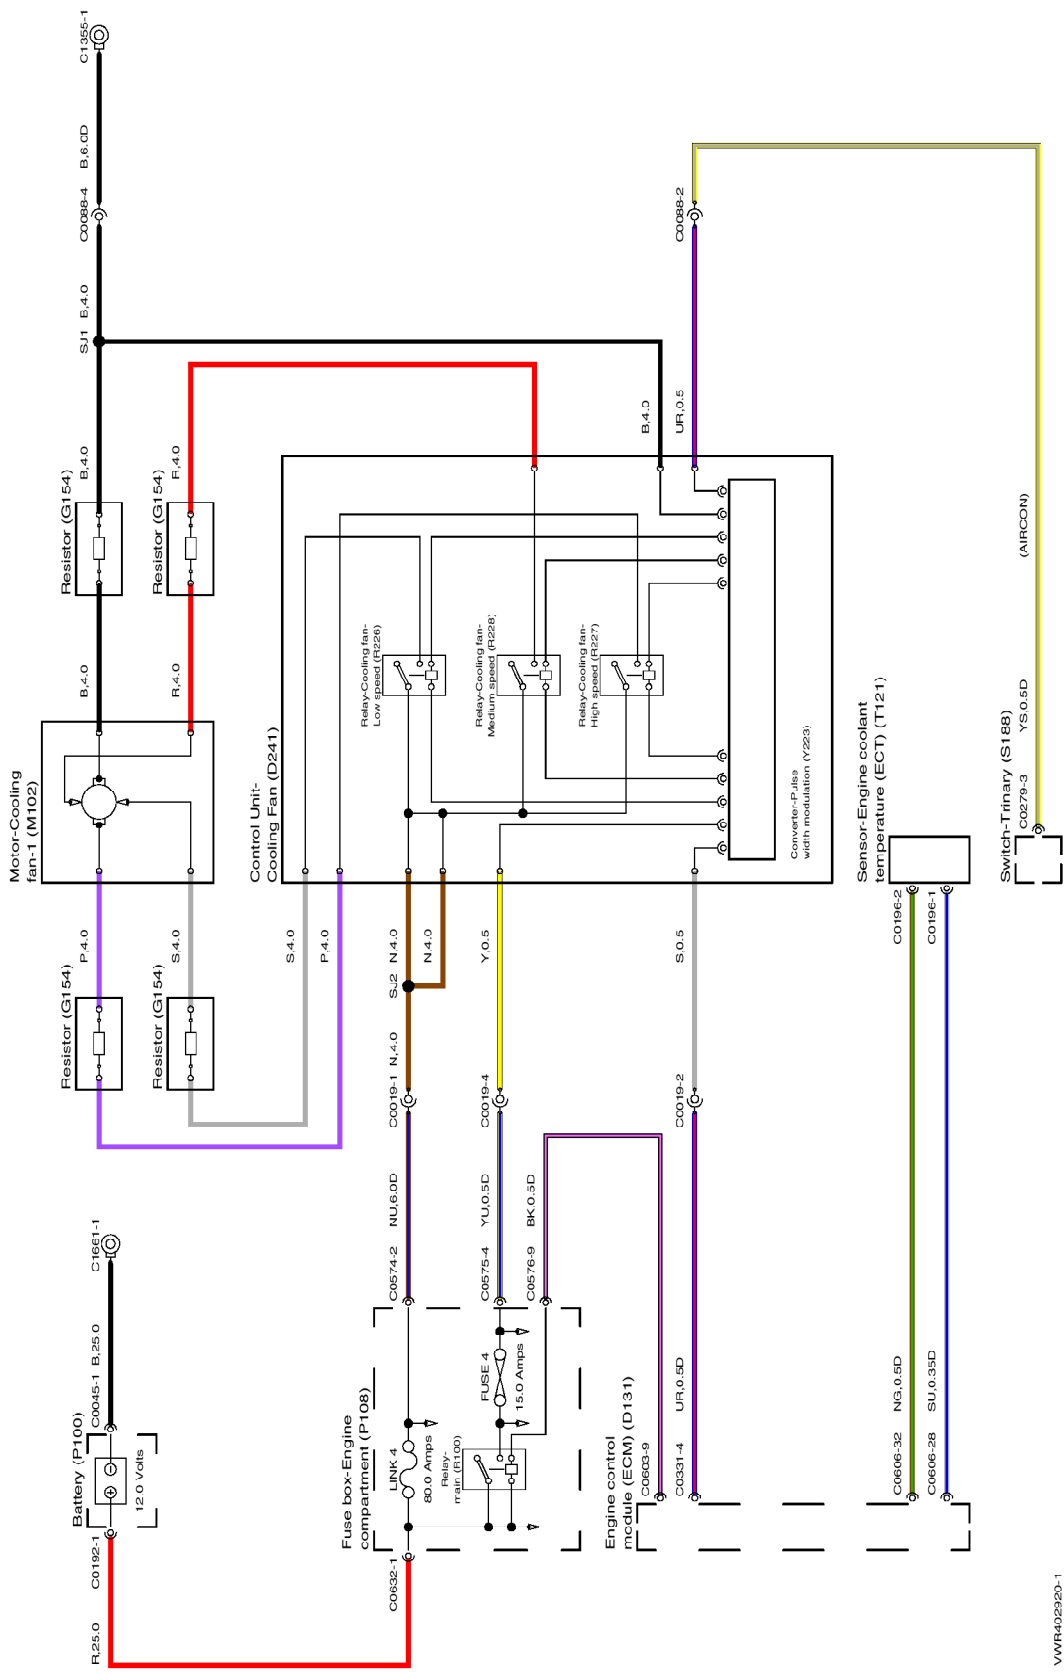


VWR402920-1

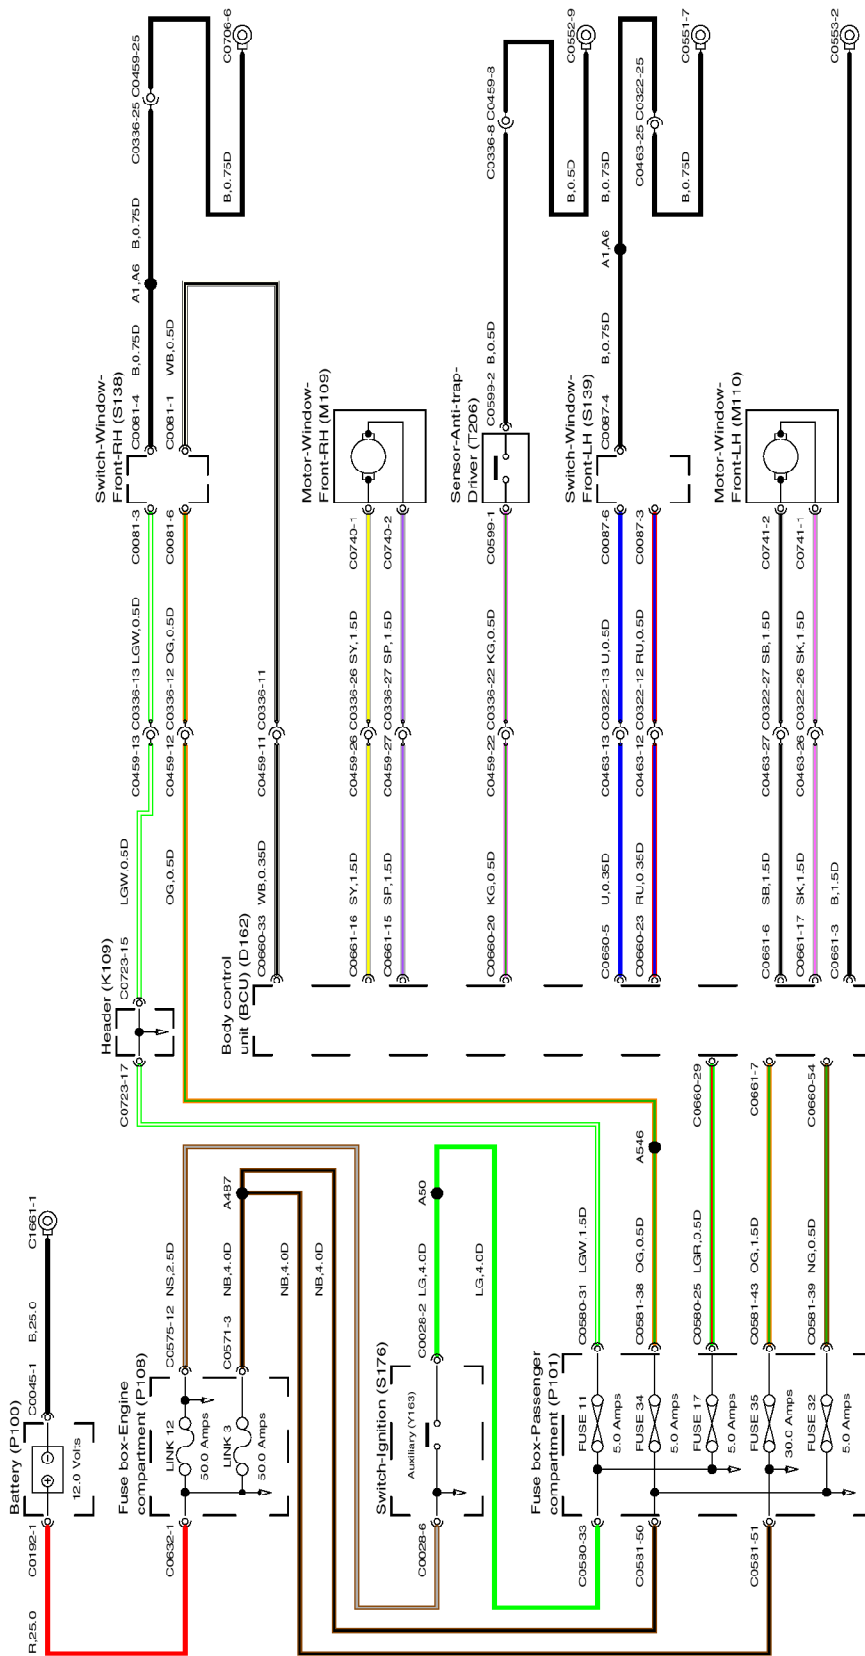


VWR404140-1


100 SUNROOF

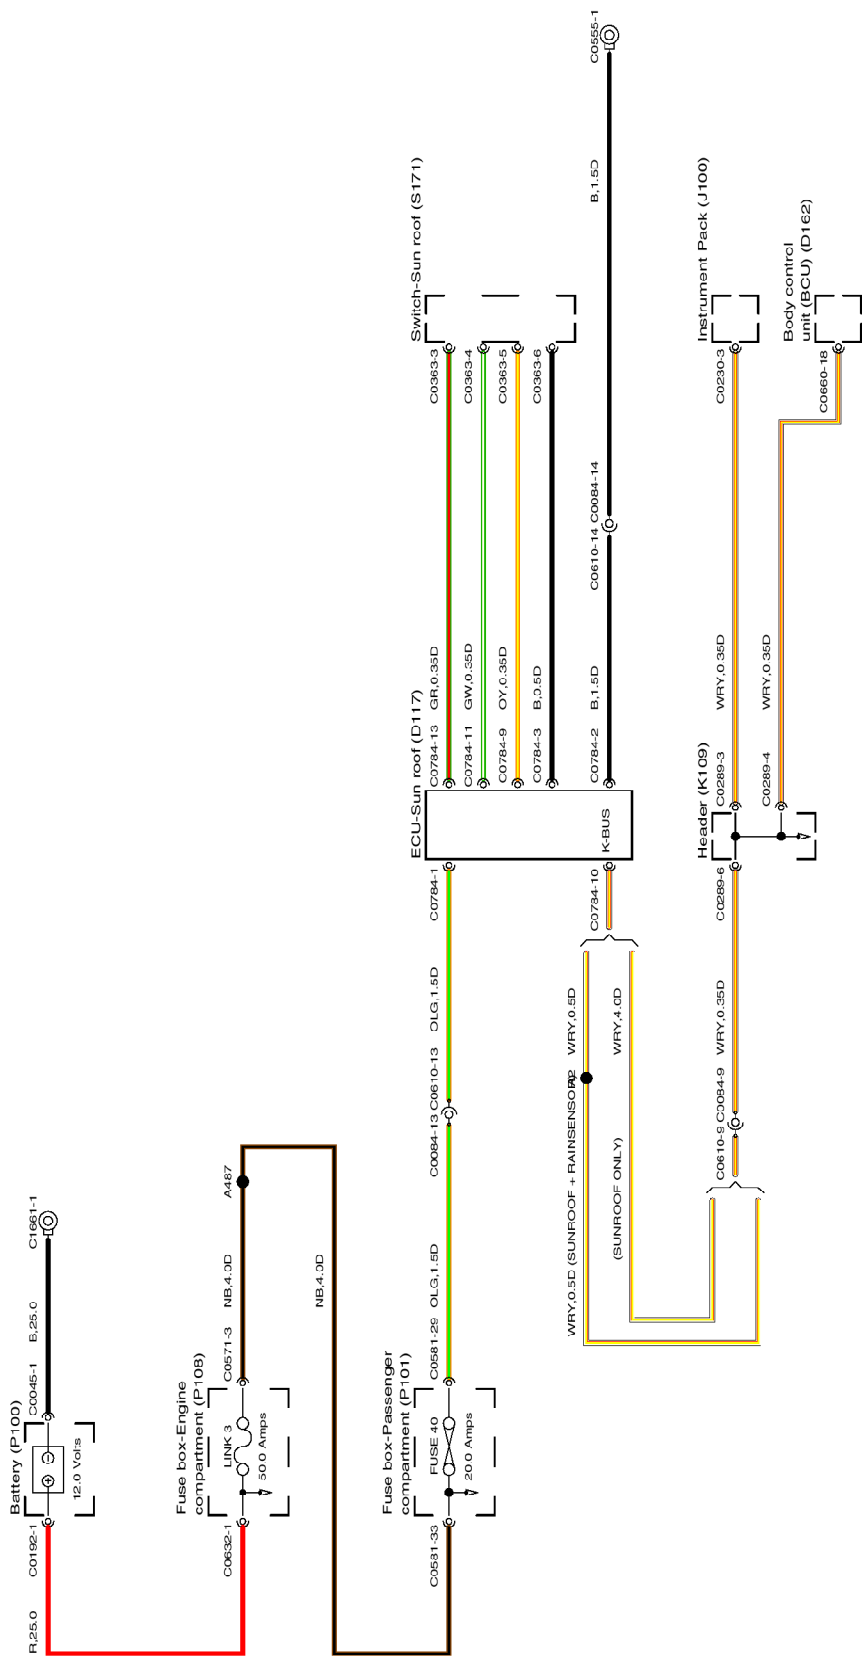


VWR404020-1

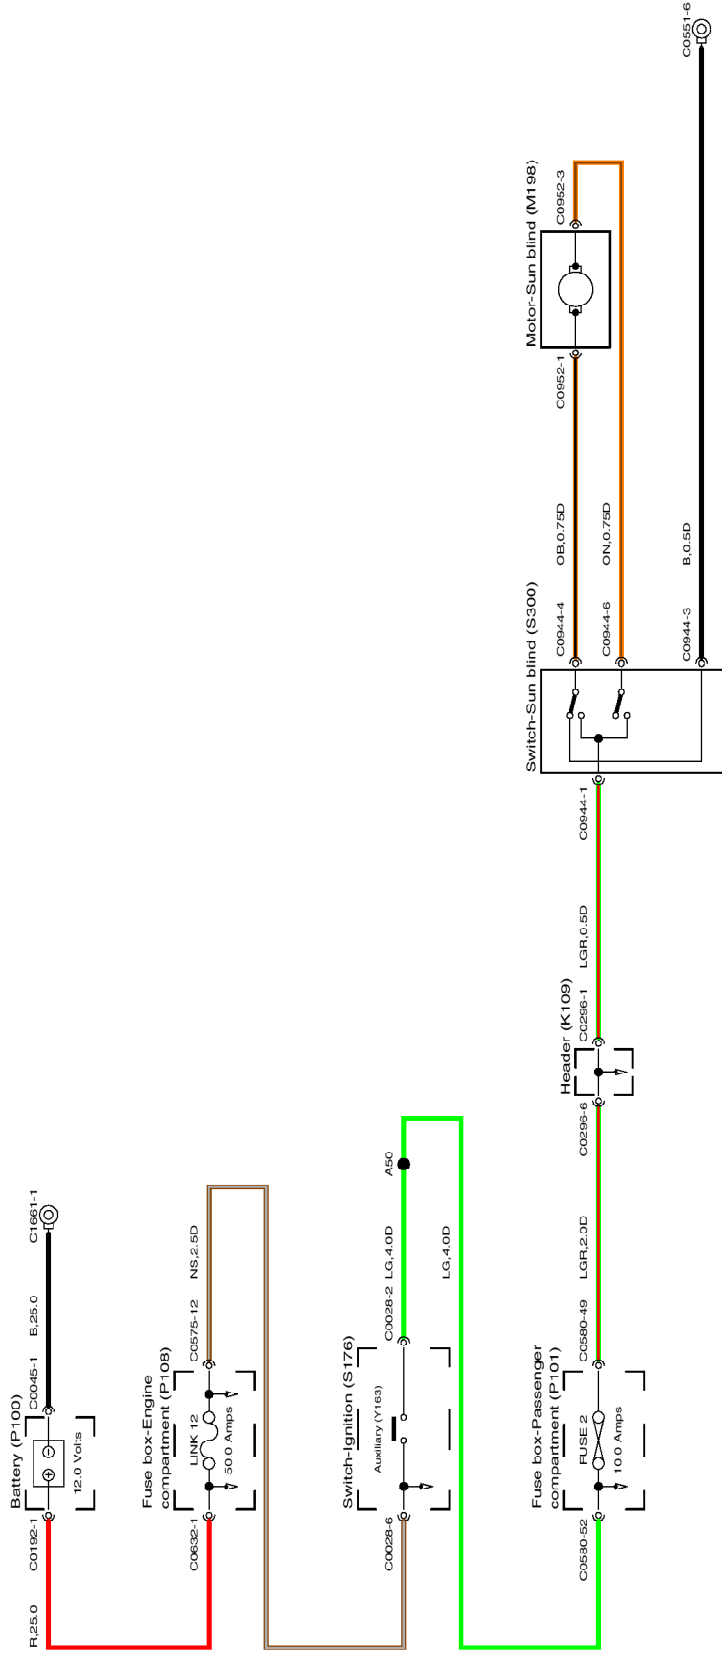


VWR404000-1

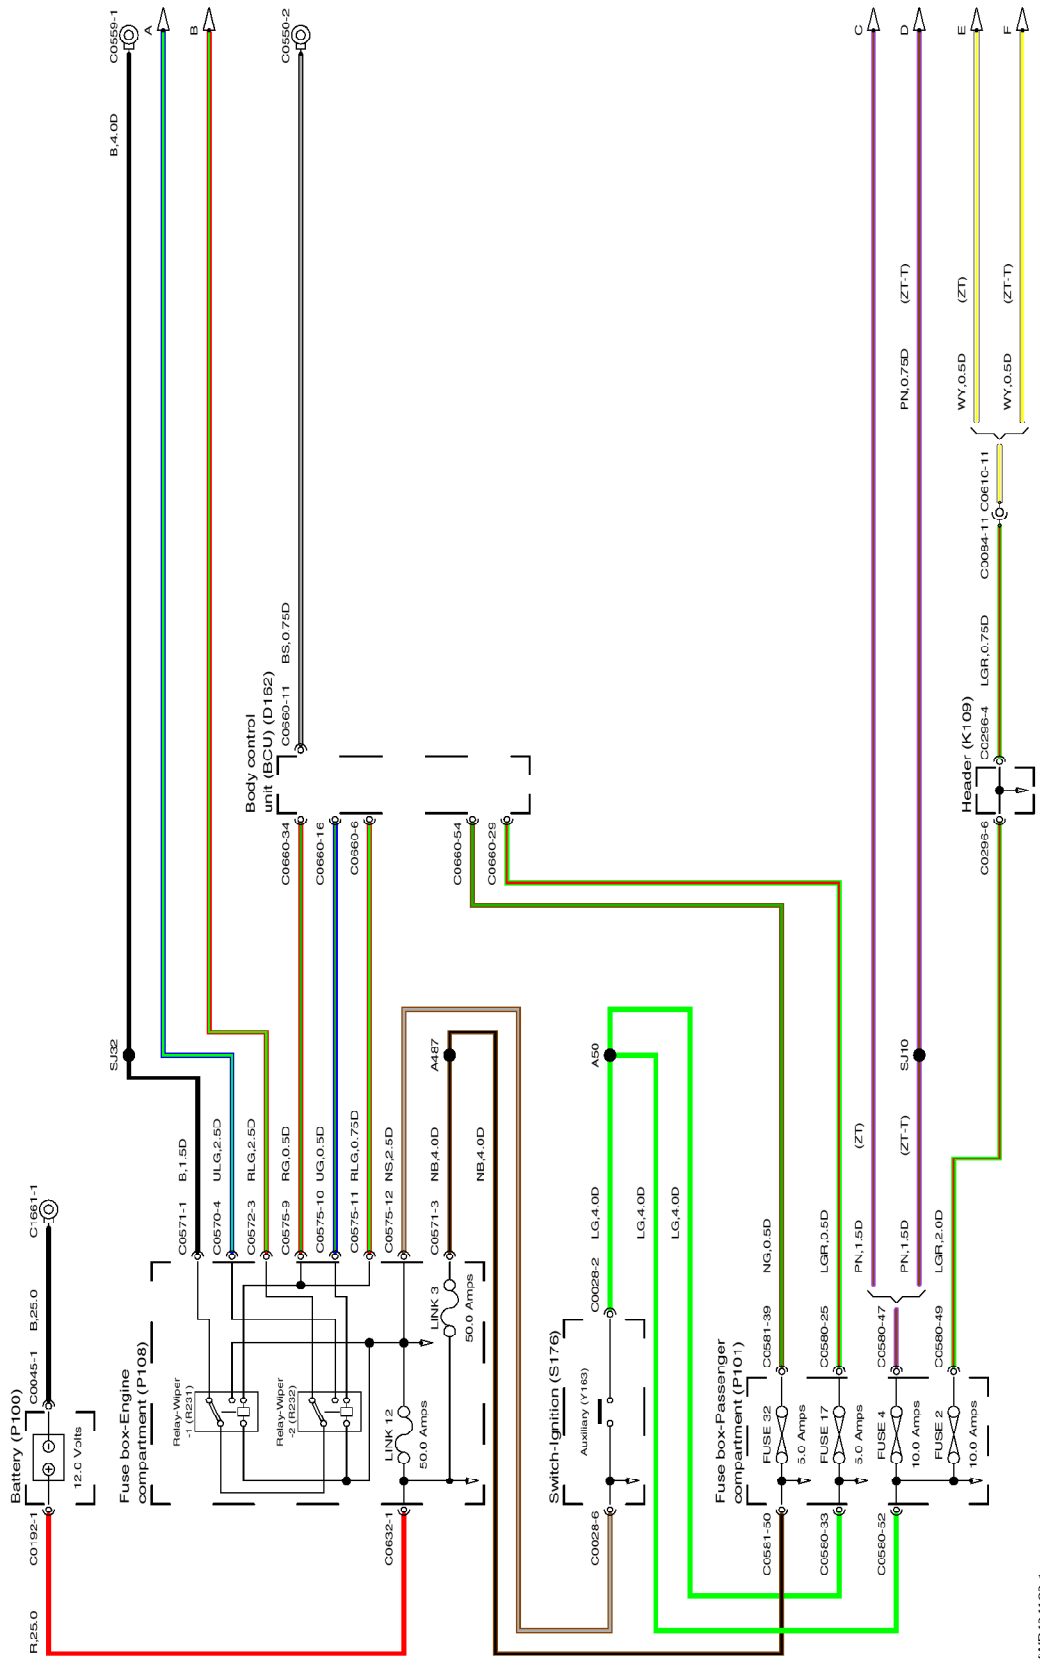


VWR404100-1

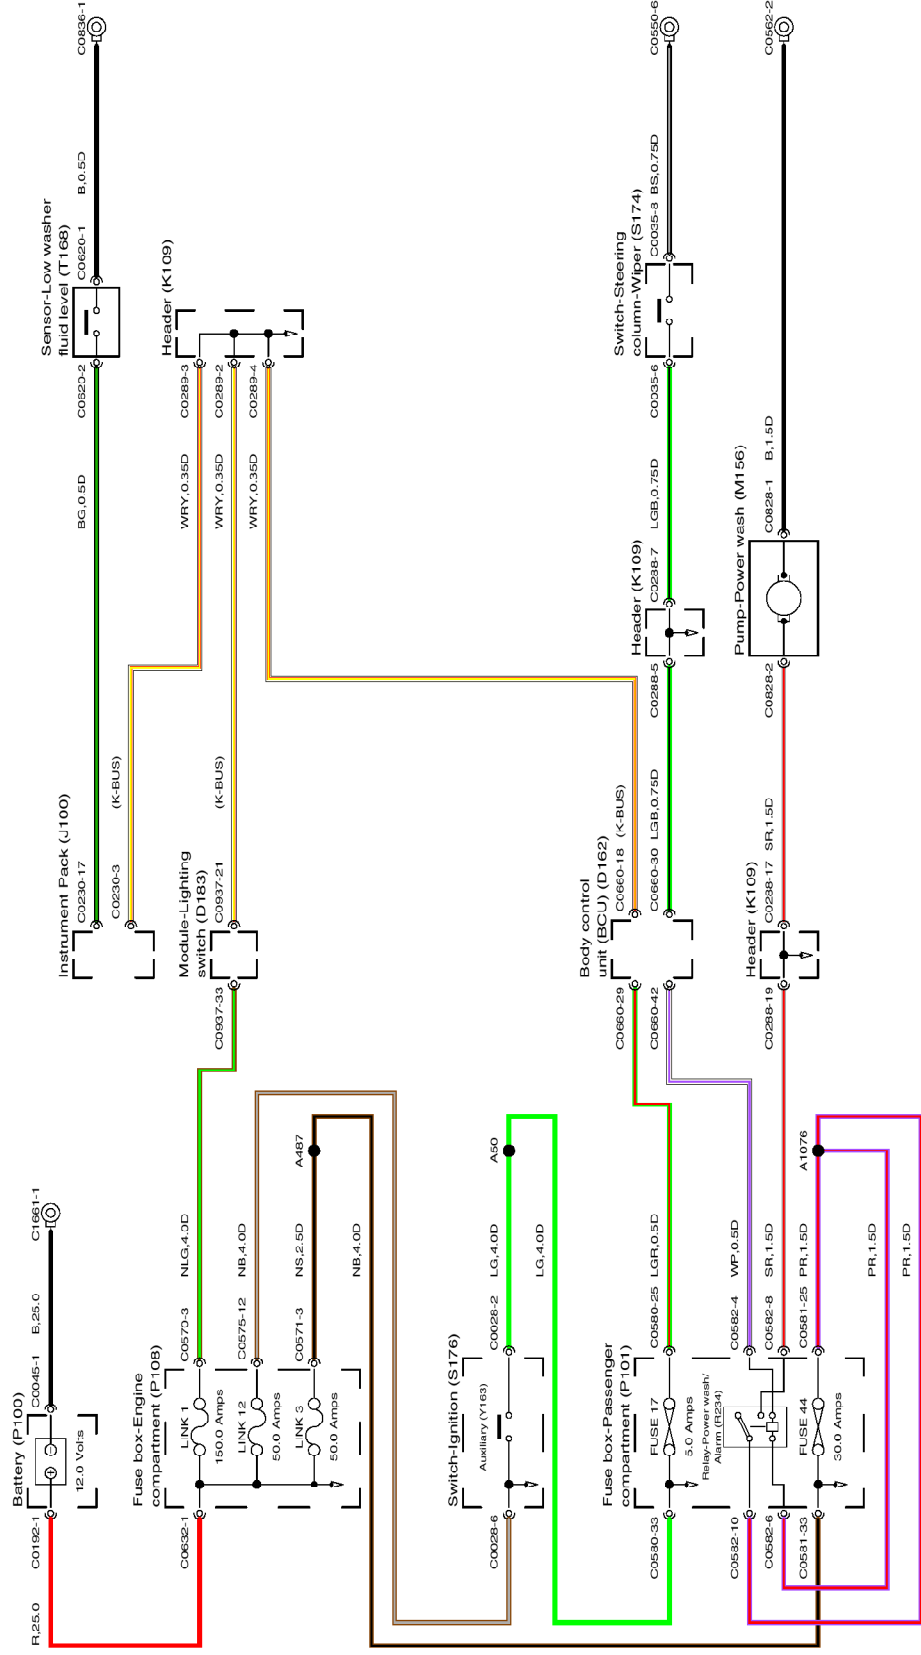


VWR403760-1

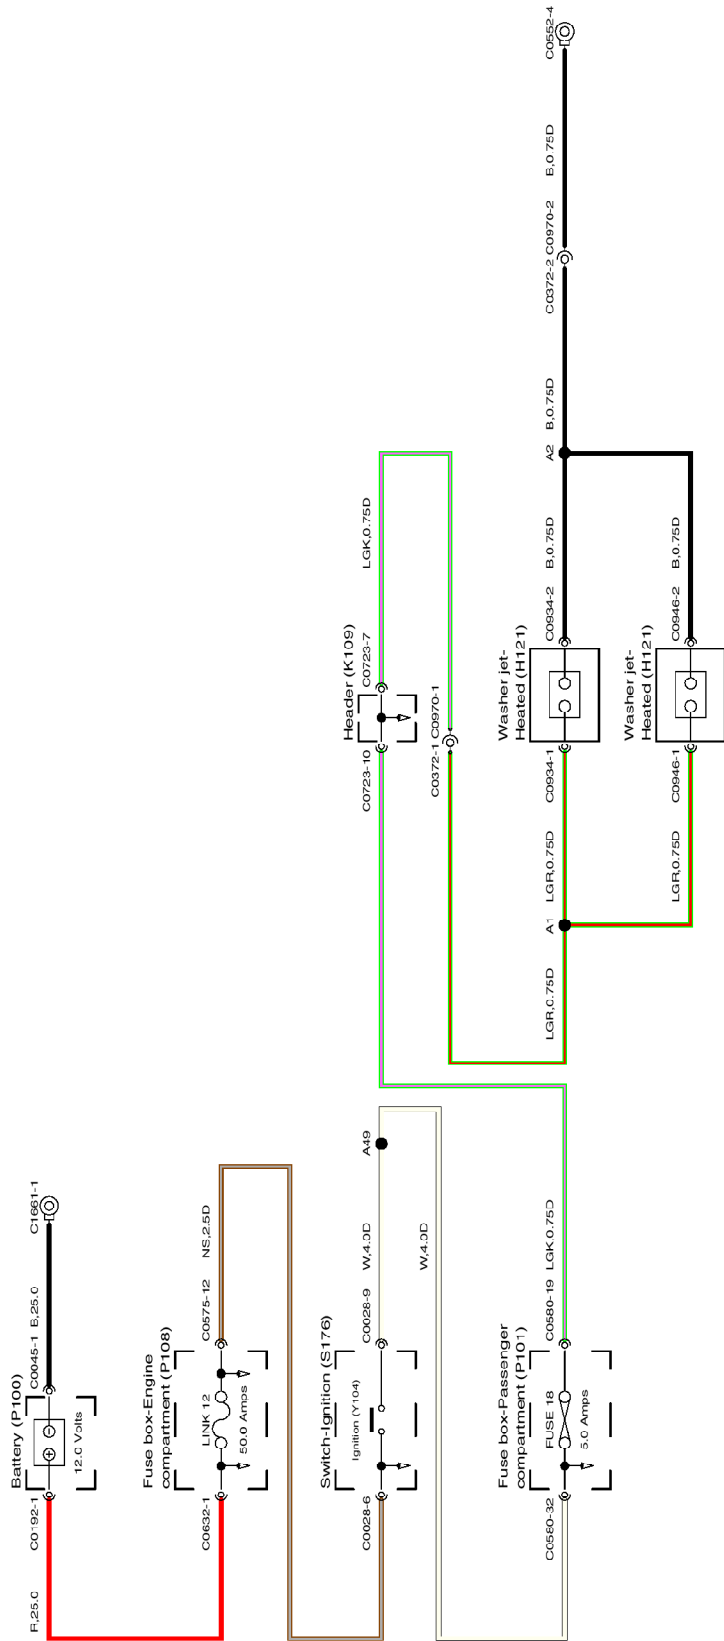


VWR403260-1

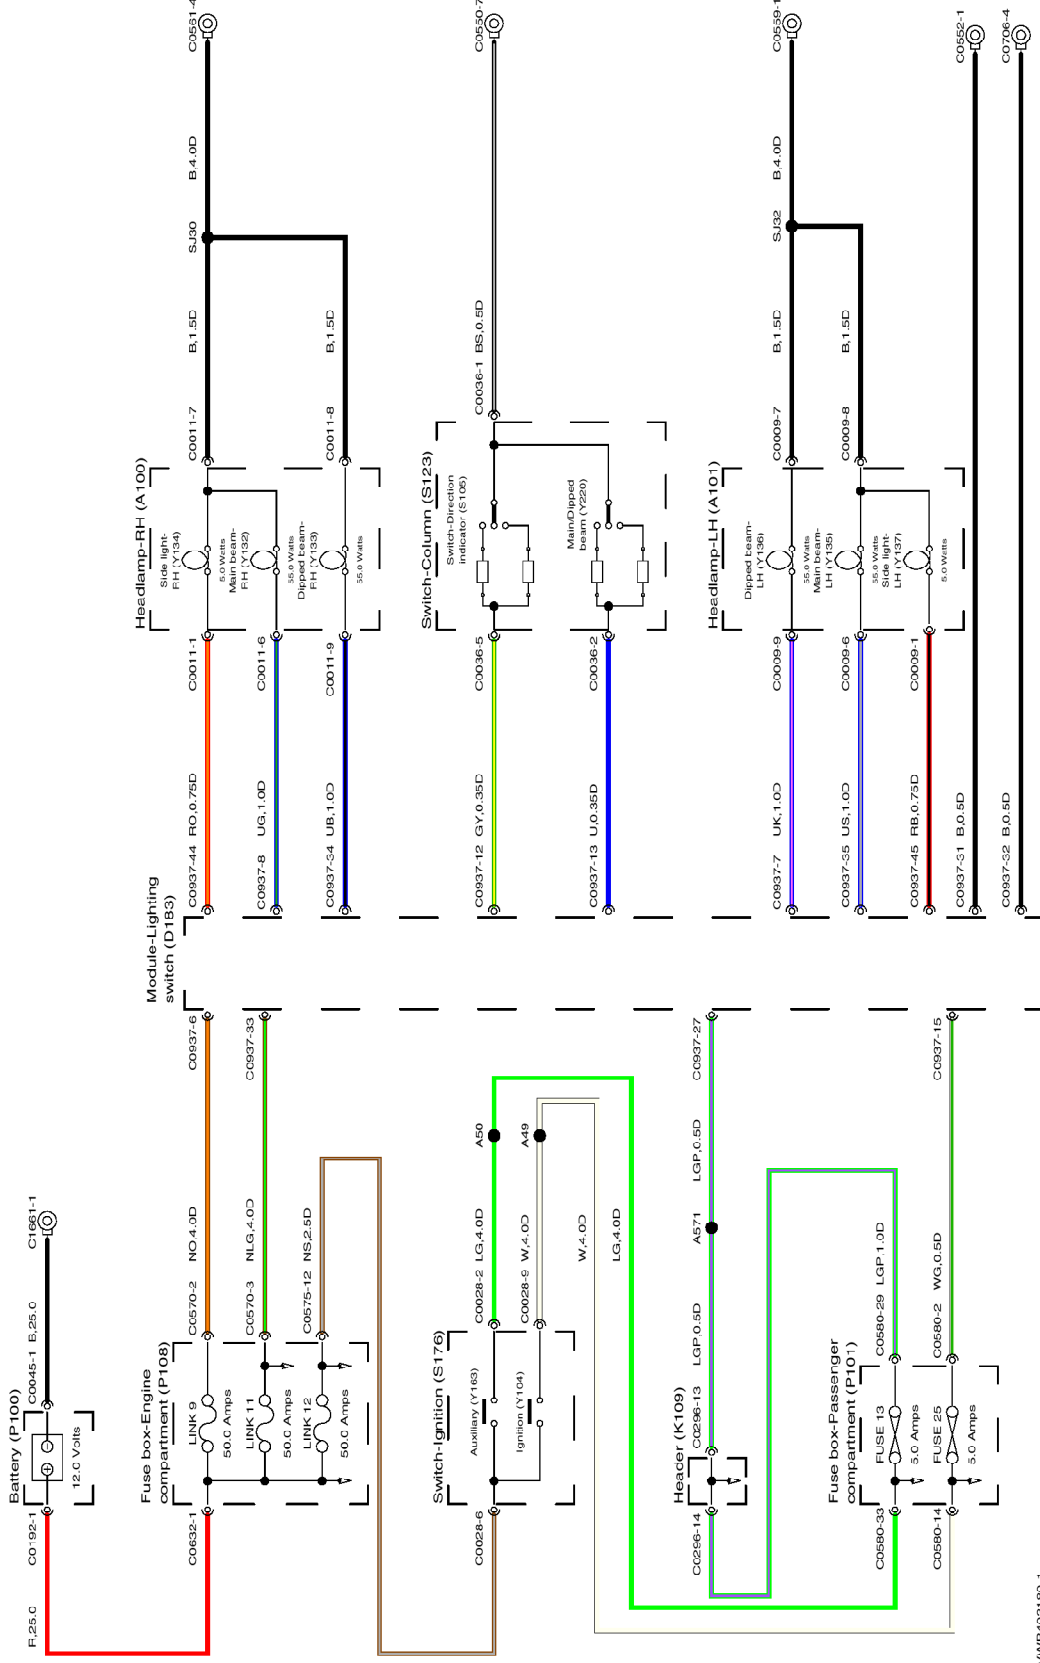


VWR403180-1

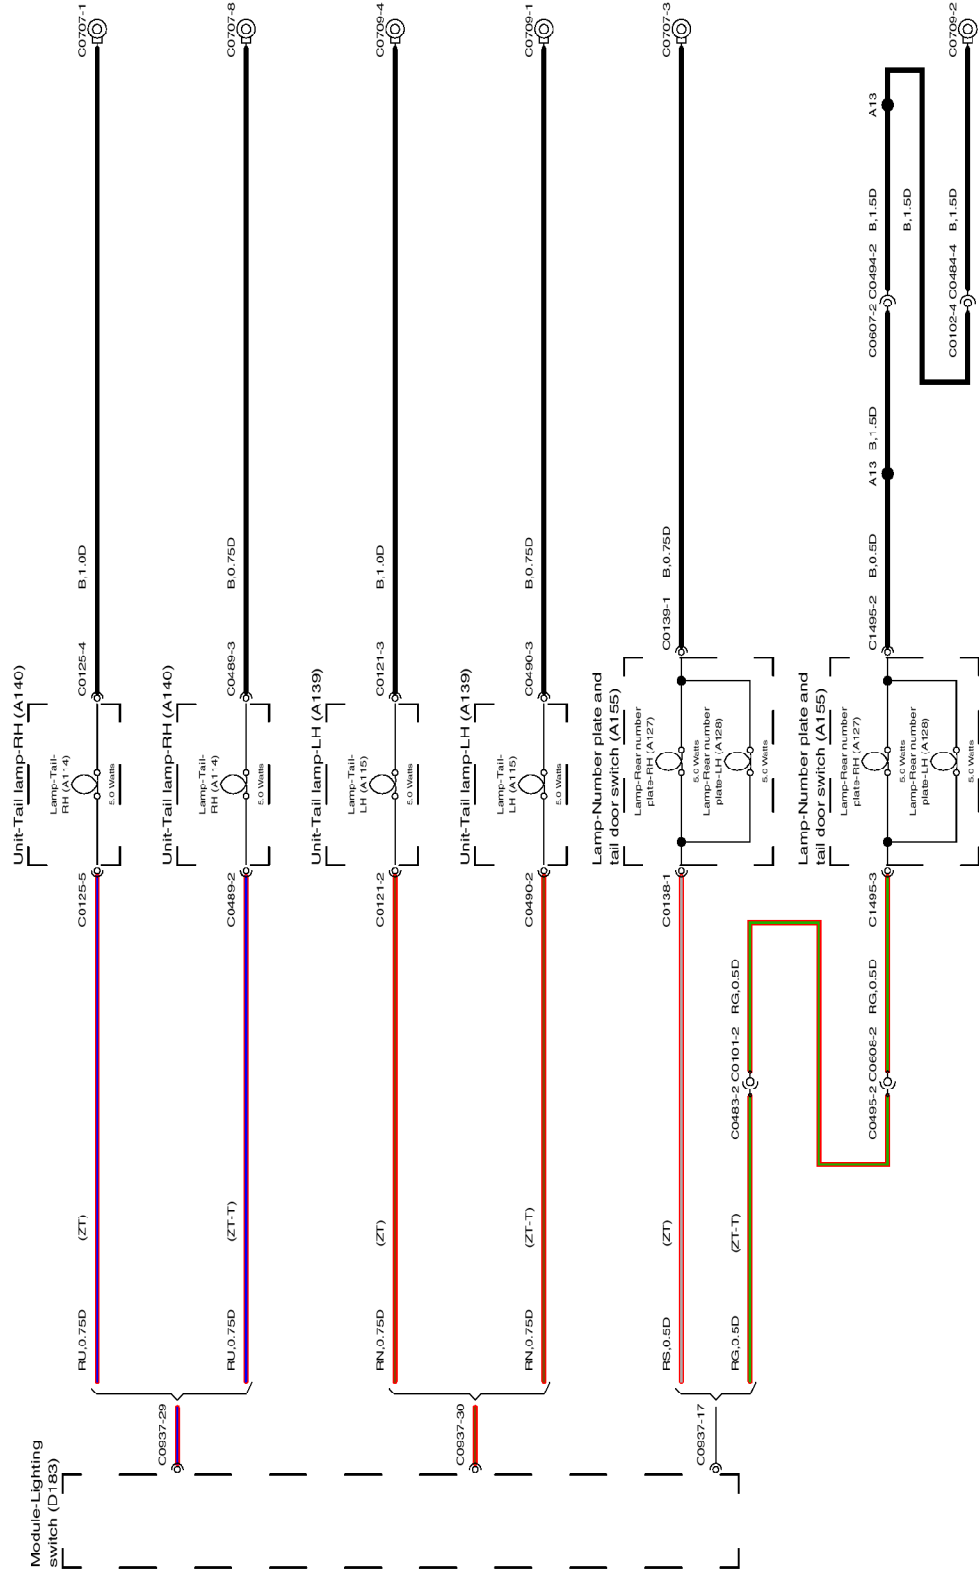


VWR403180-2

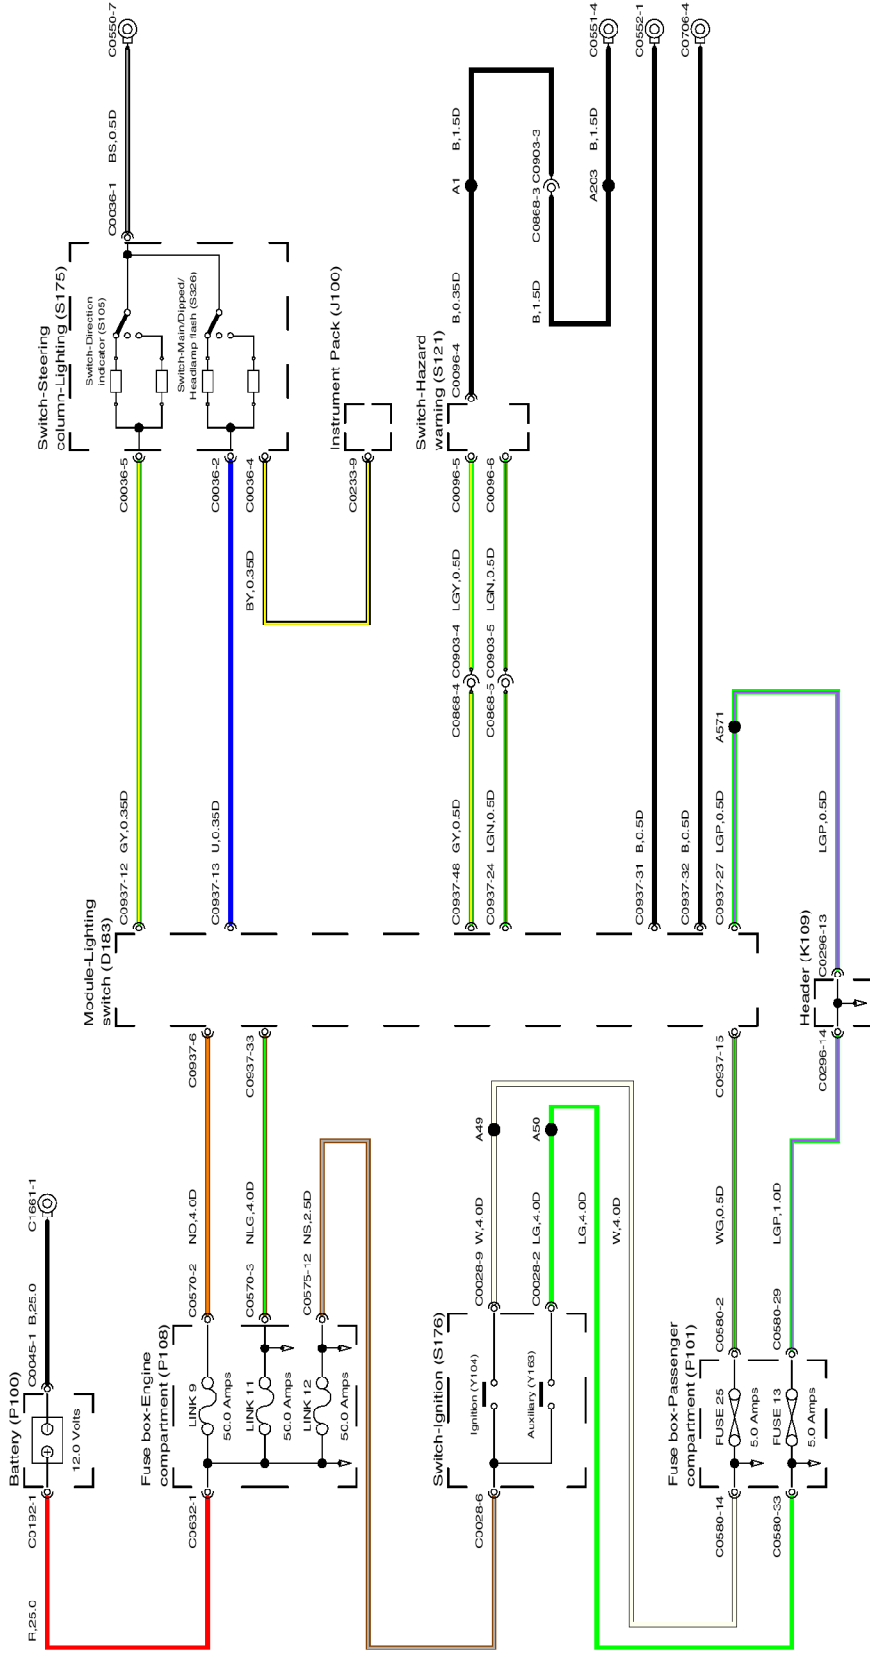


VWR403420-1

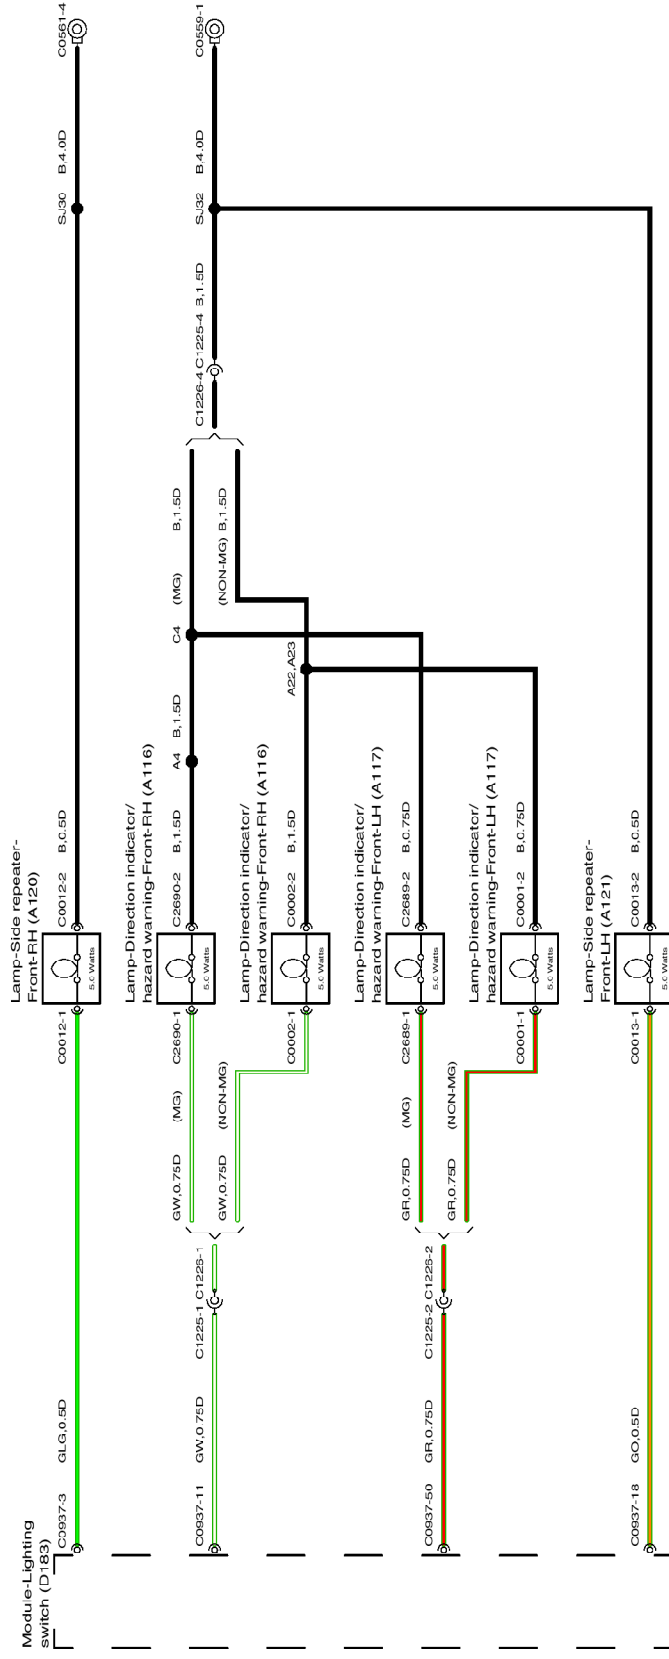


VWR403420-2

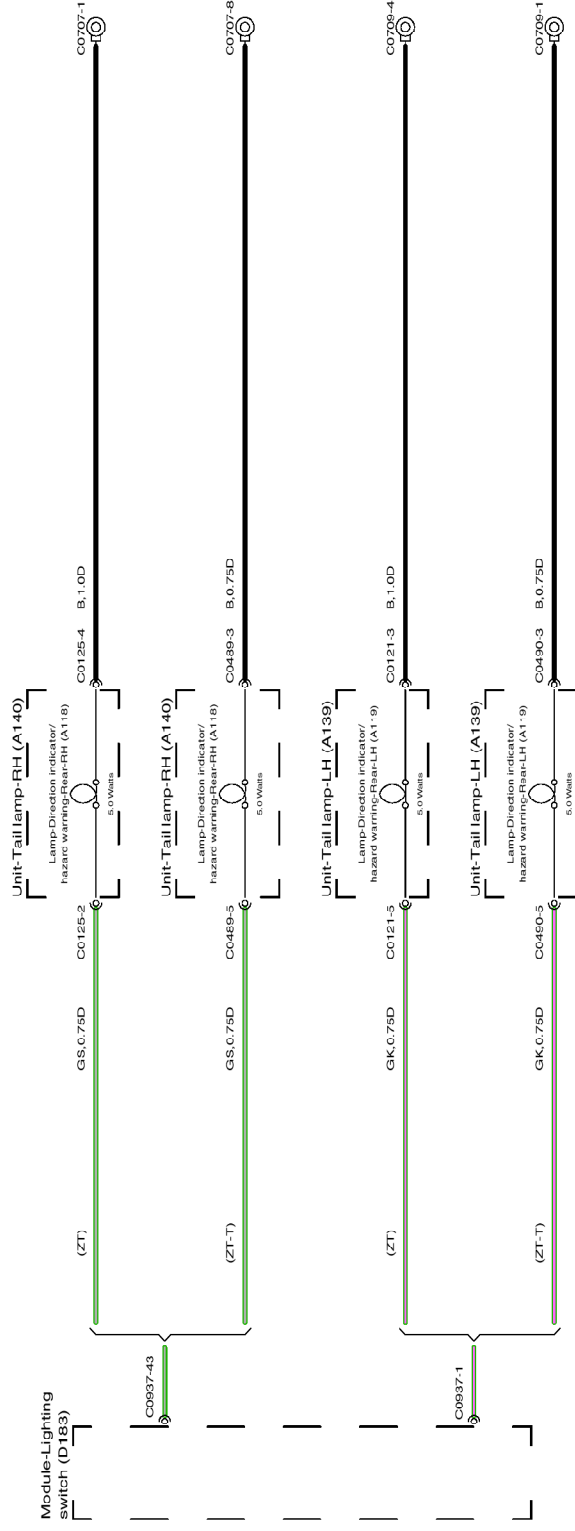


VWR403420-3

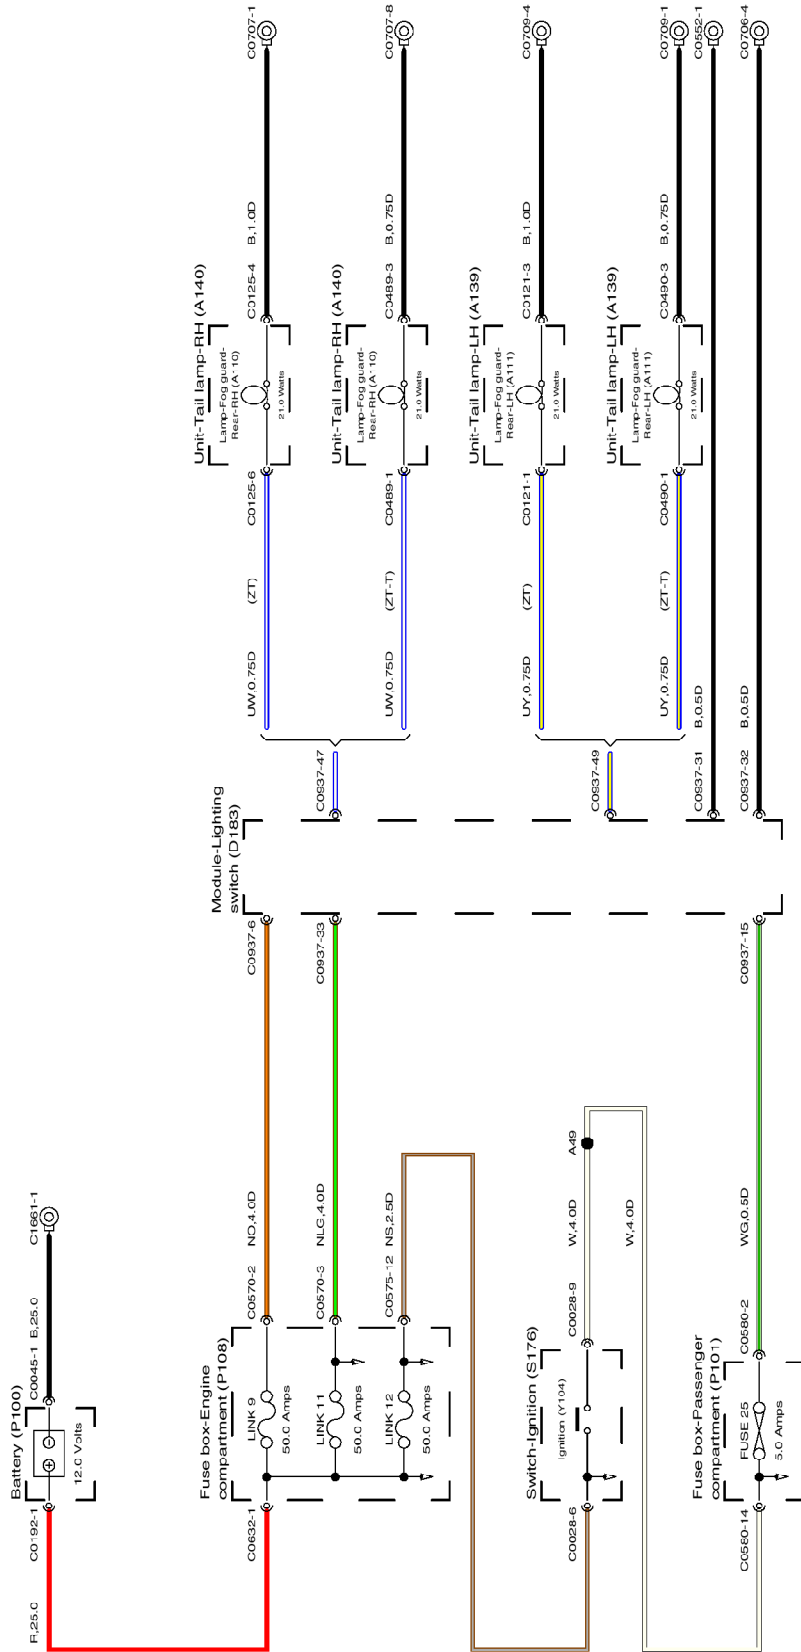


VWR403120-1

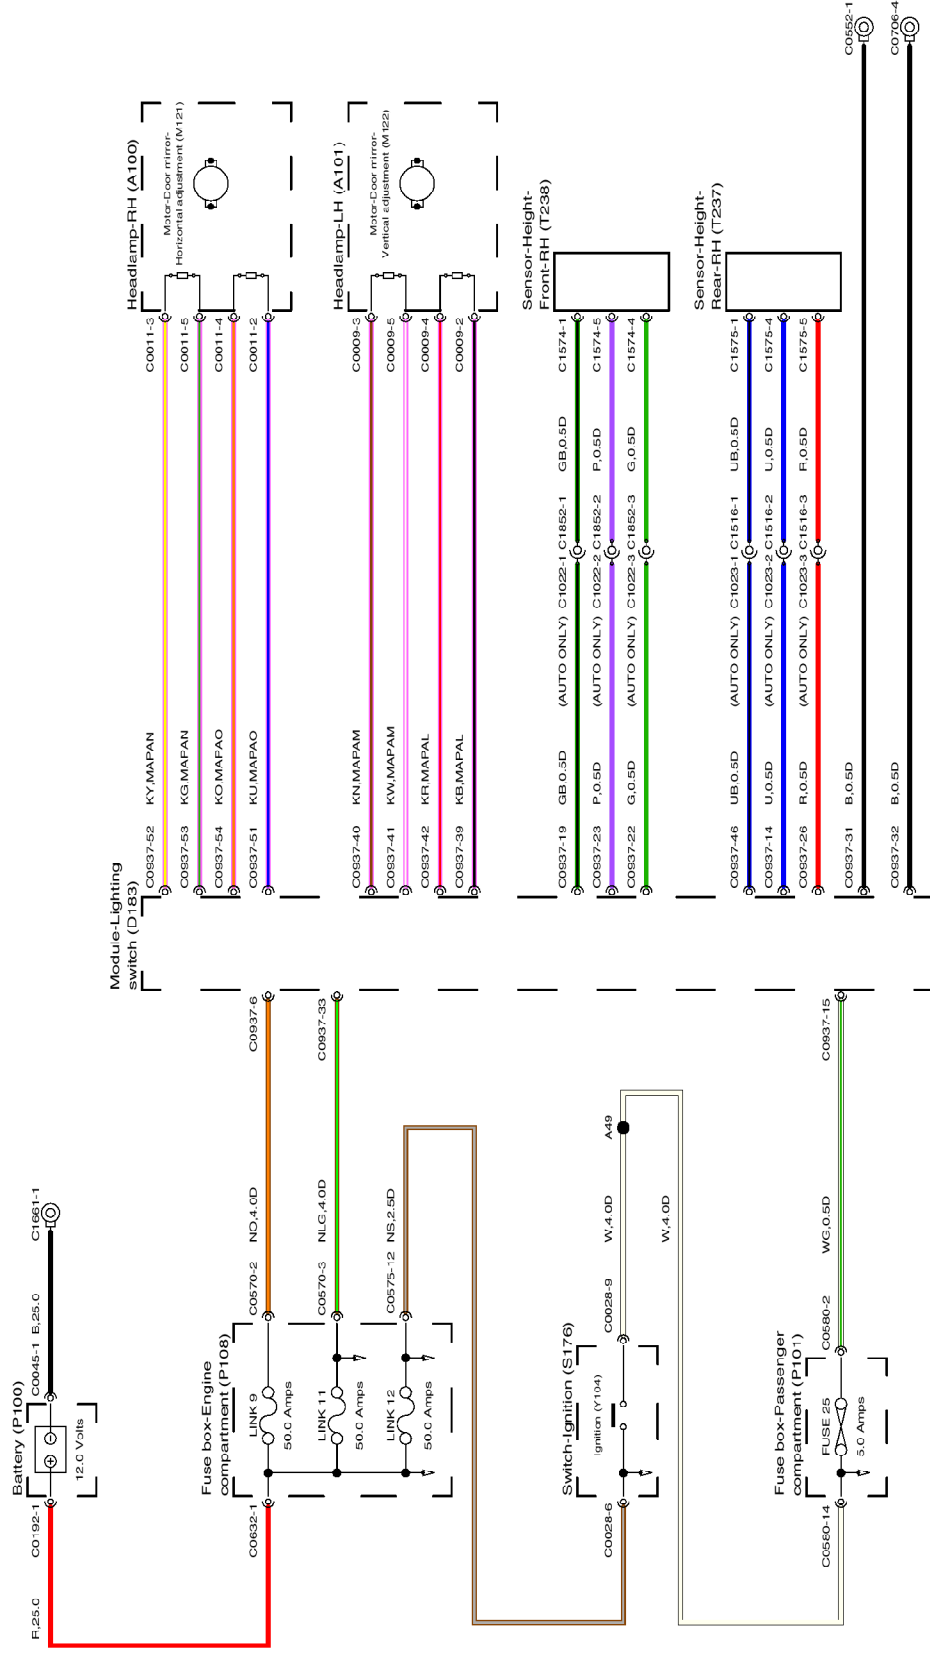


VWR403220-1

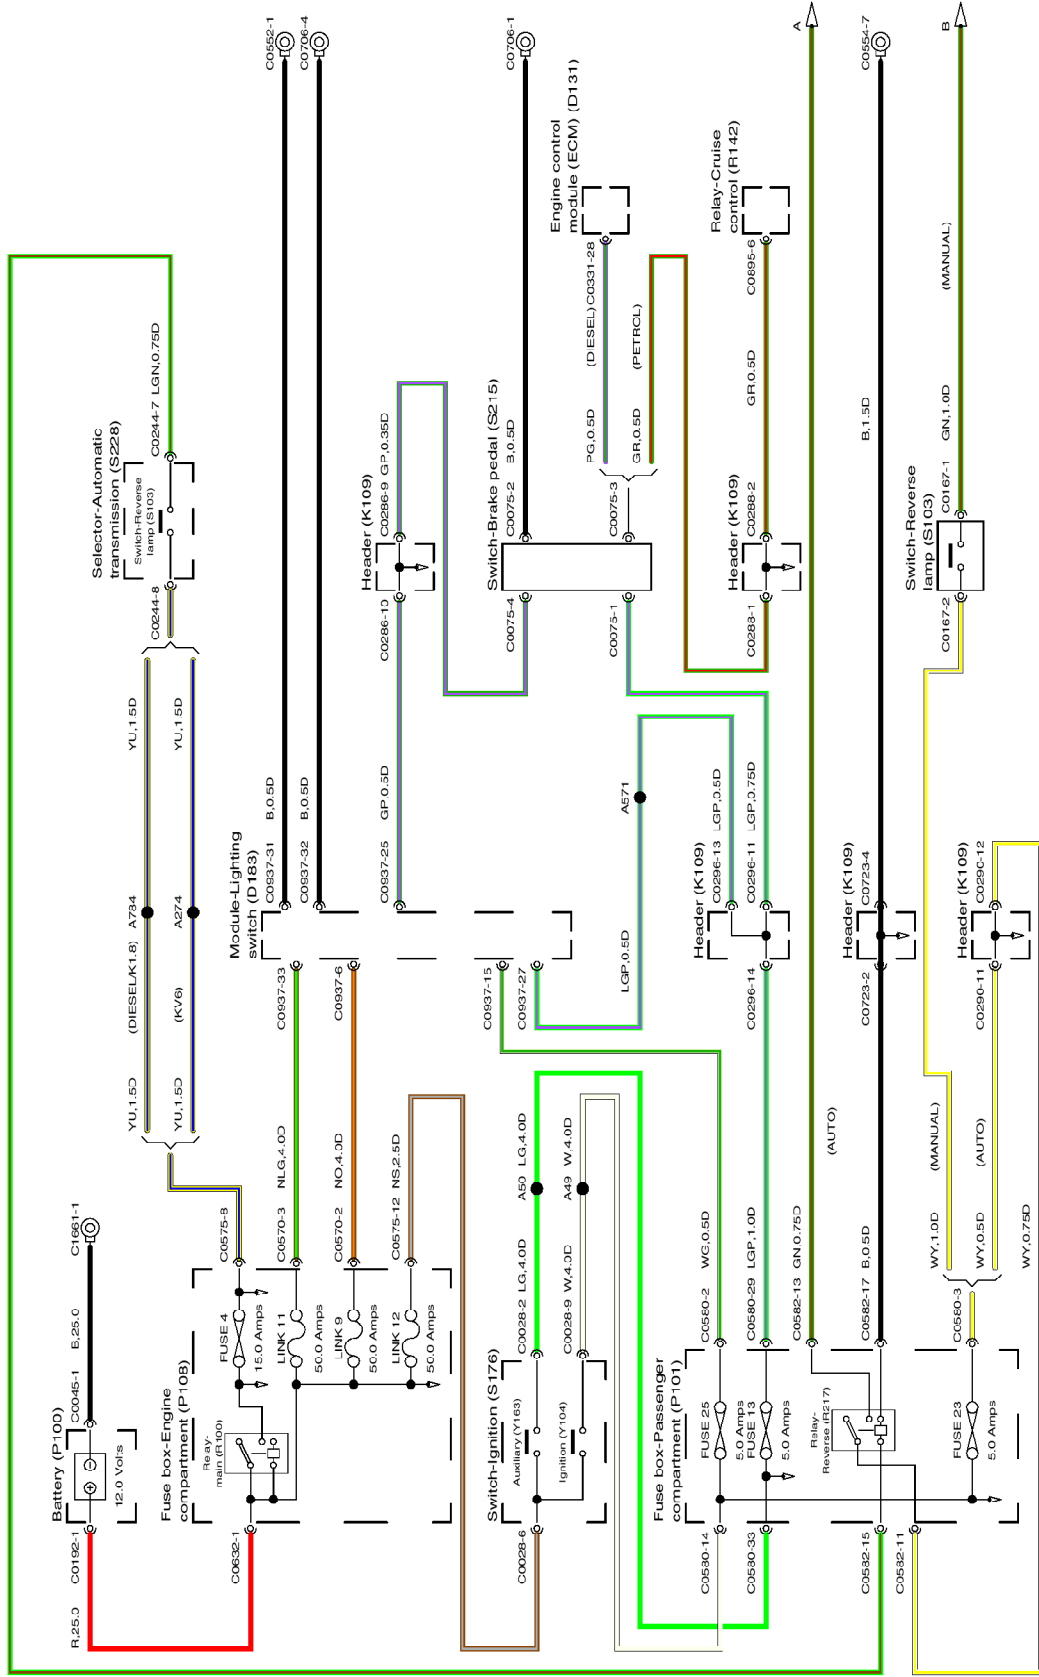


VWR402800-1

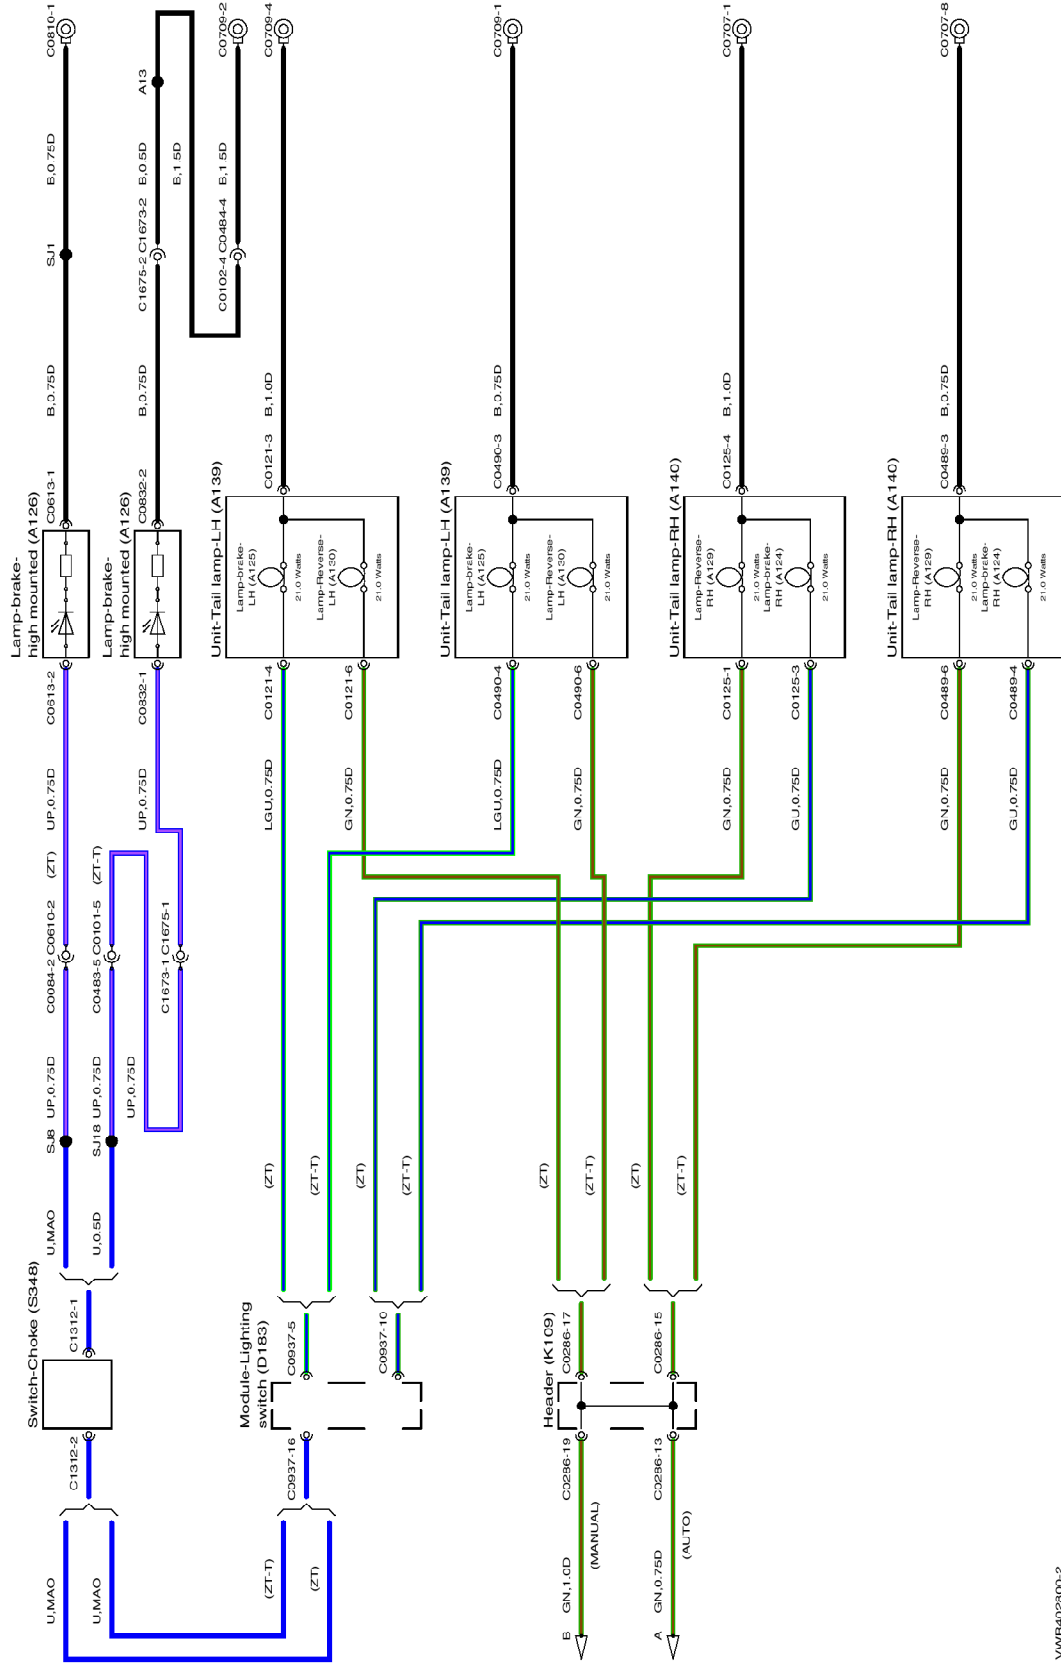


VWR42300-2

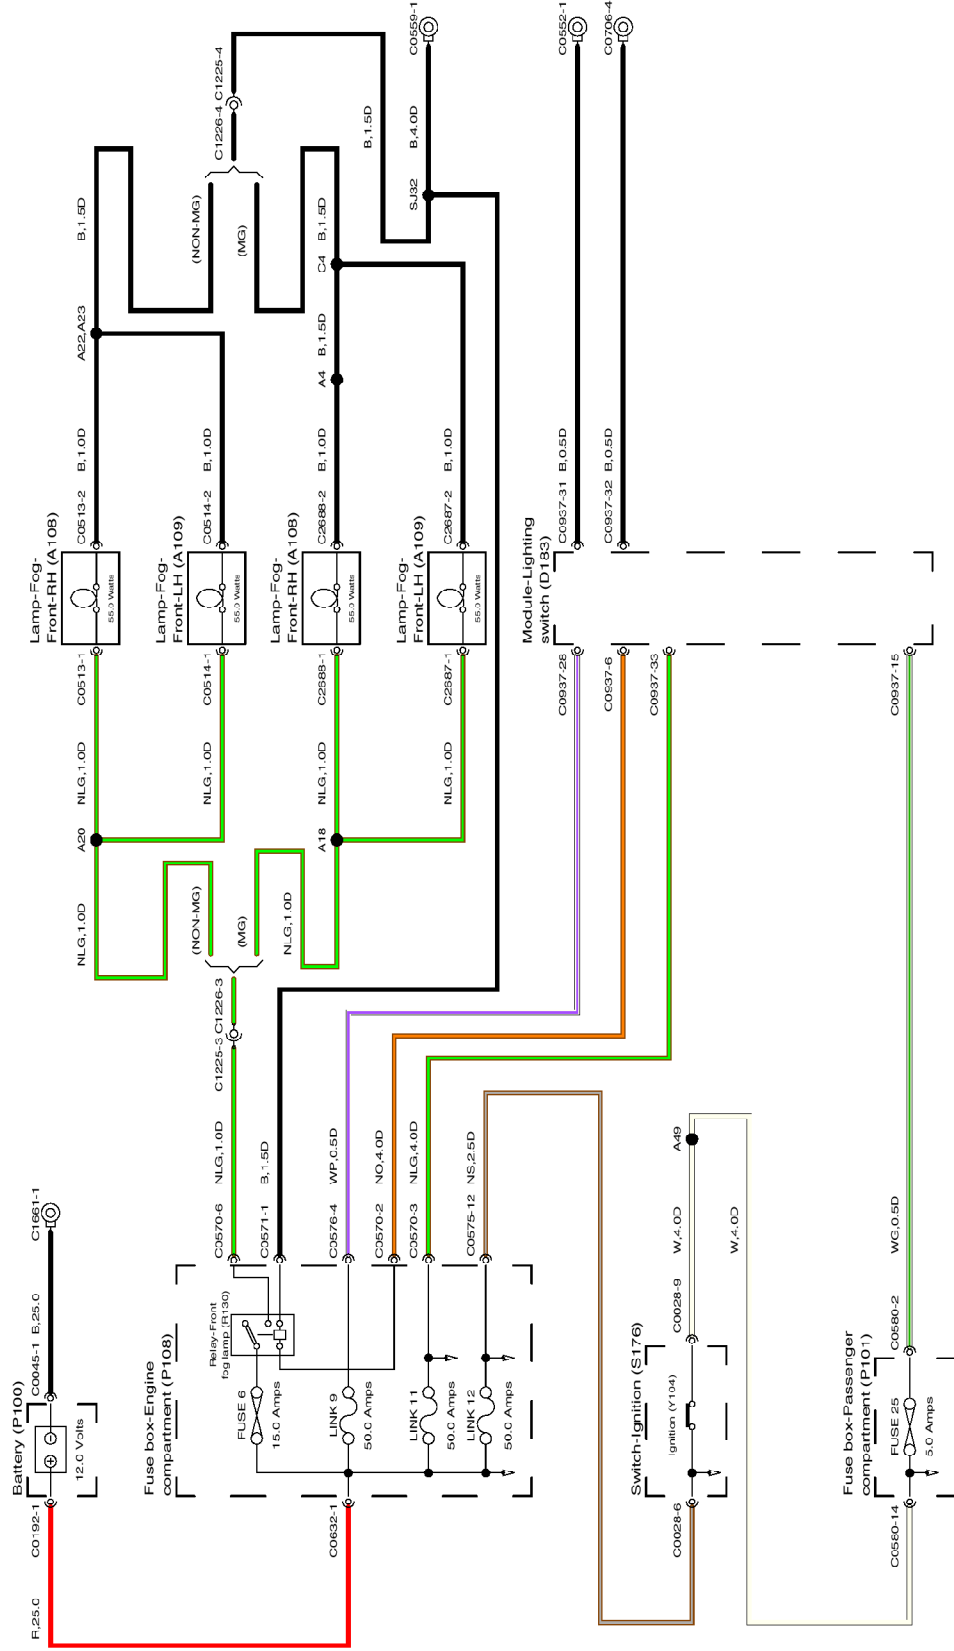


VWR403100-1

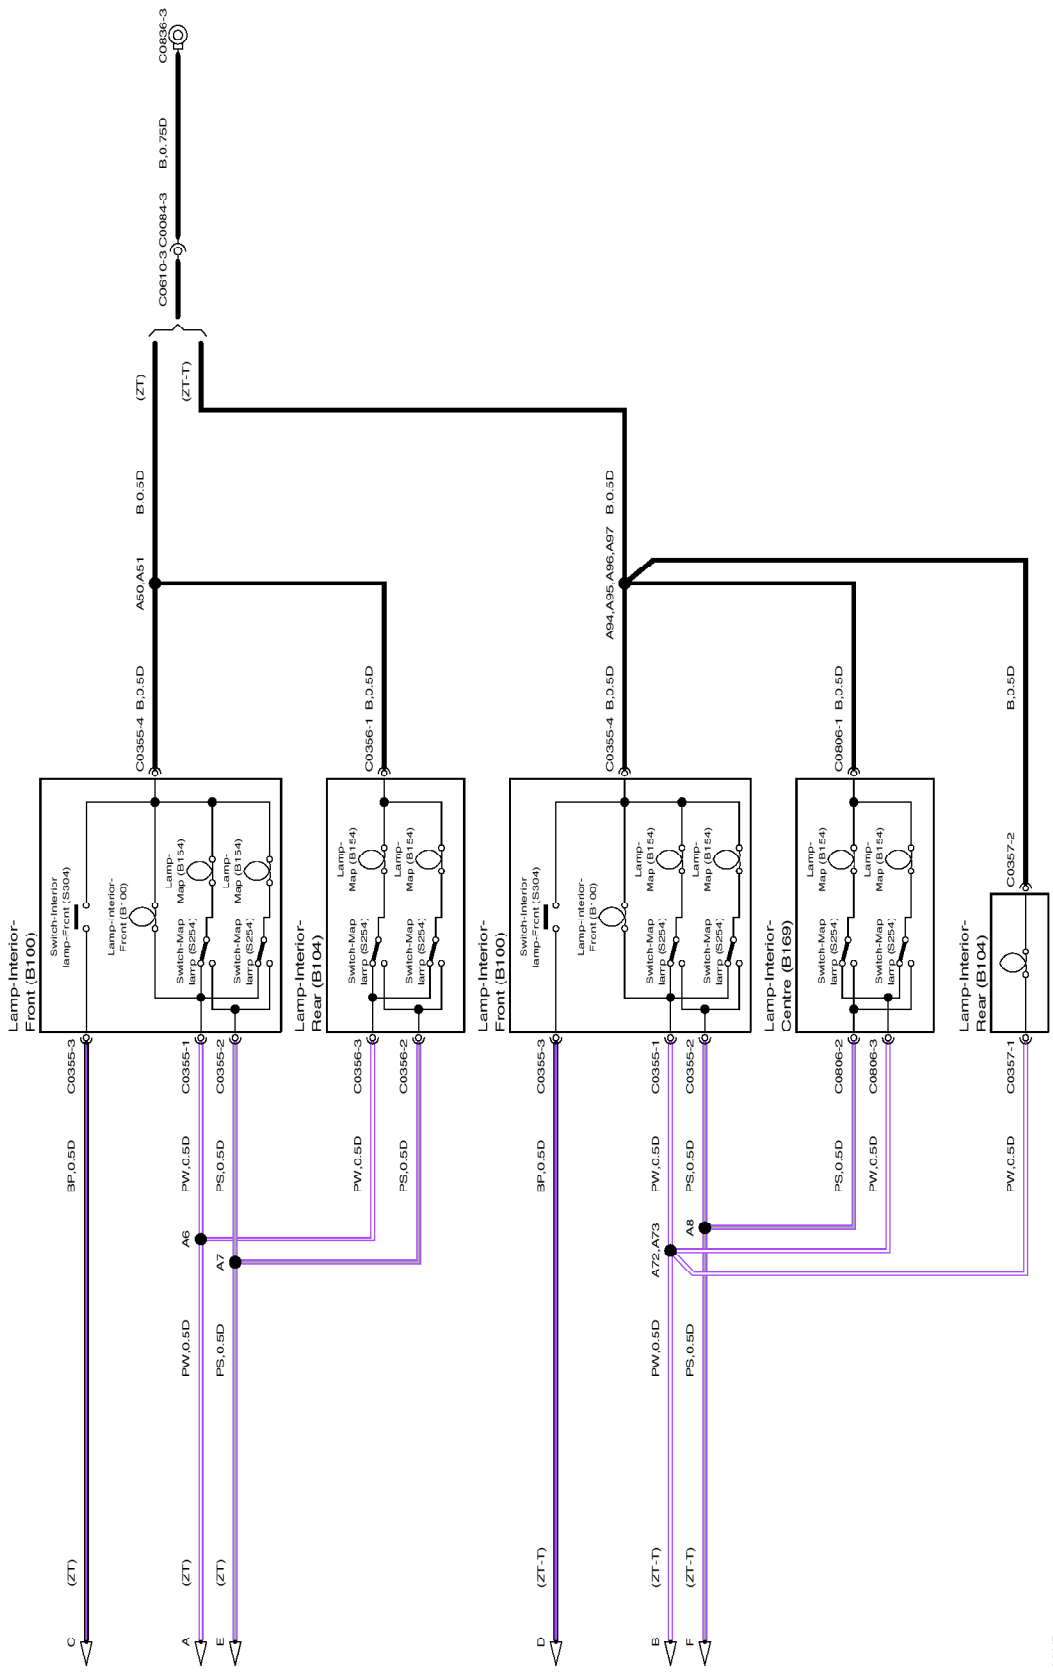


VWR403480-2

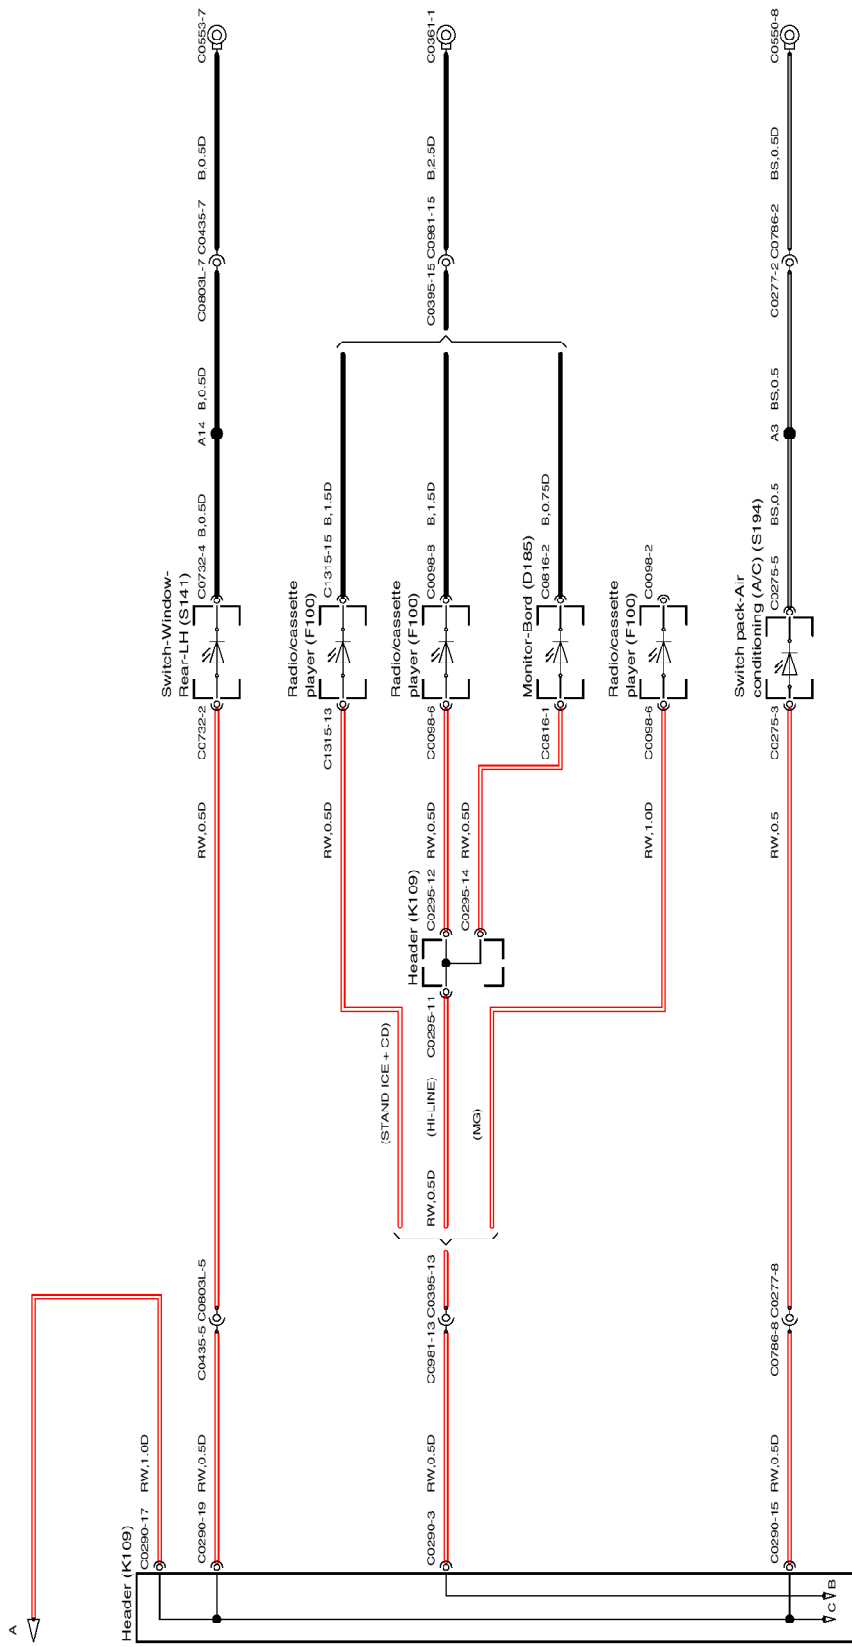


VWR403460-3

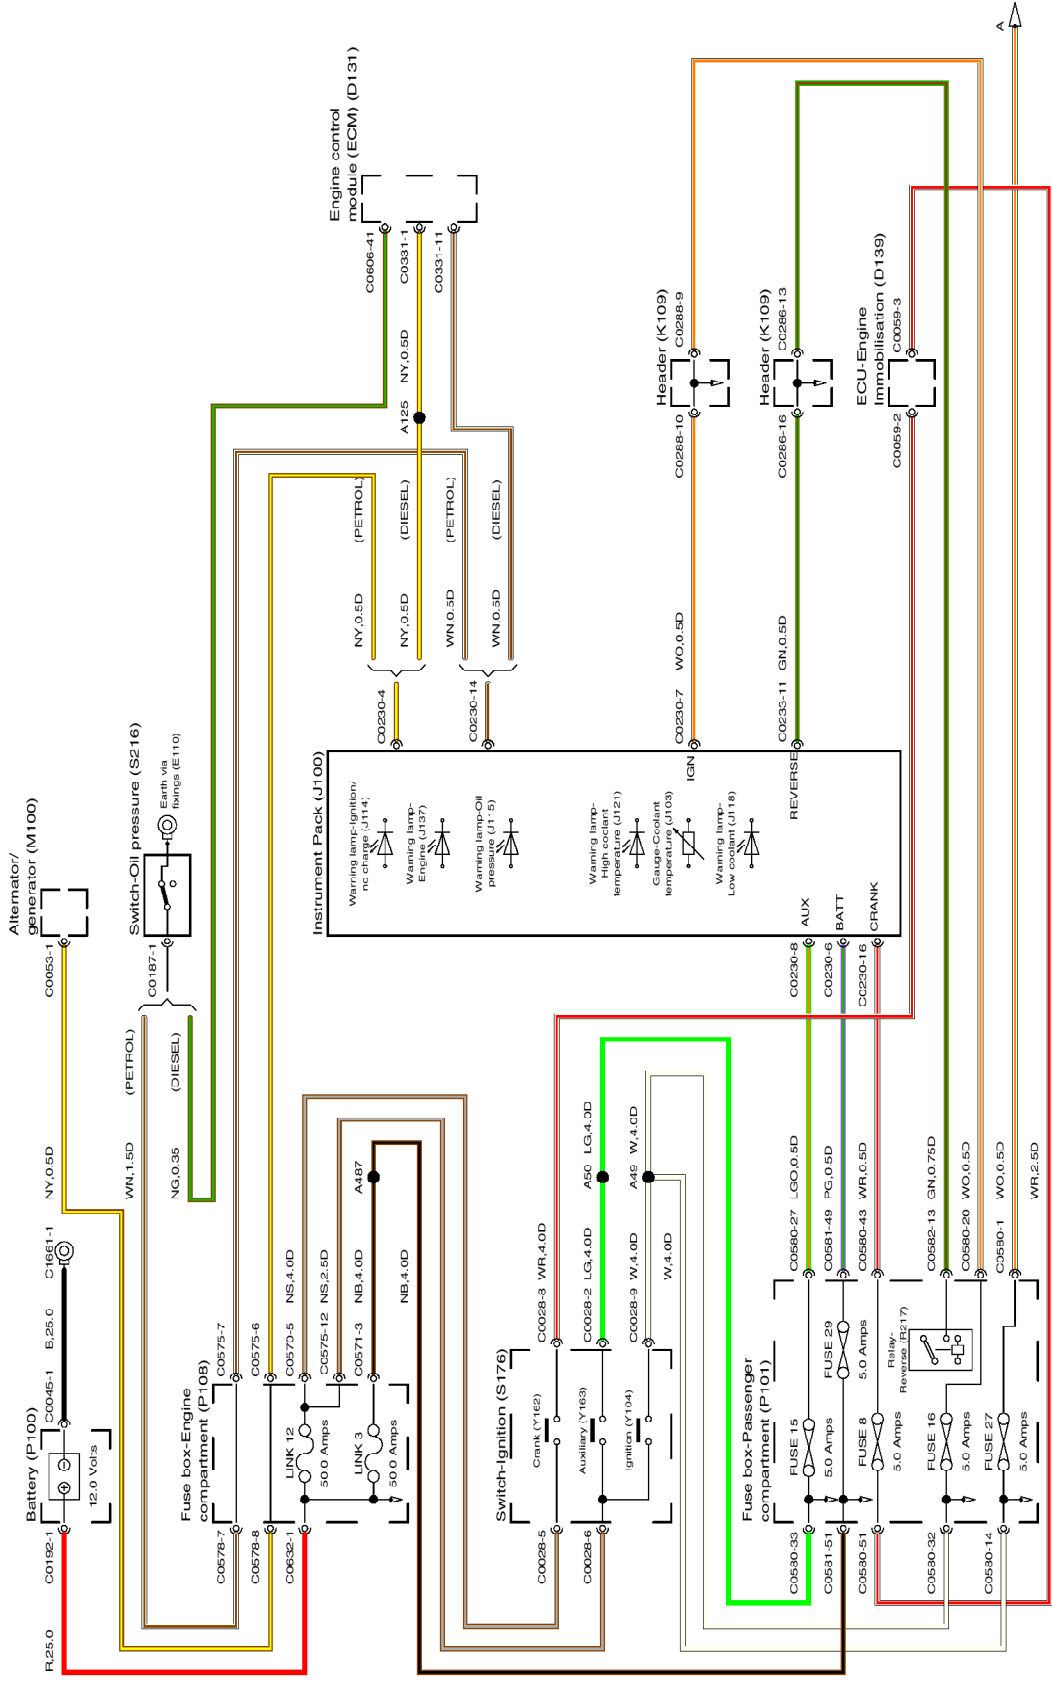


VWR403440-1

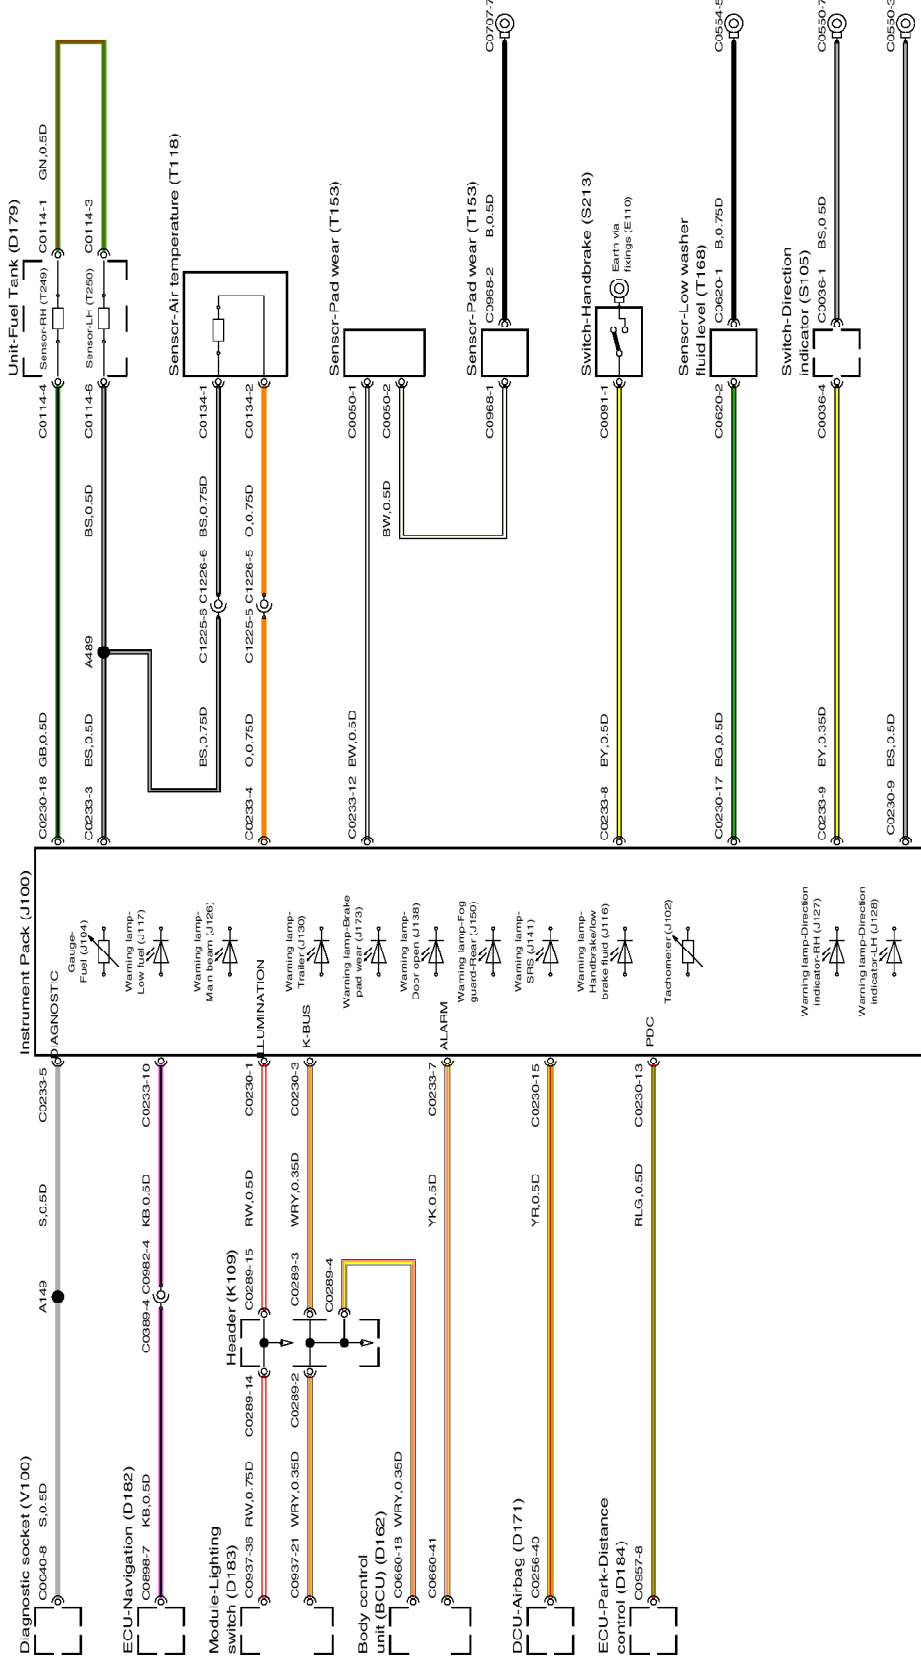


VWR403440-2

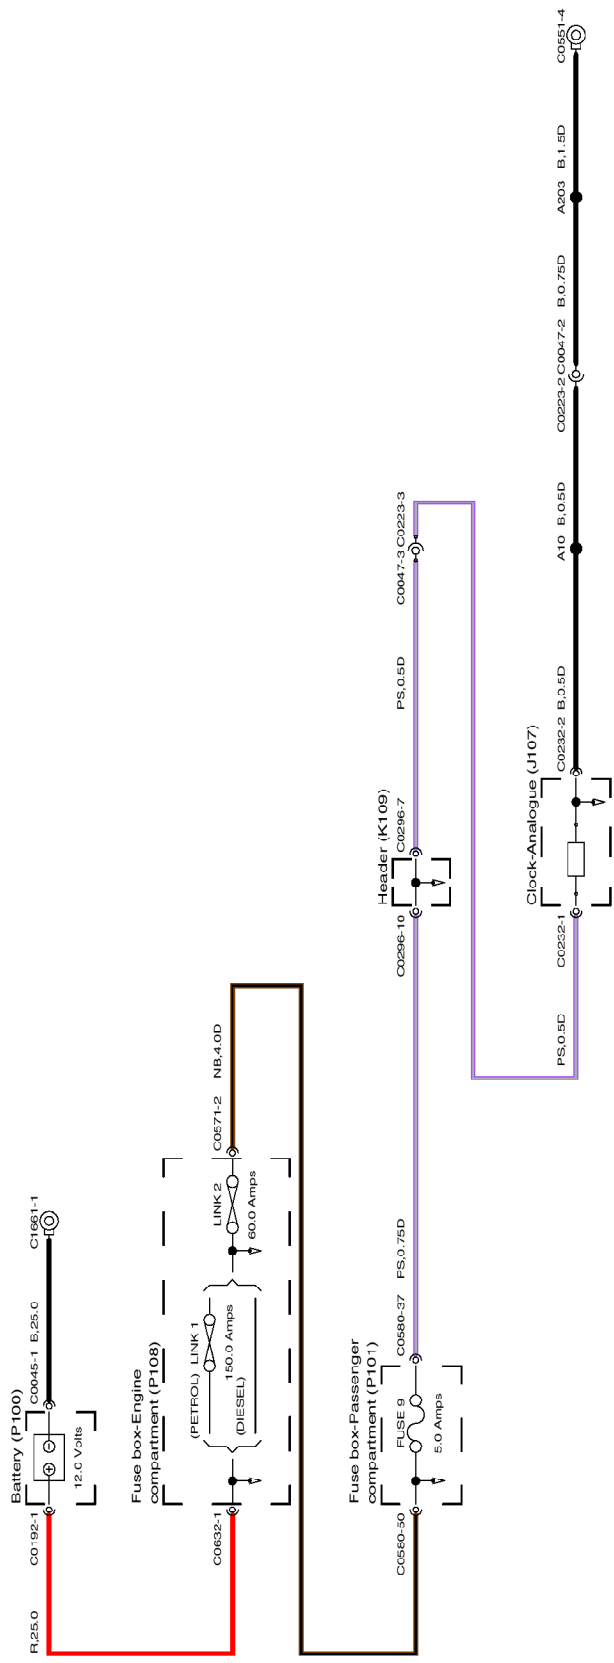


VWR402340-1

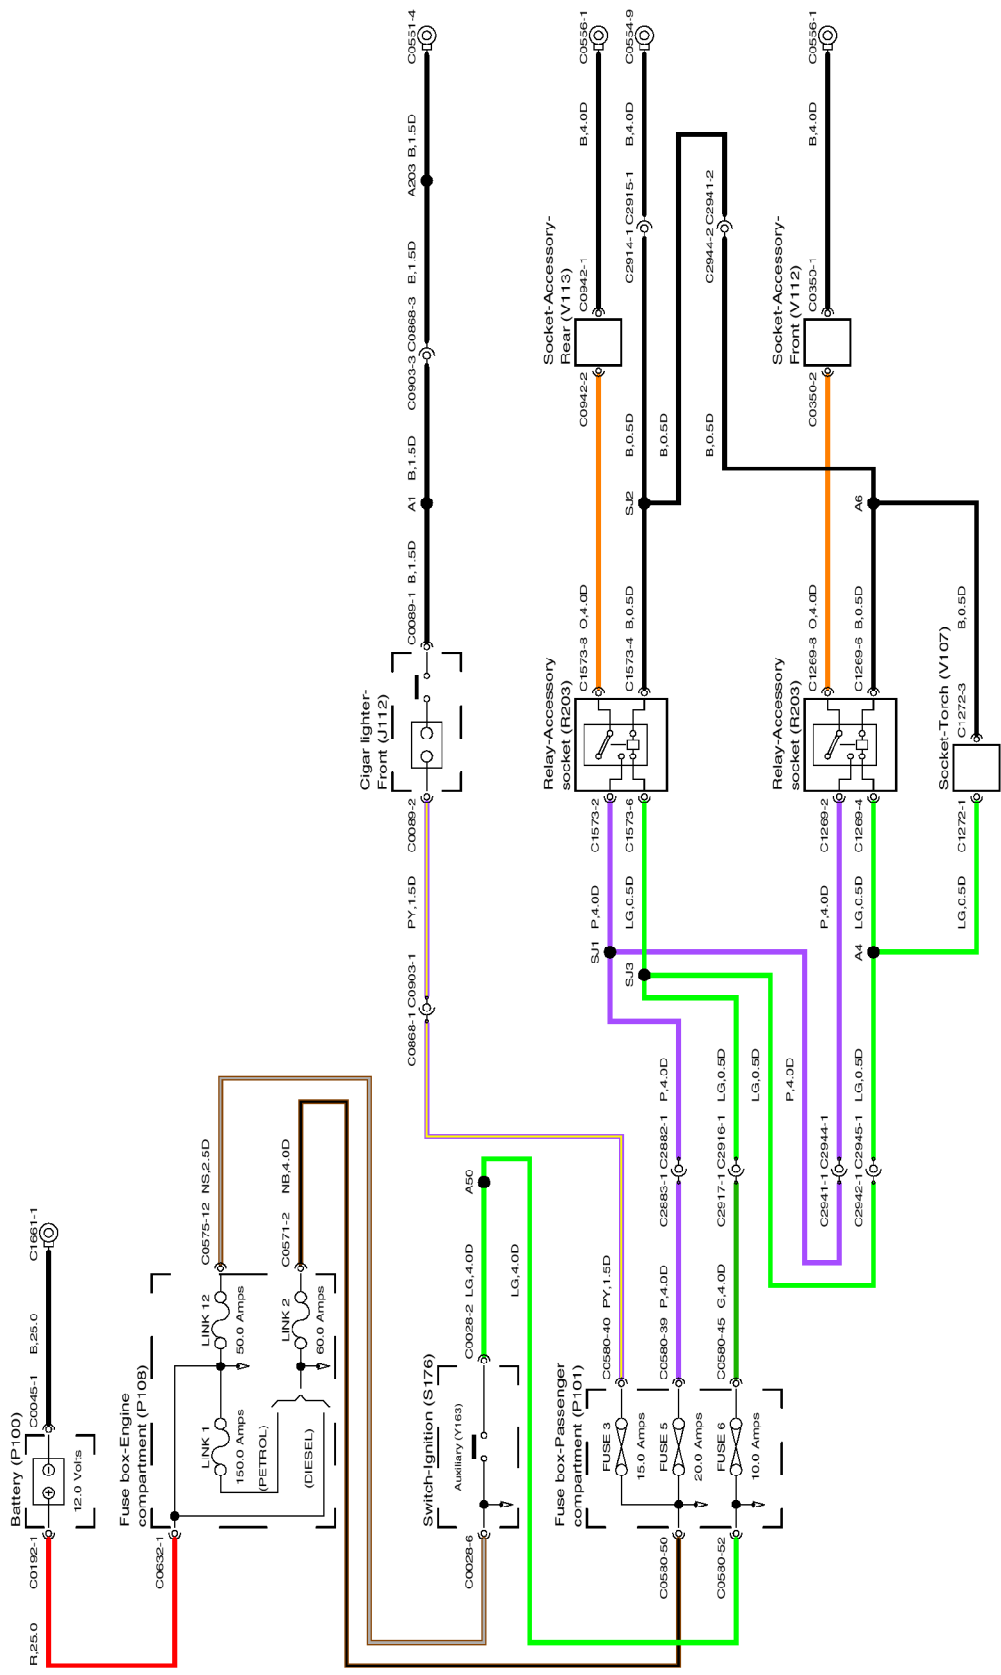


VWR402720-1

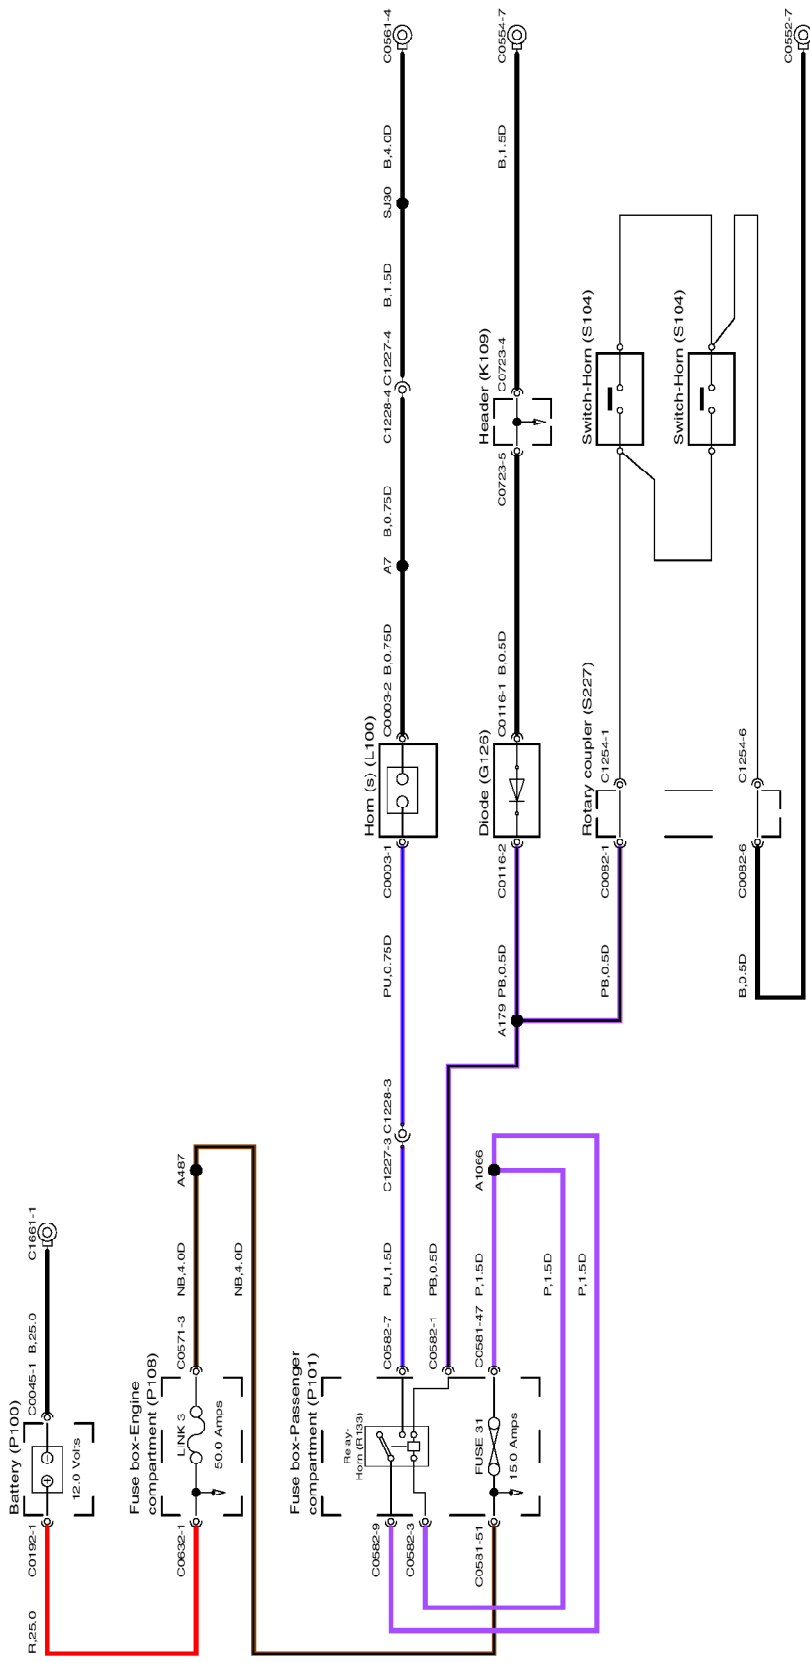


VWR403280-1

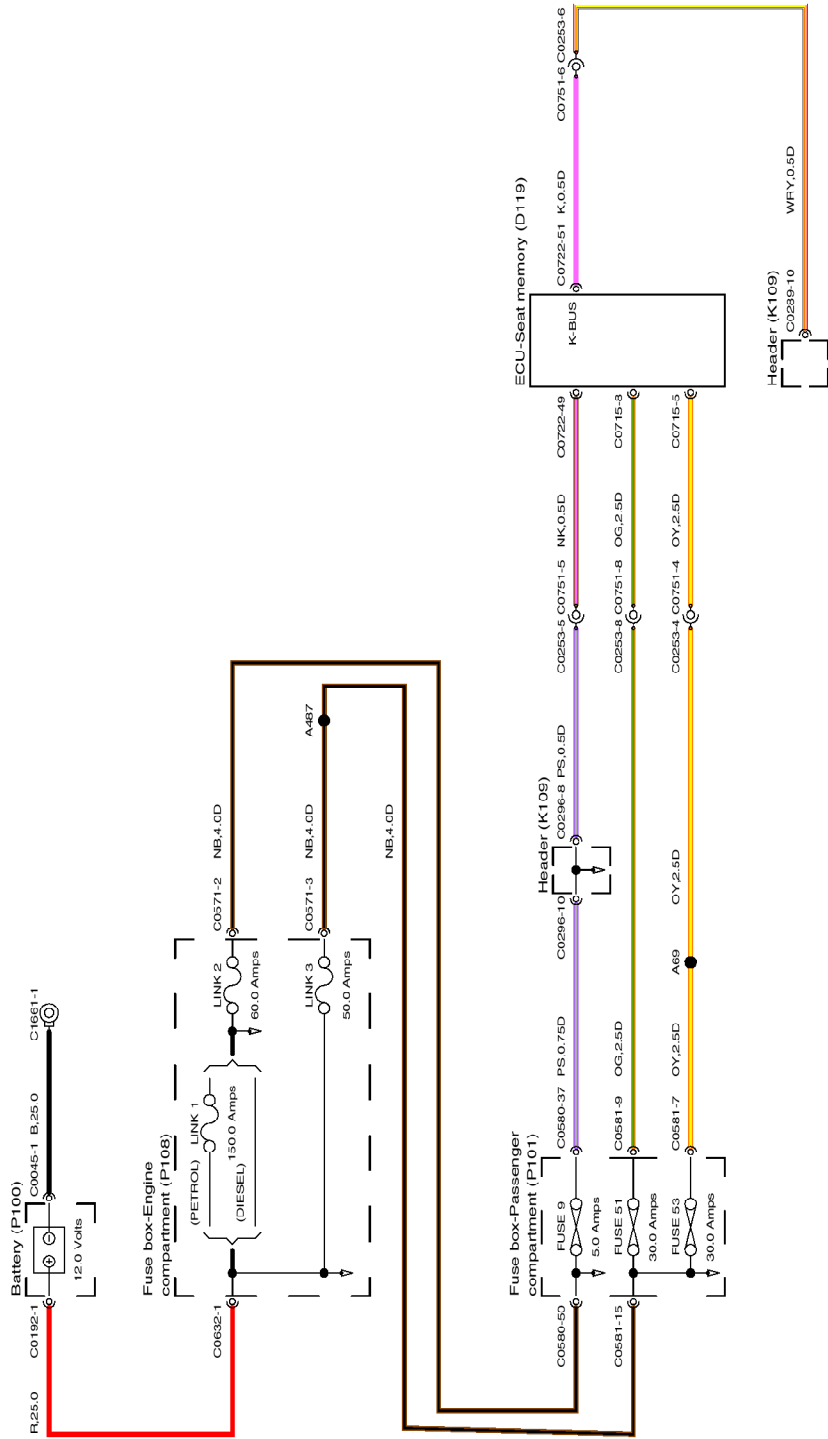


VWR403820-1

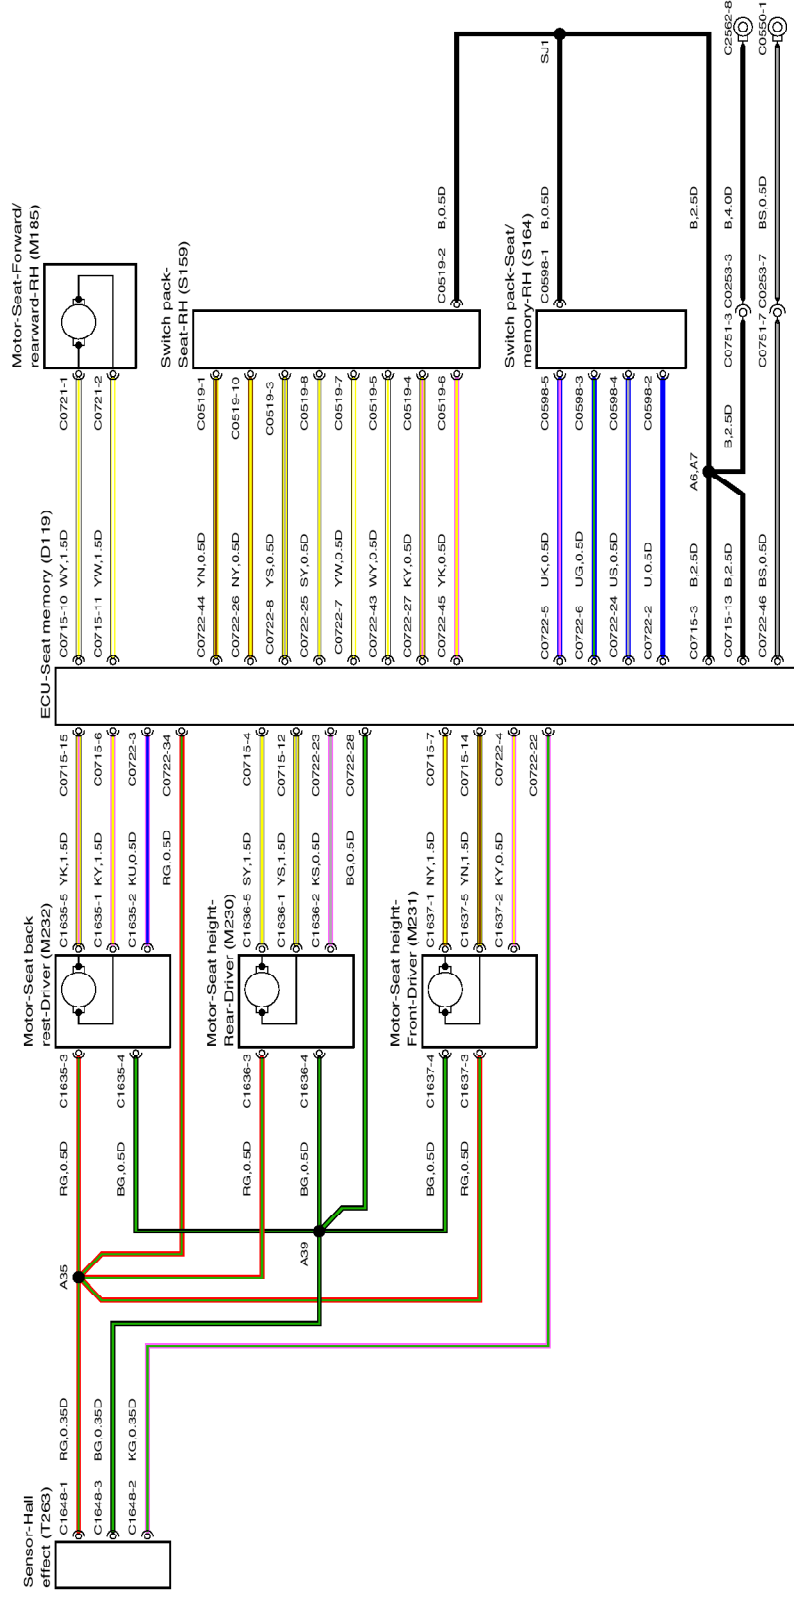

VWR403320-2

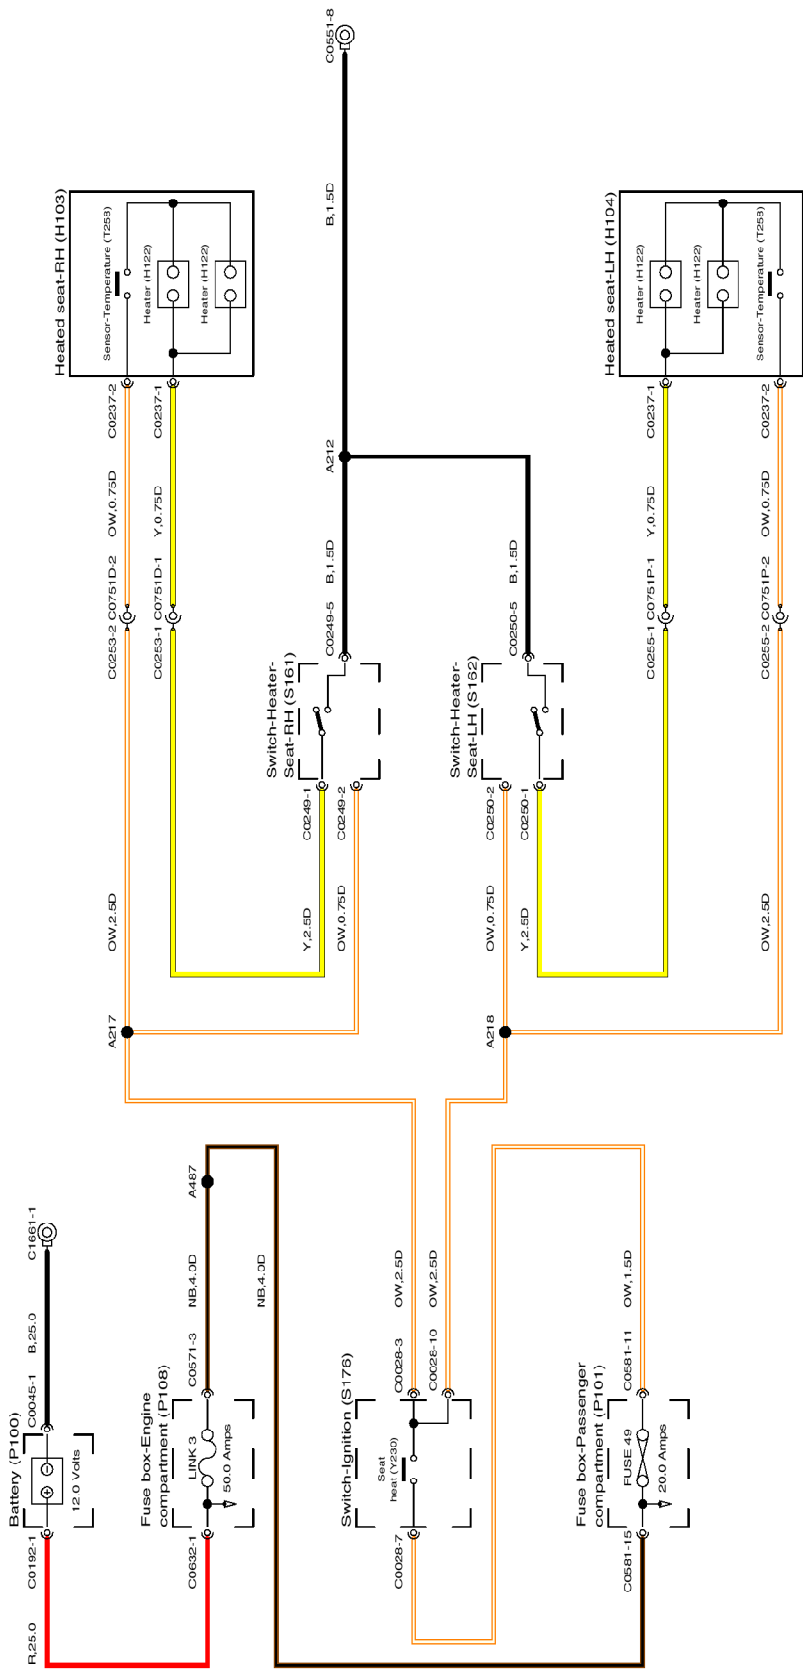


VWR403800-1

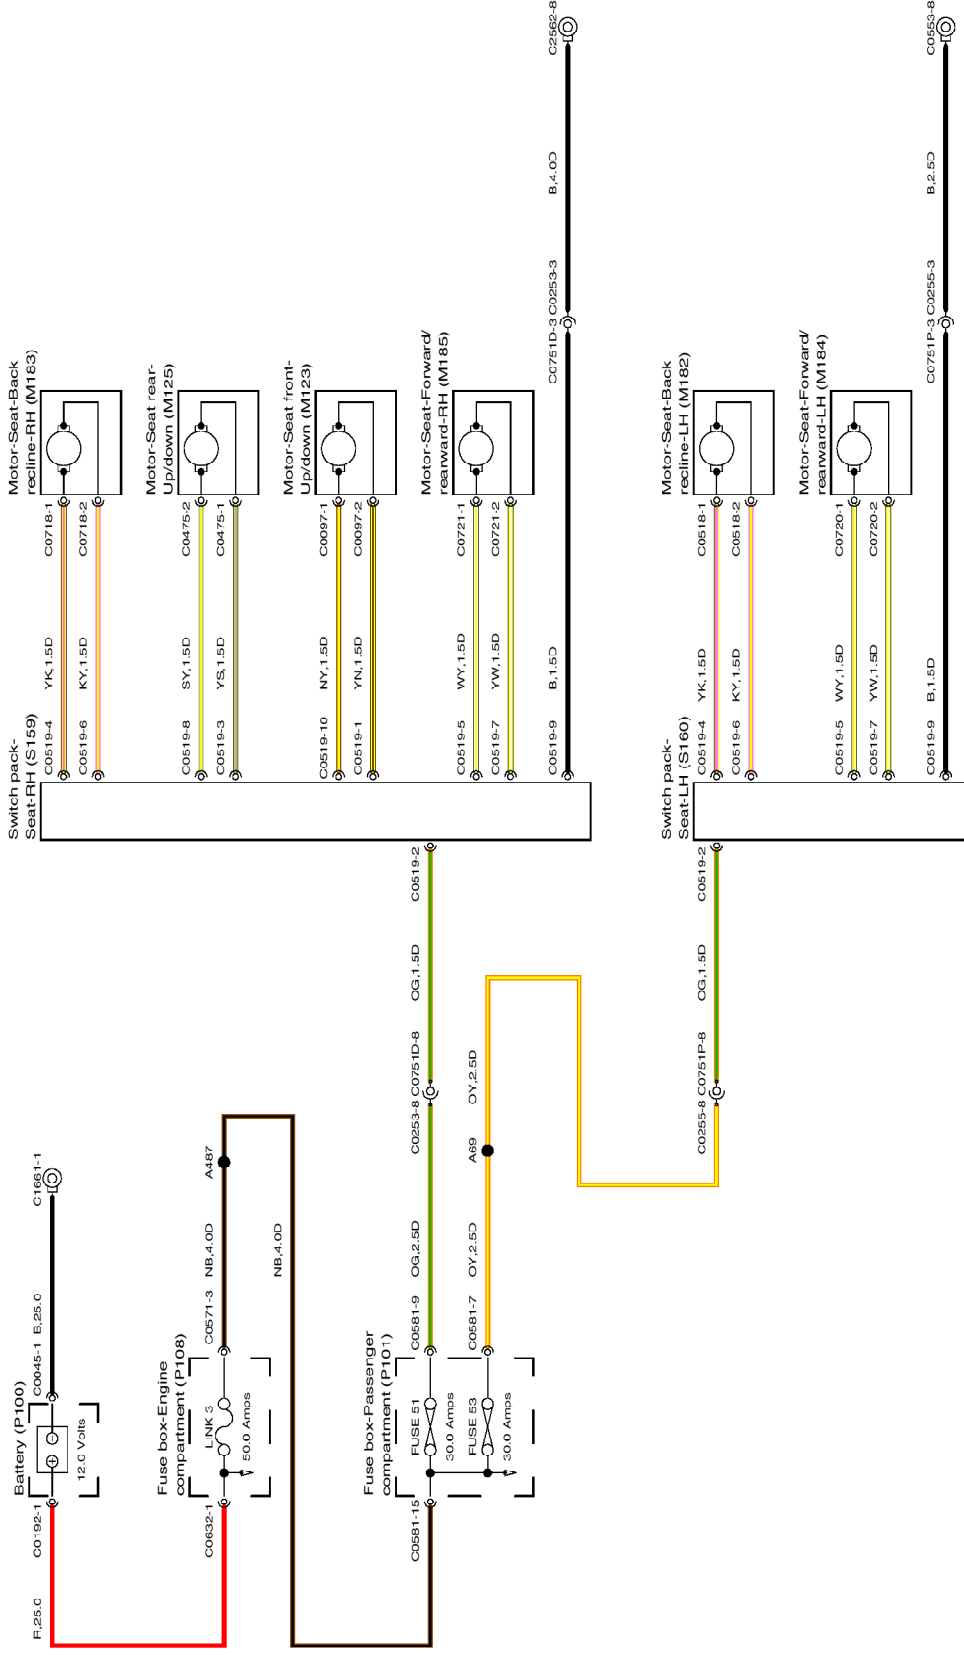


VWR403840-1


140 DOOR MIRRORS

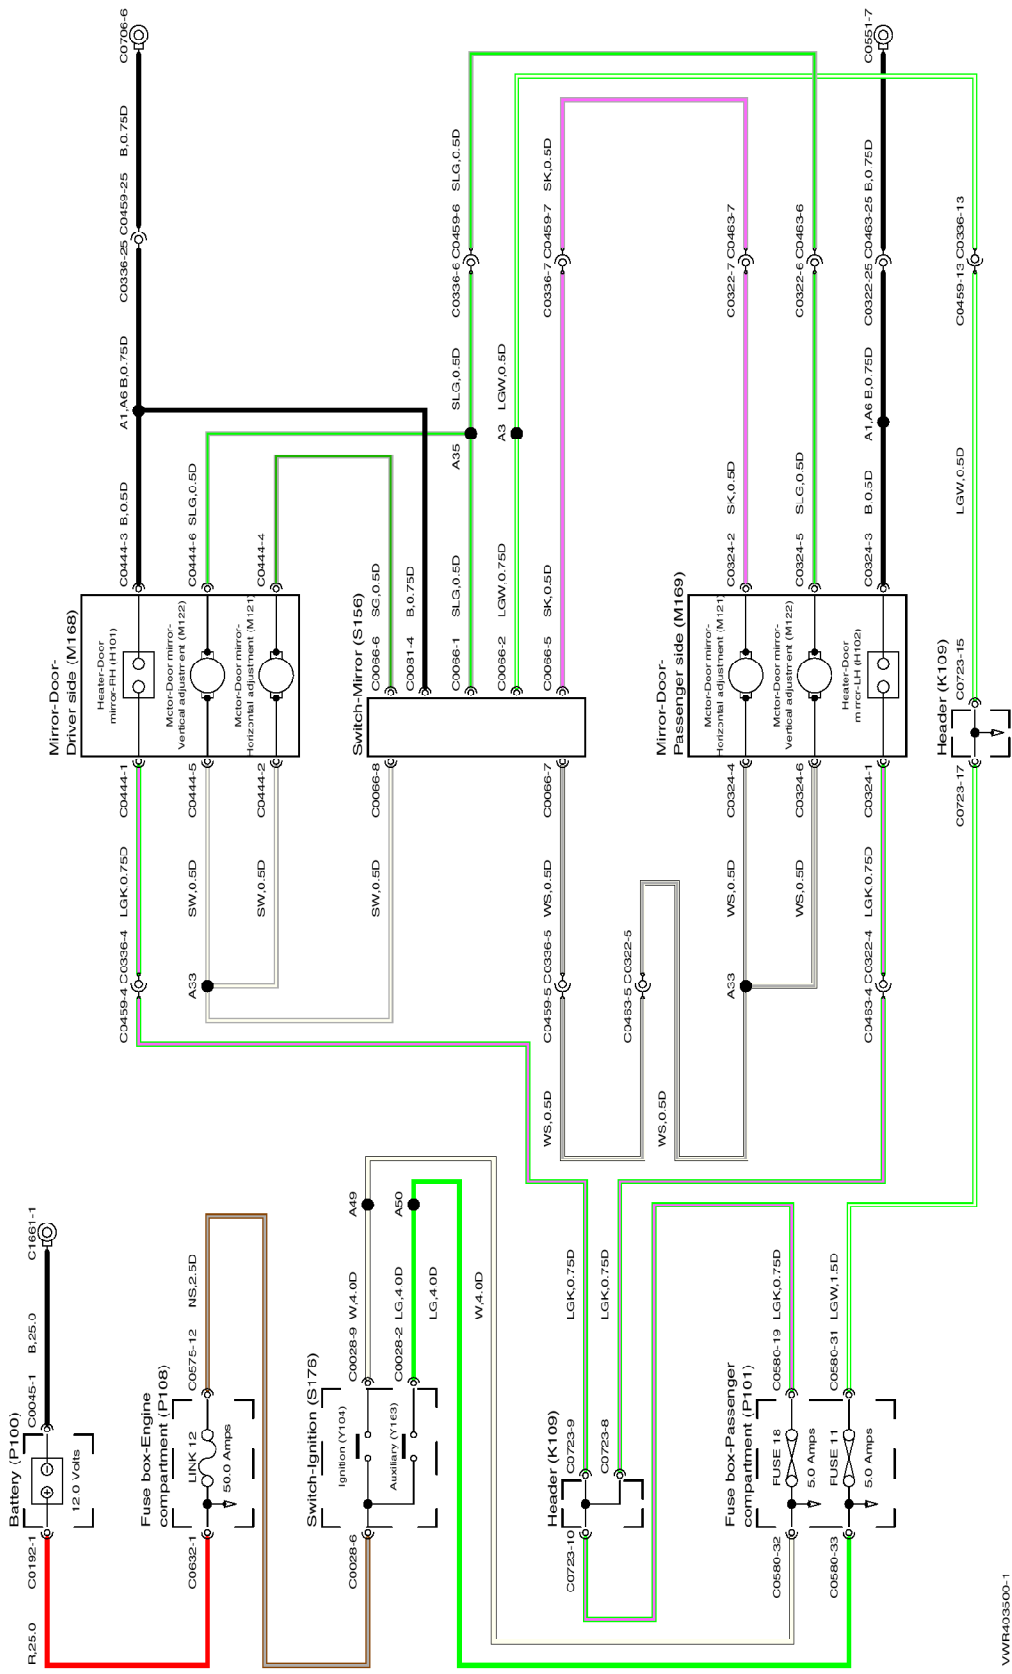


VWR403500-1

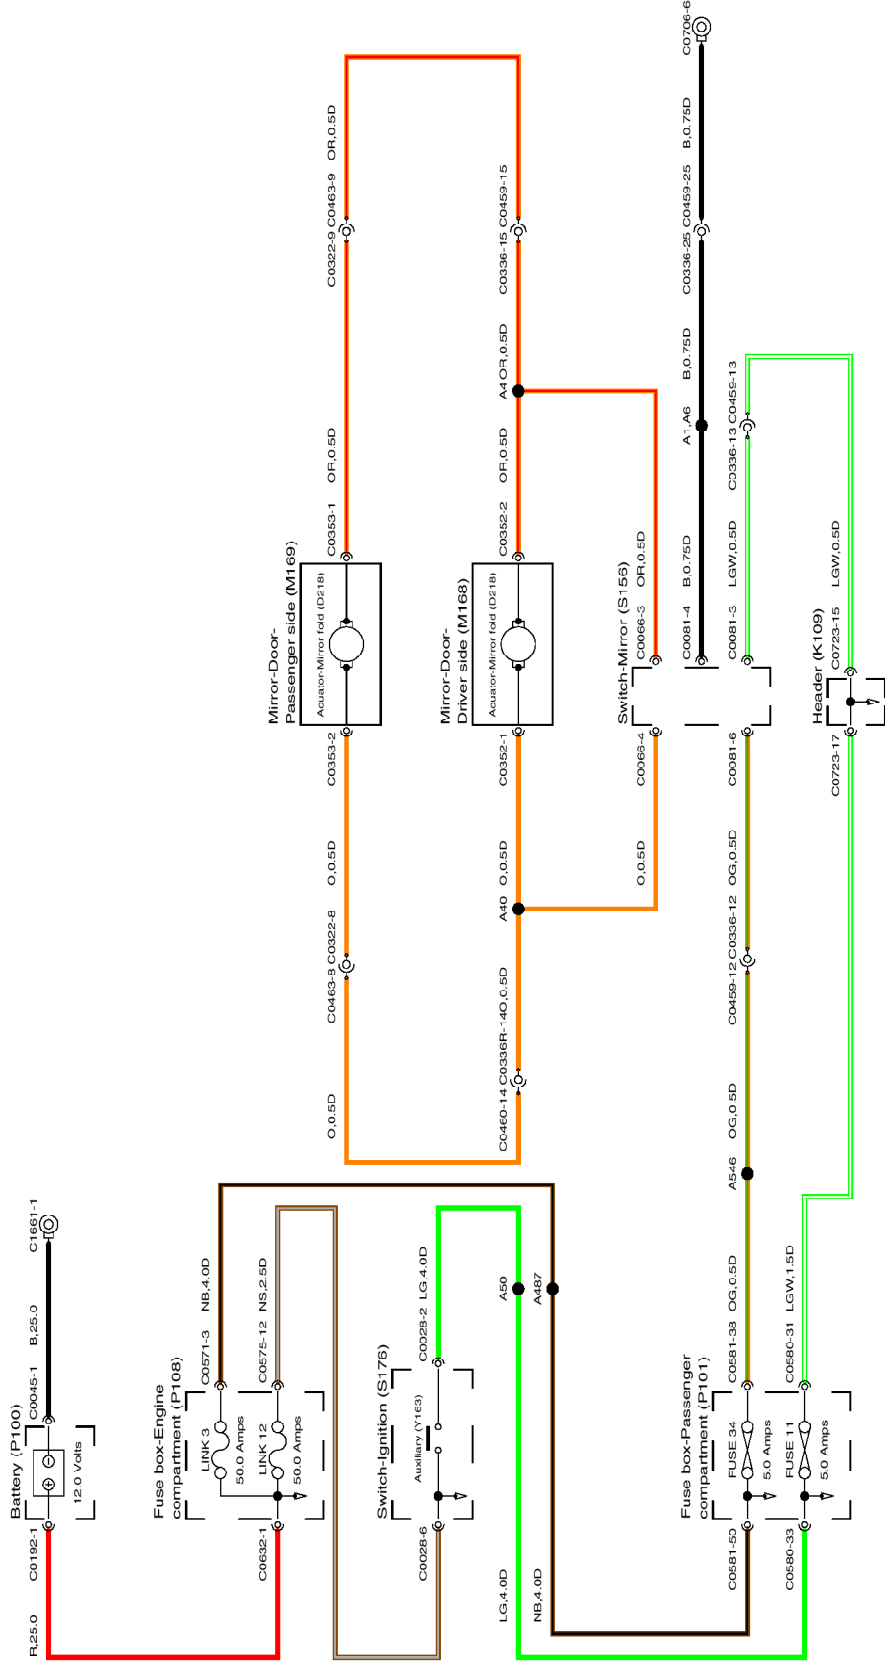


VWR403529-1

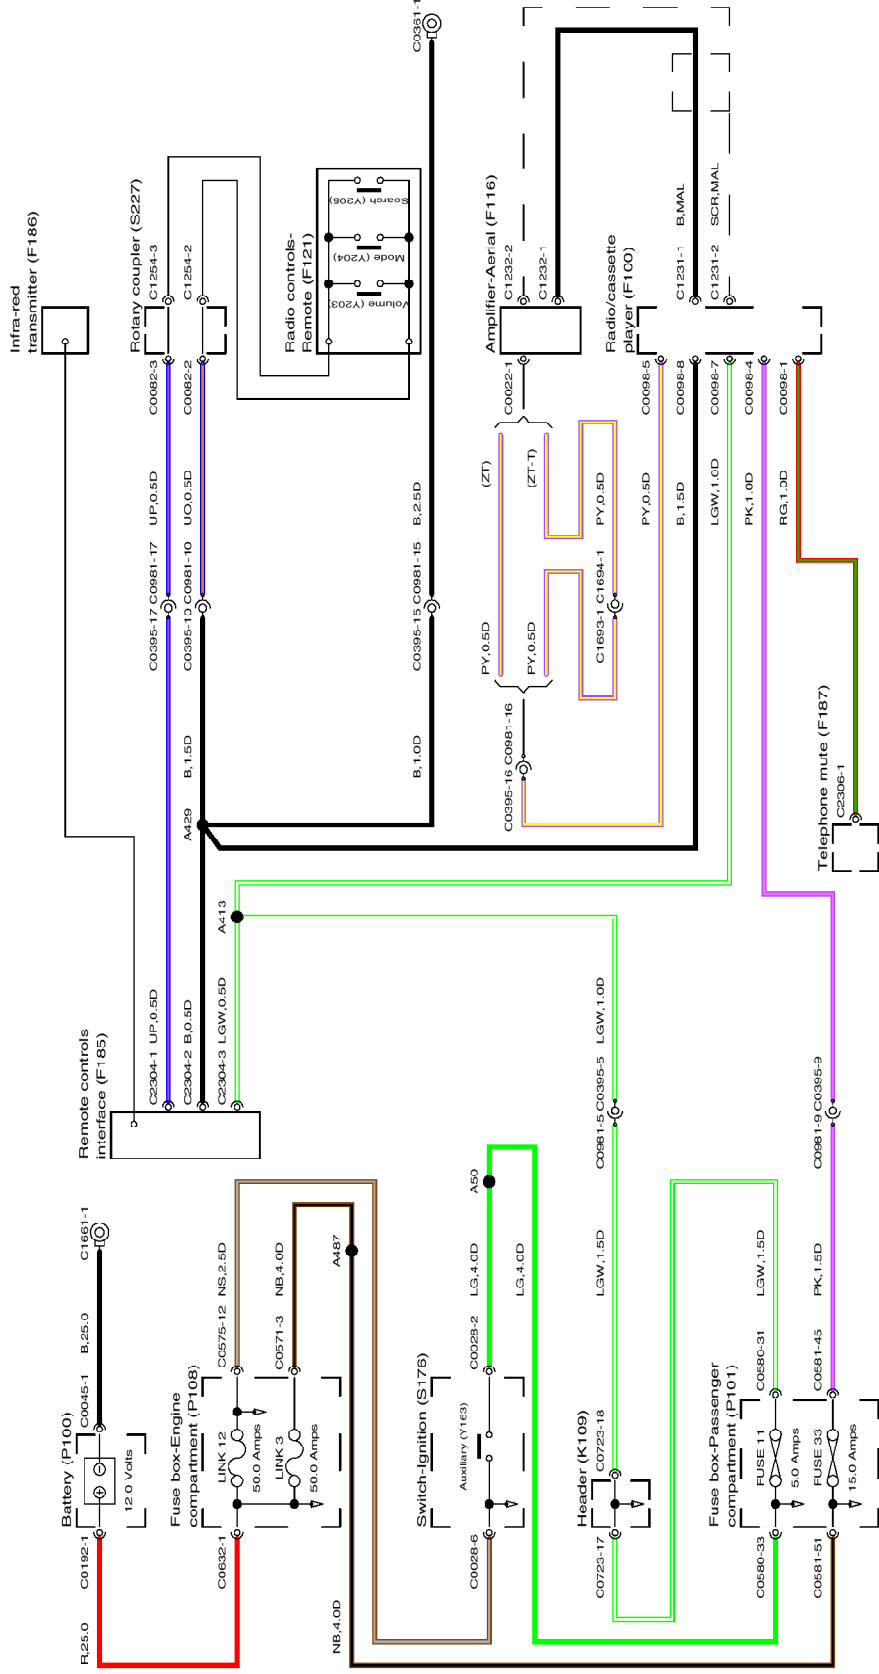


VWR403389-1

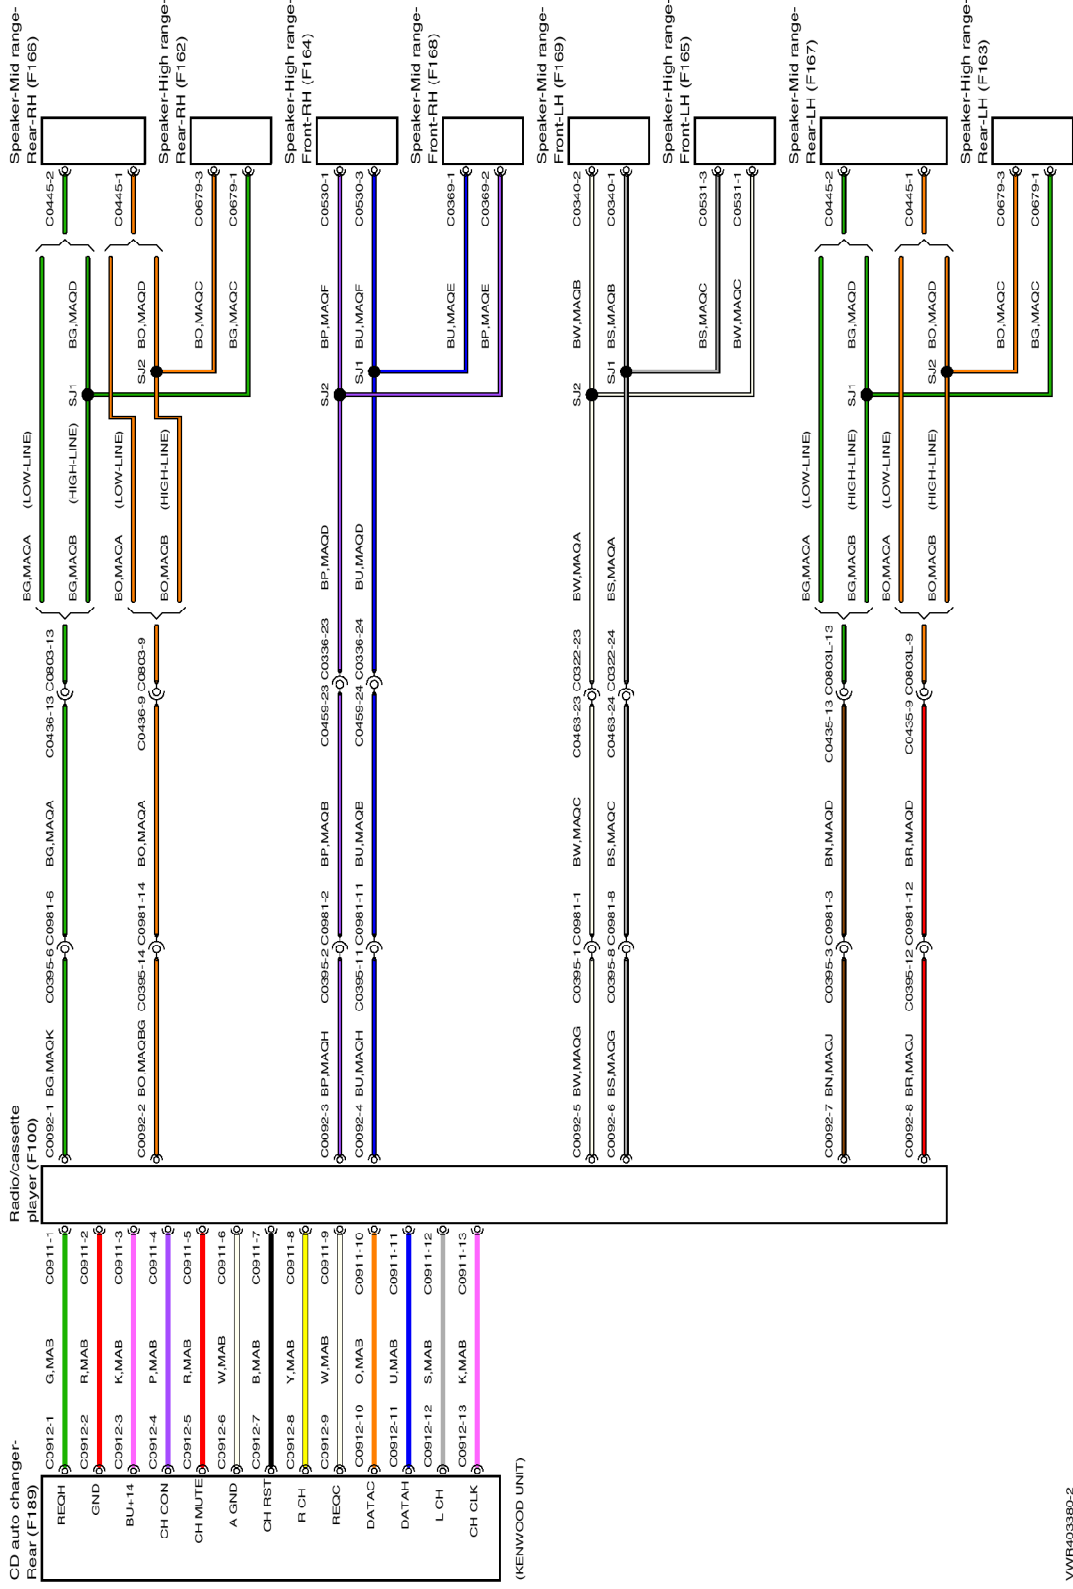


VWR403380-2

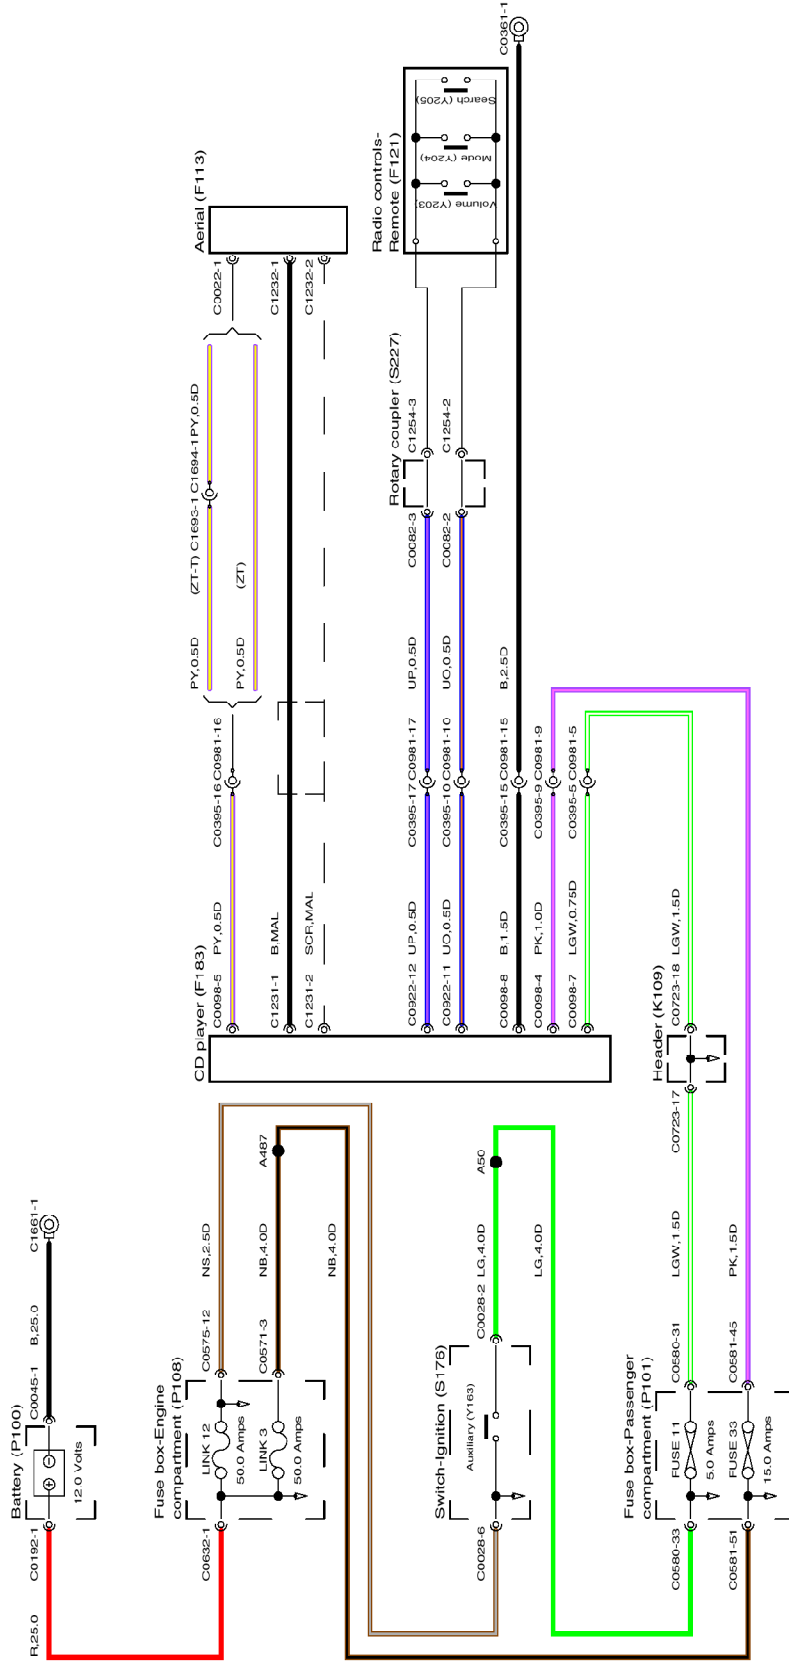


VWR403400-1

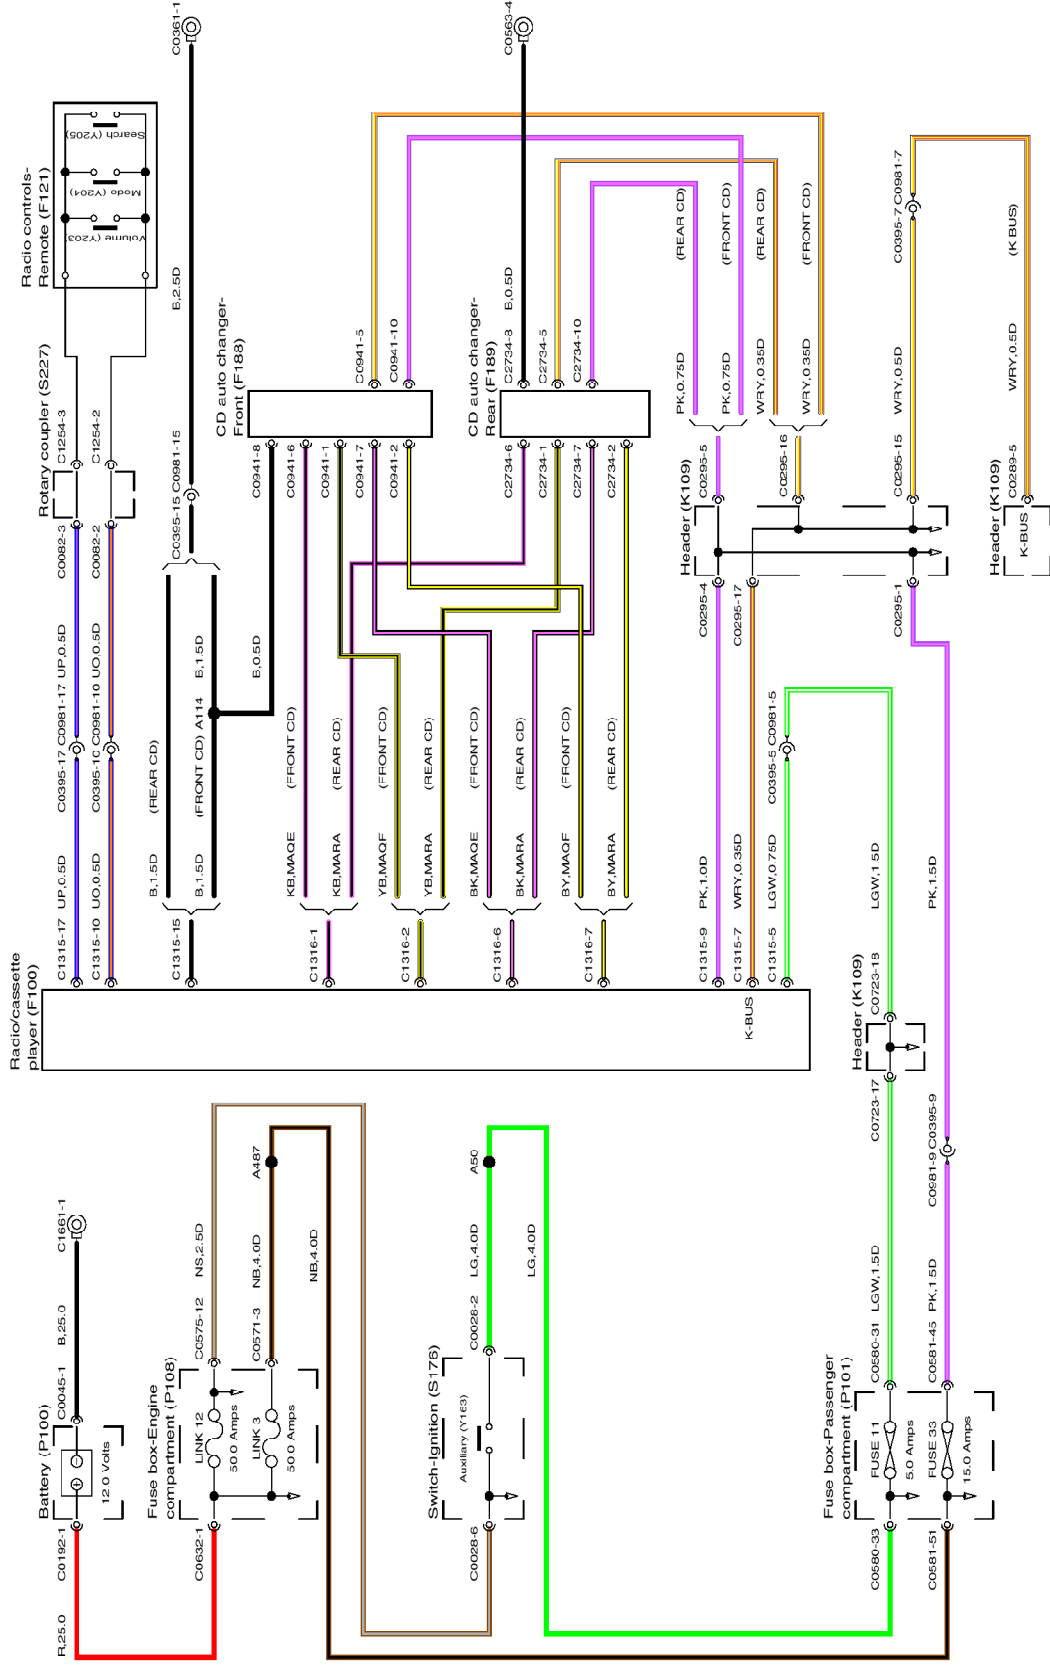


VWR403340-1

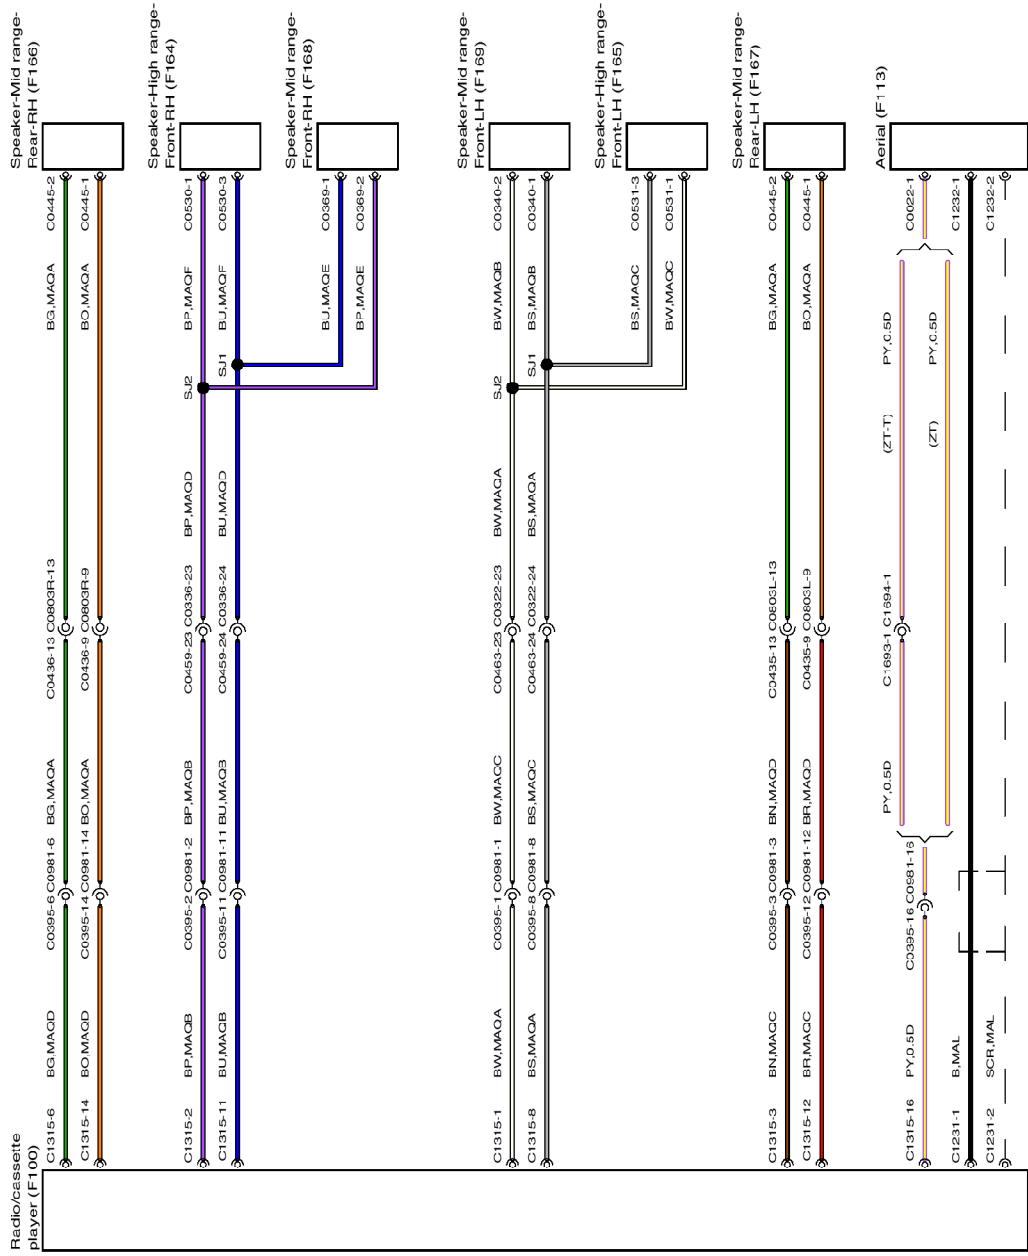


VWR403340-2

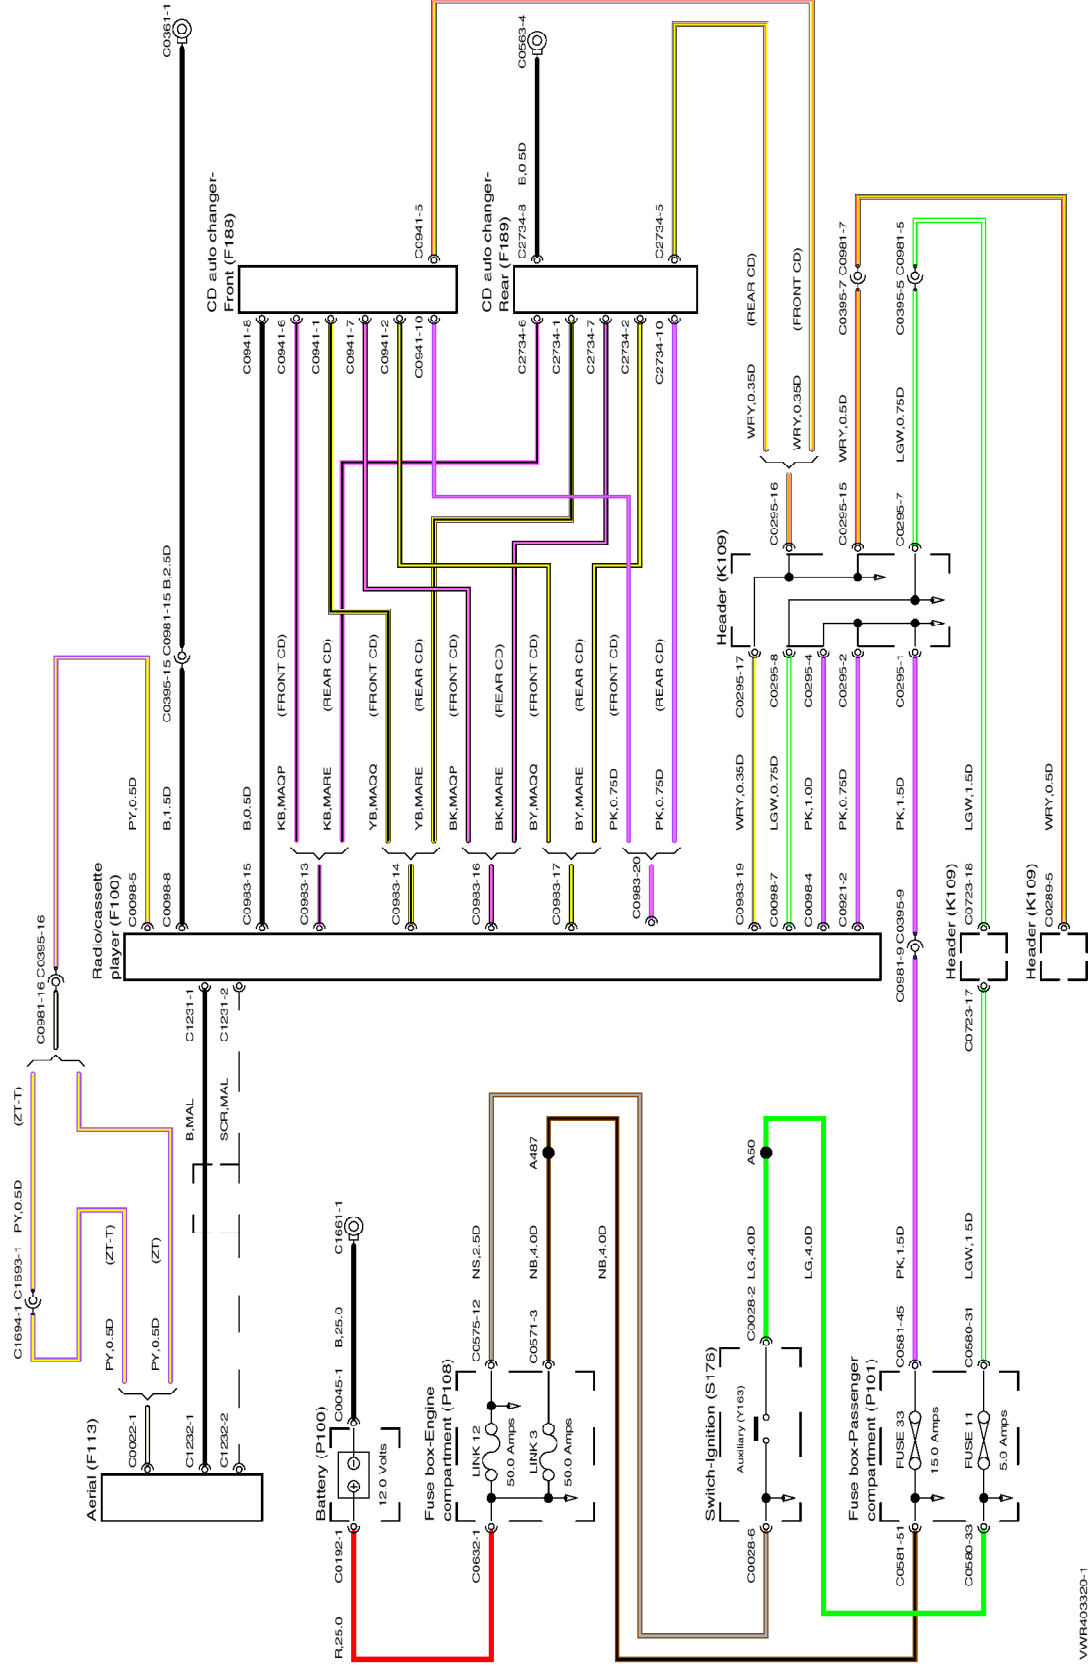


VWR403320-1

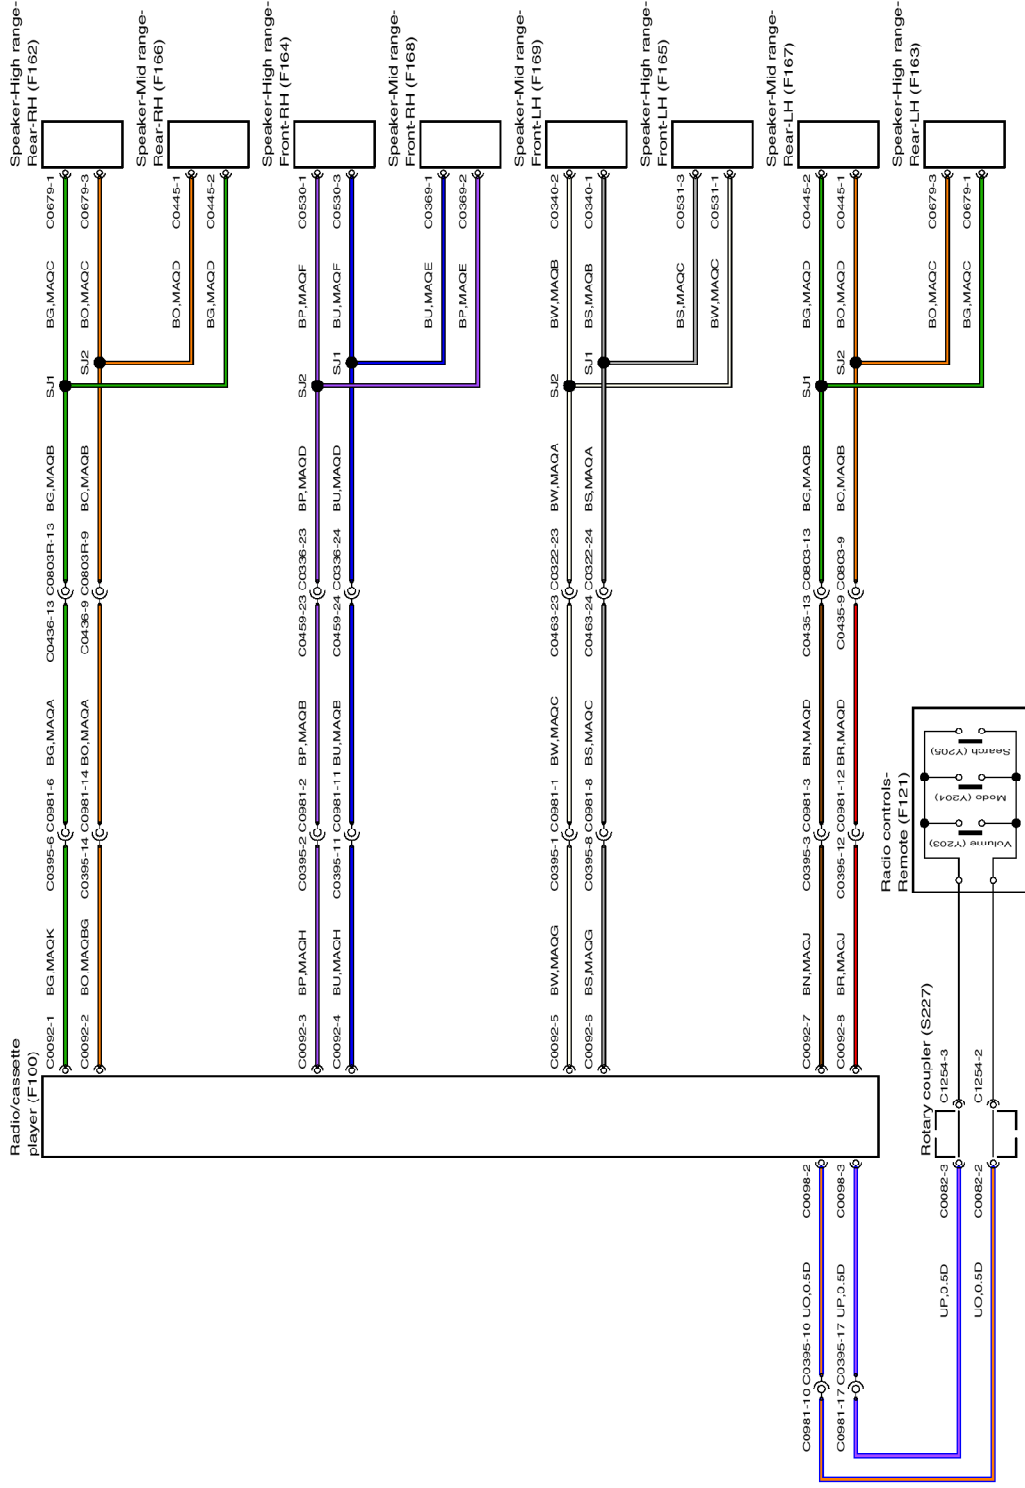


VWR403320-2

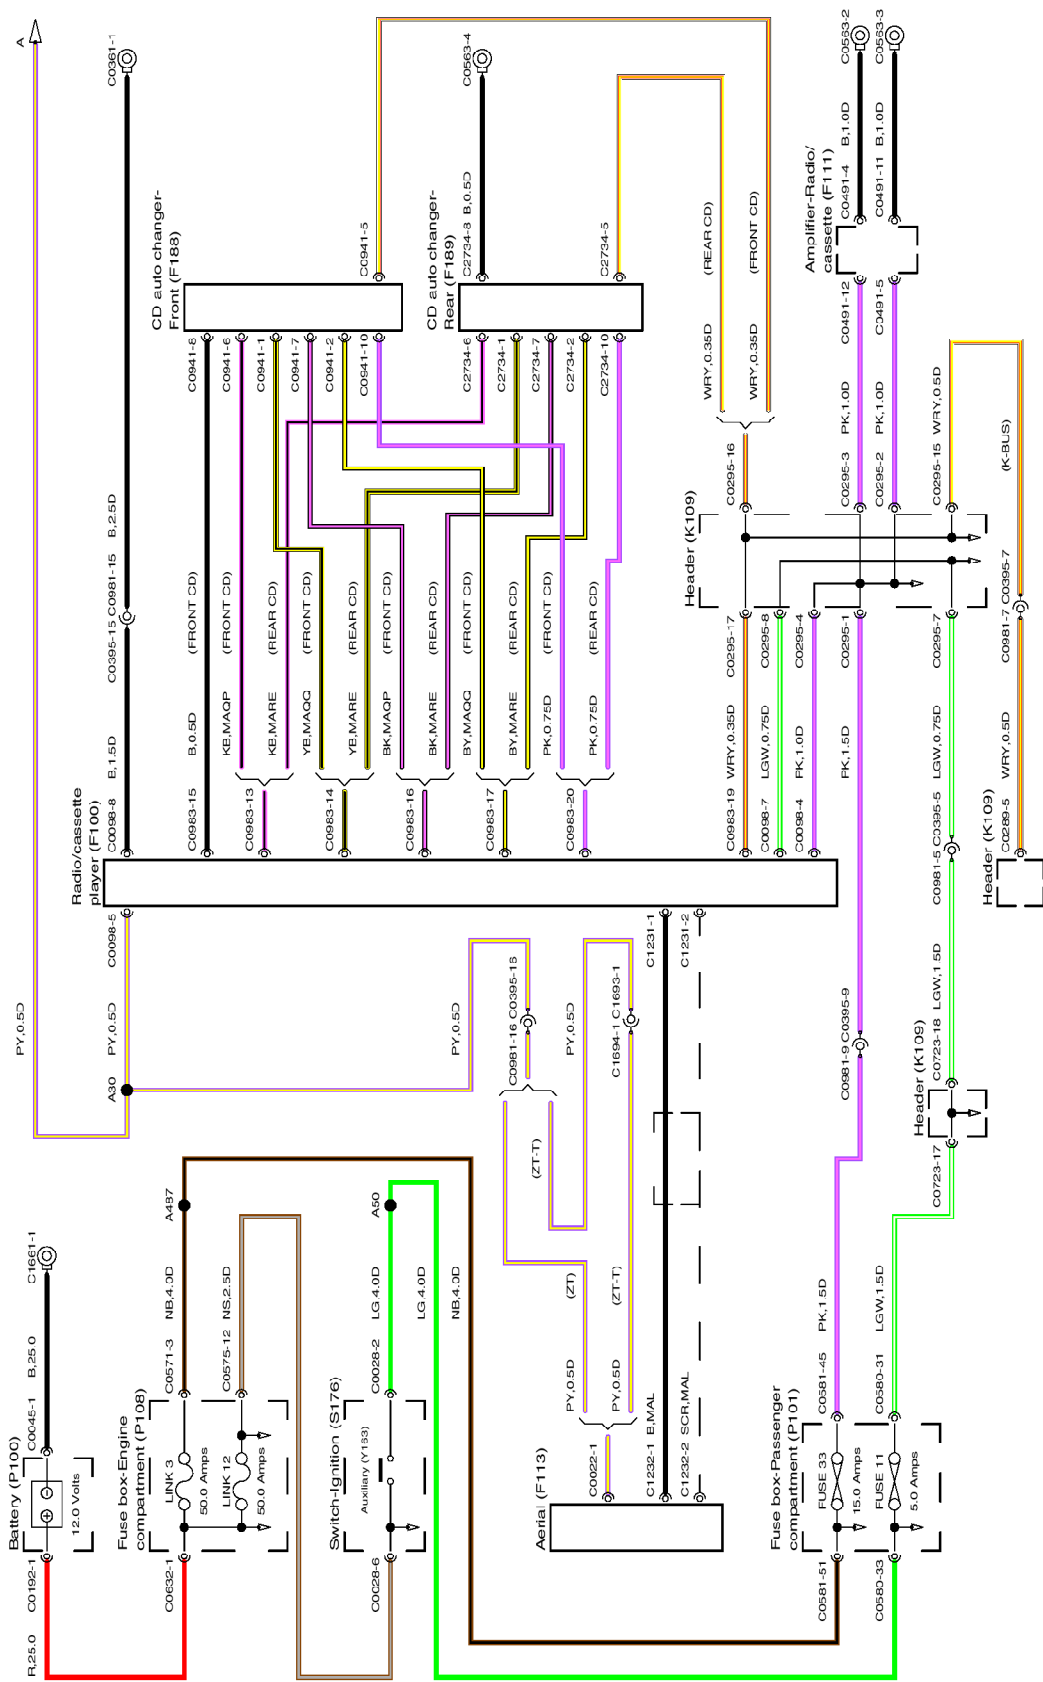


VWR403300-1

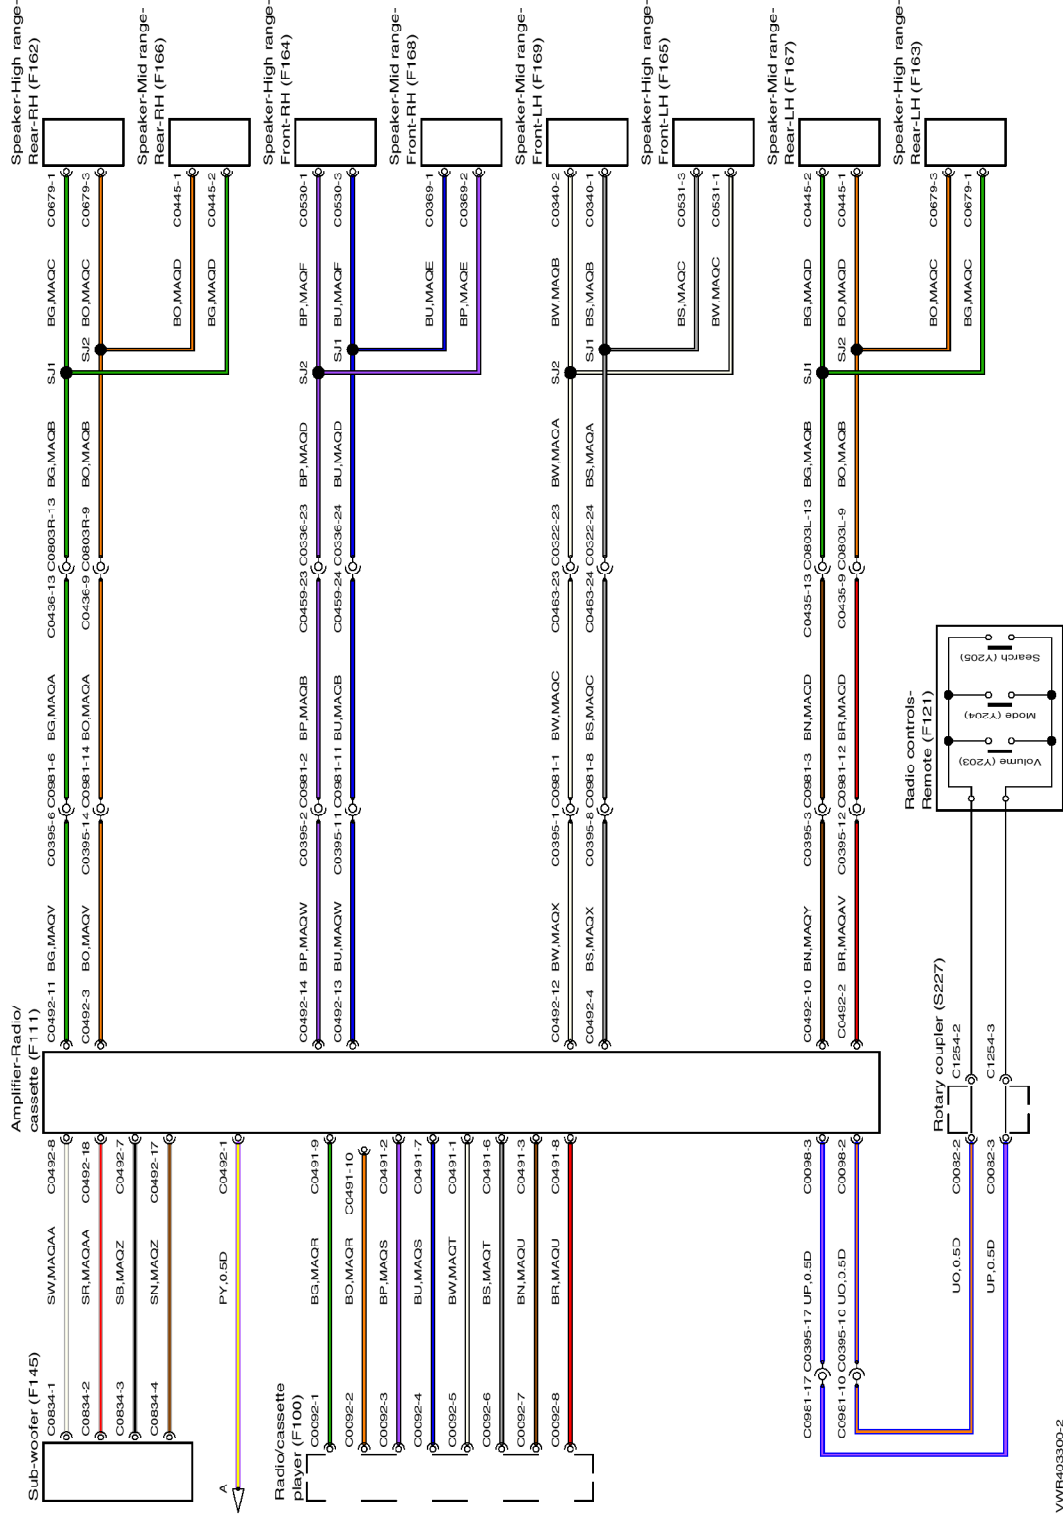


VWR403300-2

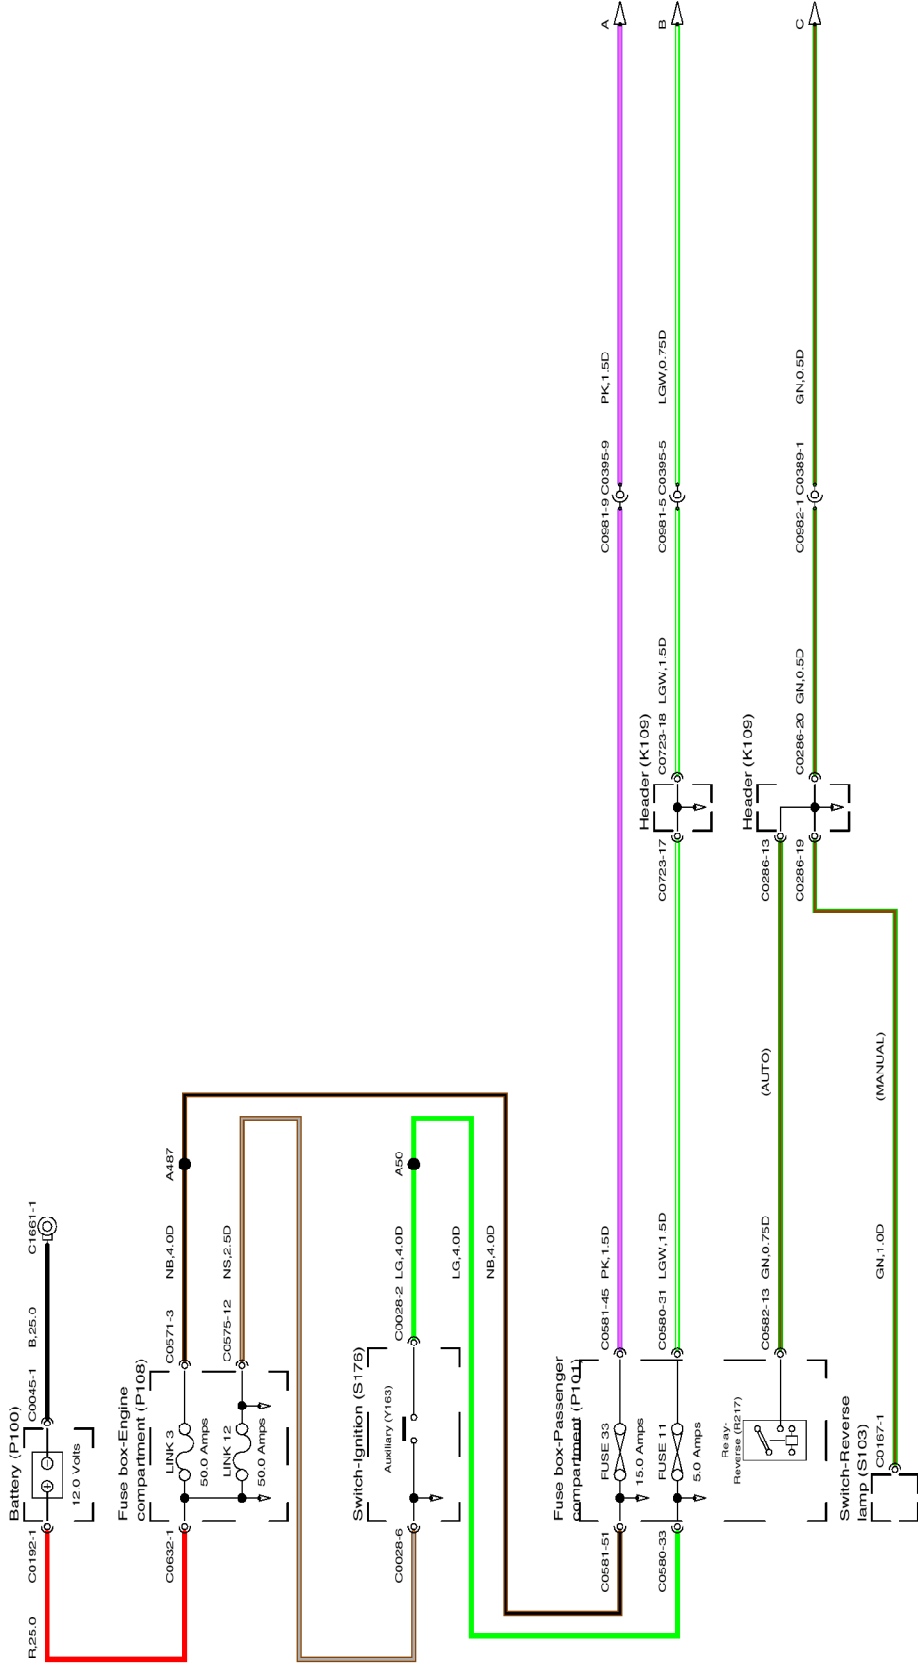


VWR403680-1

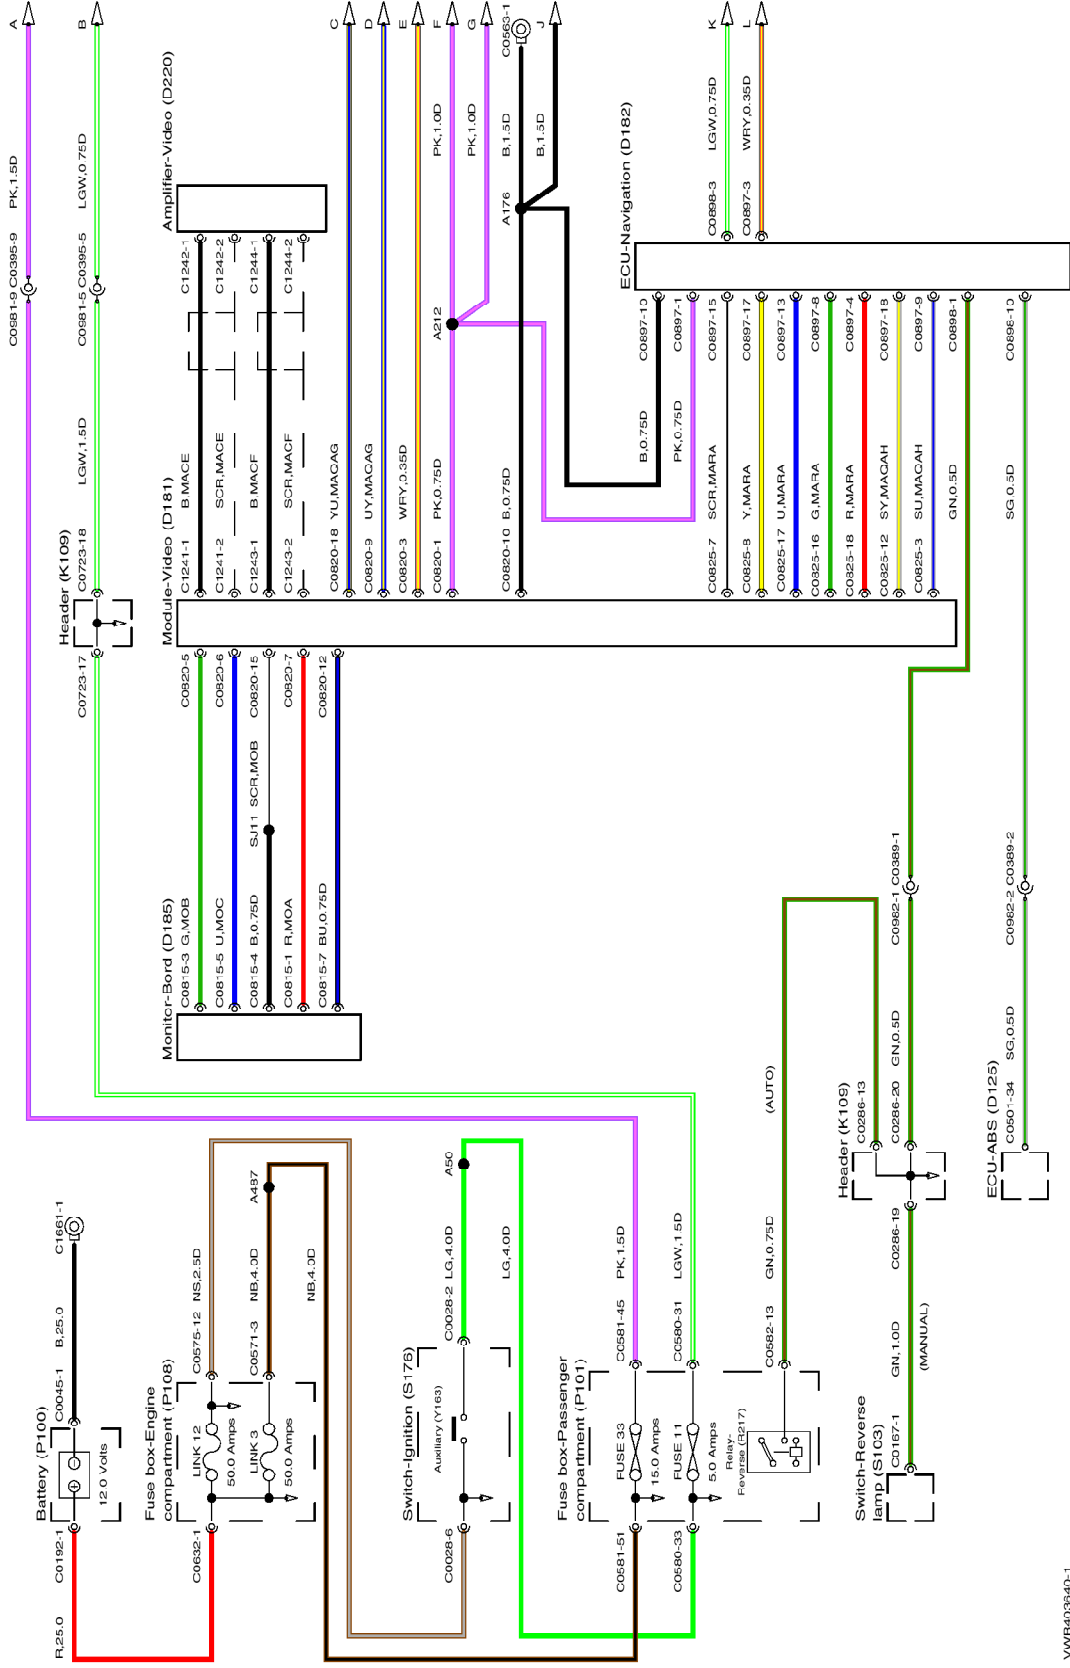


VWR403640-1

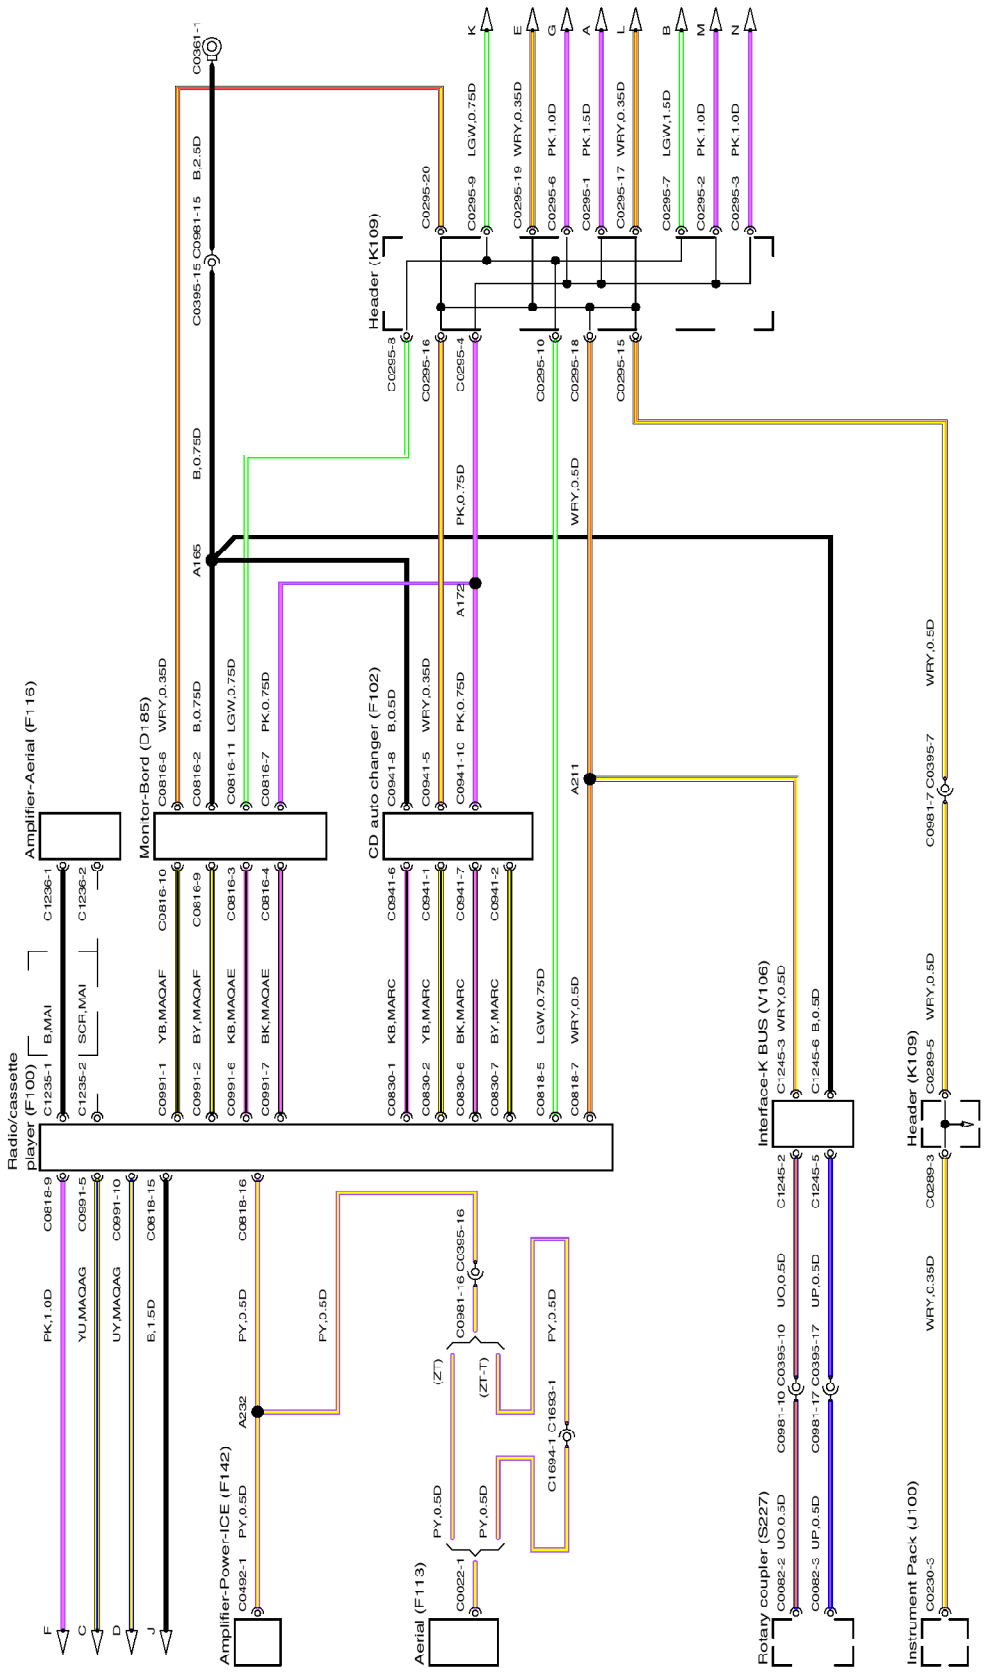


VWR403540-2

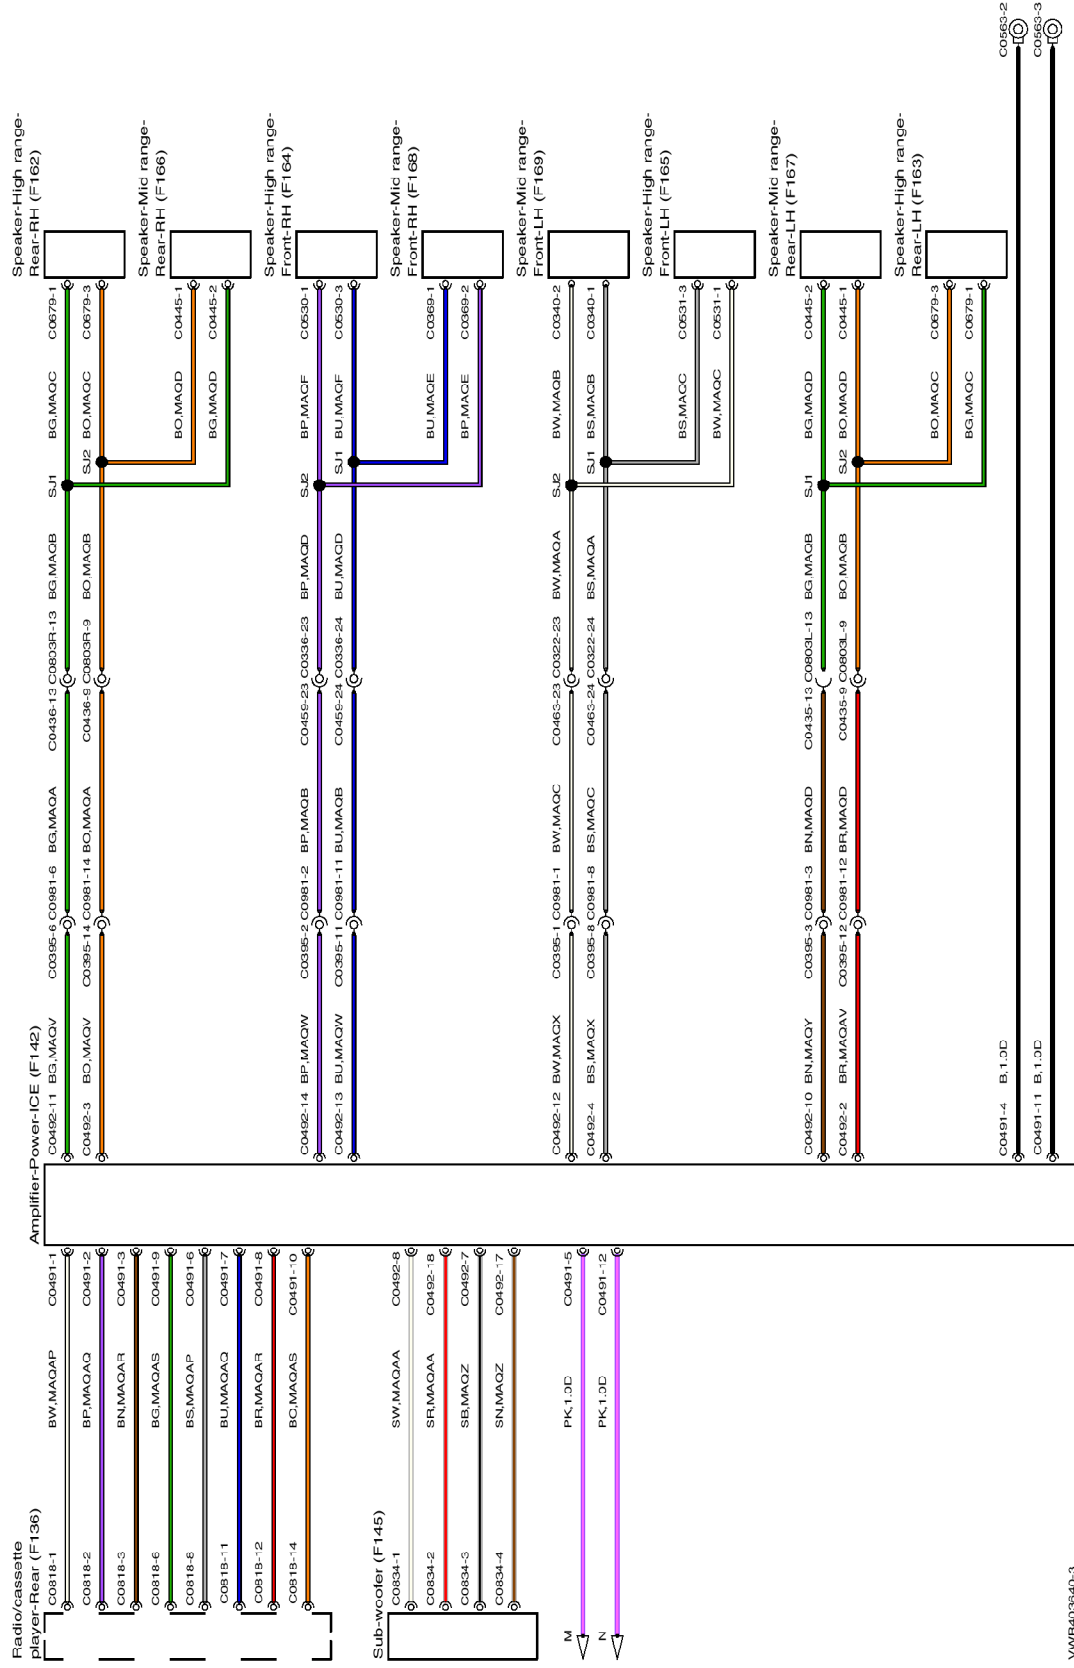


VWR403540-3

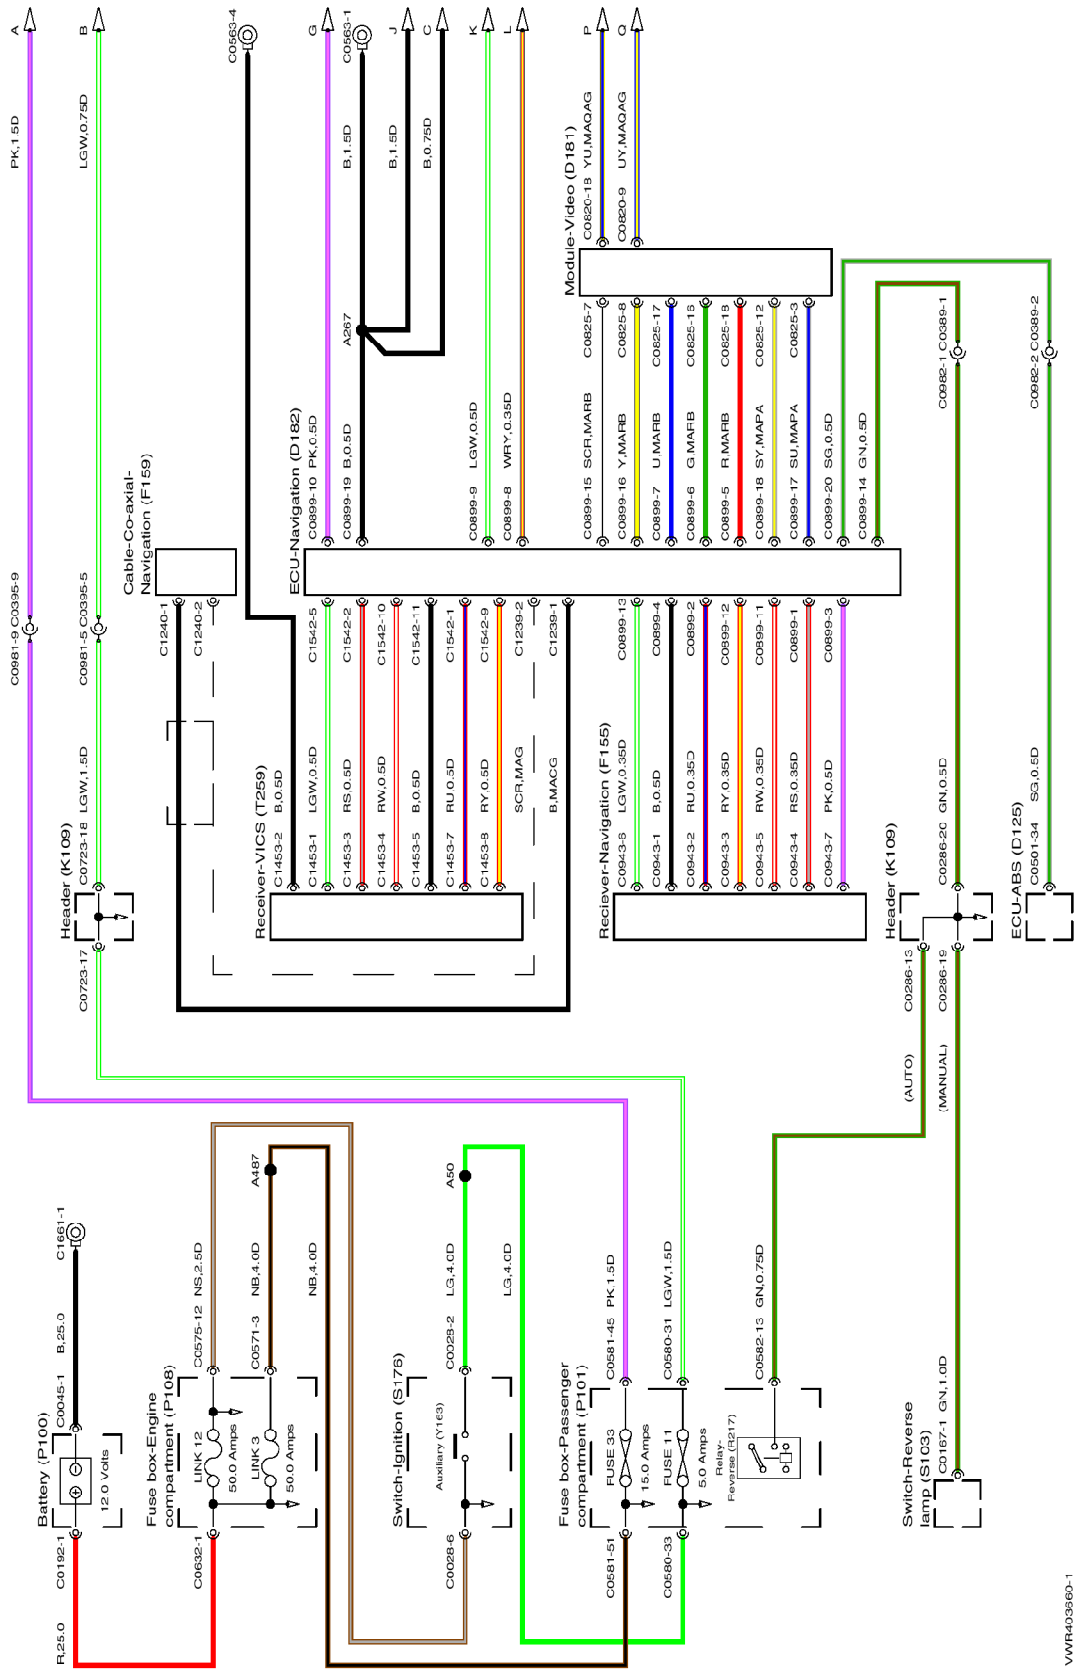


VWR403960-1

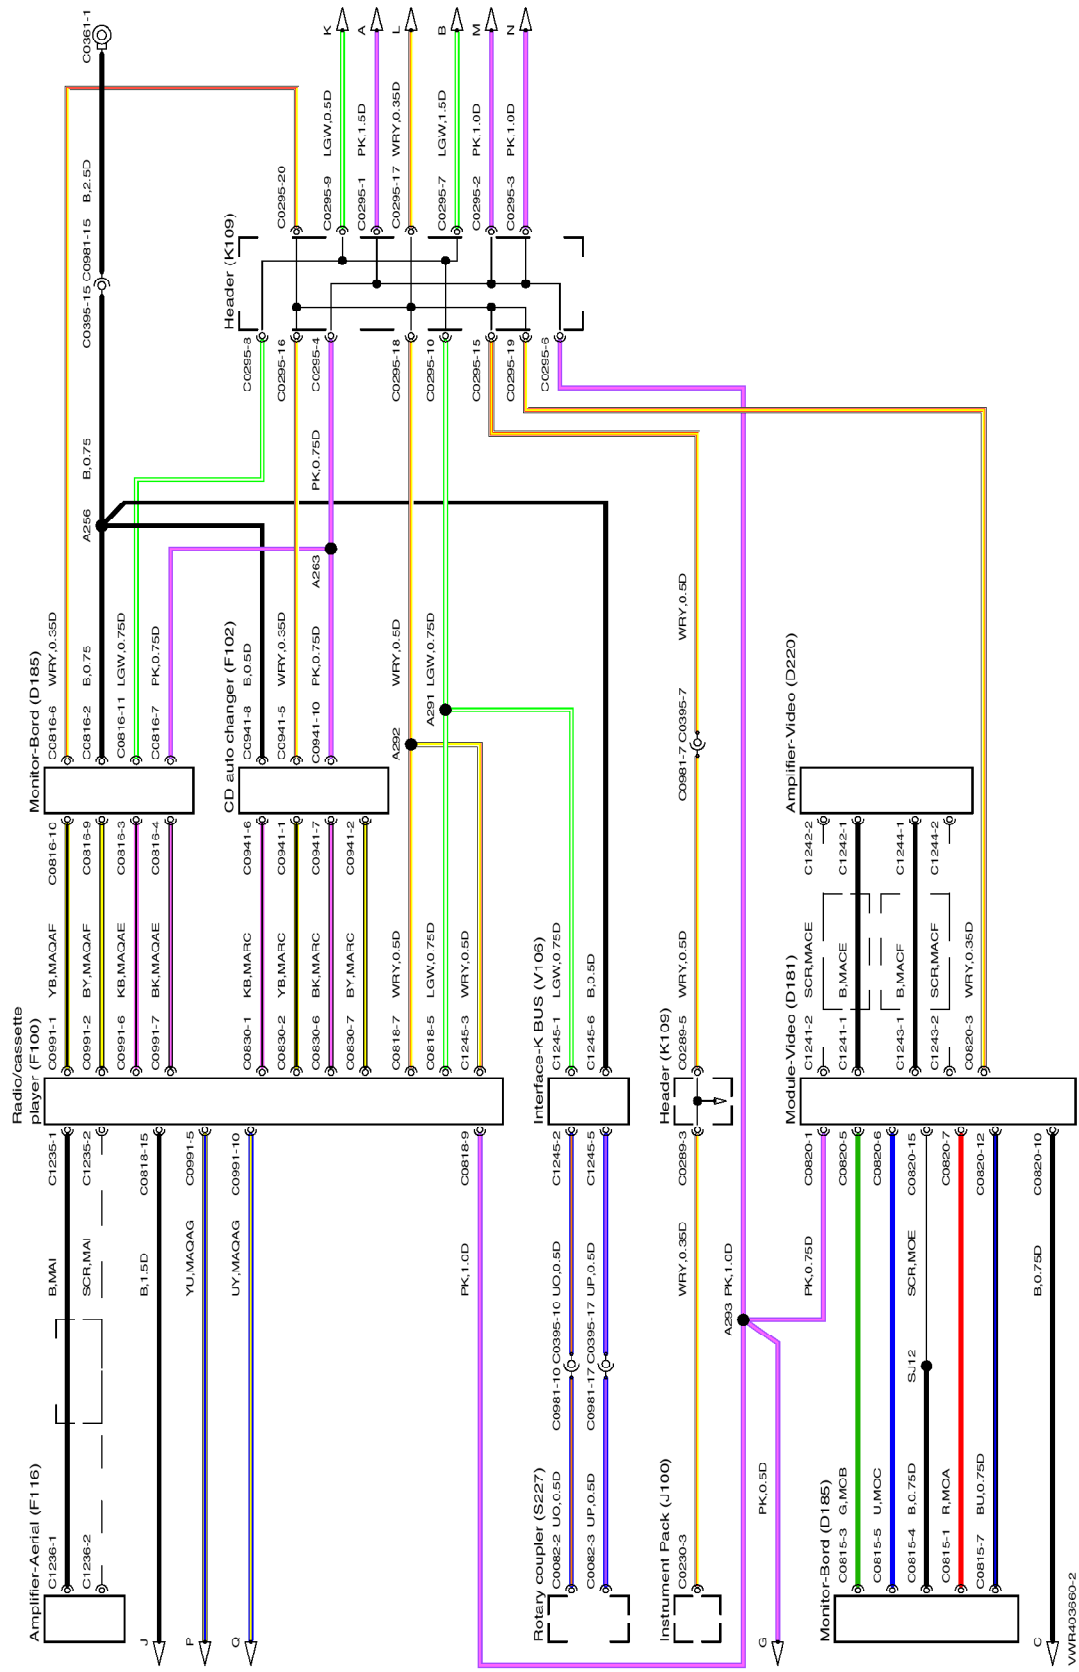


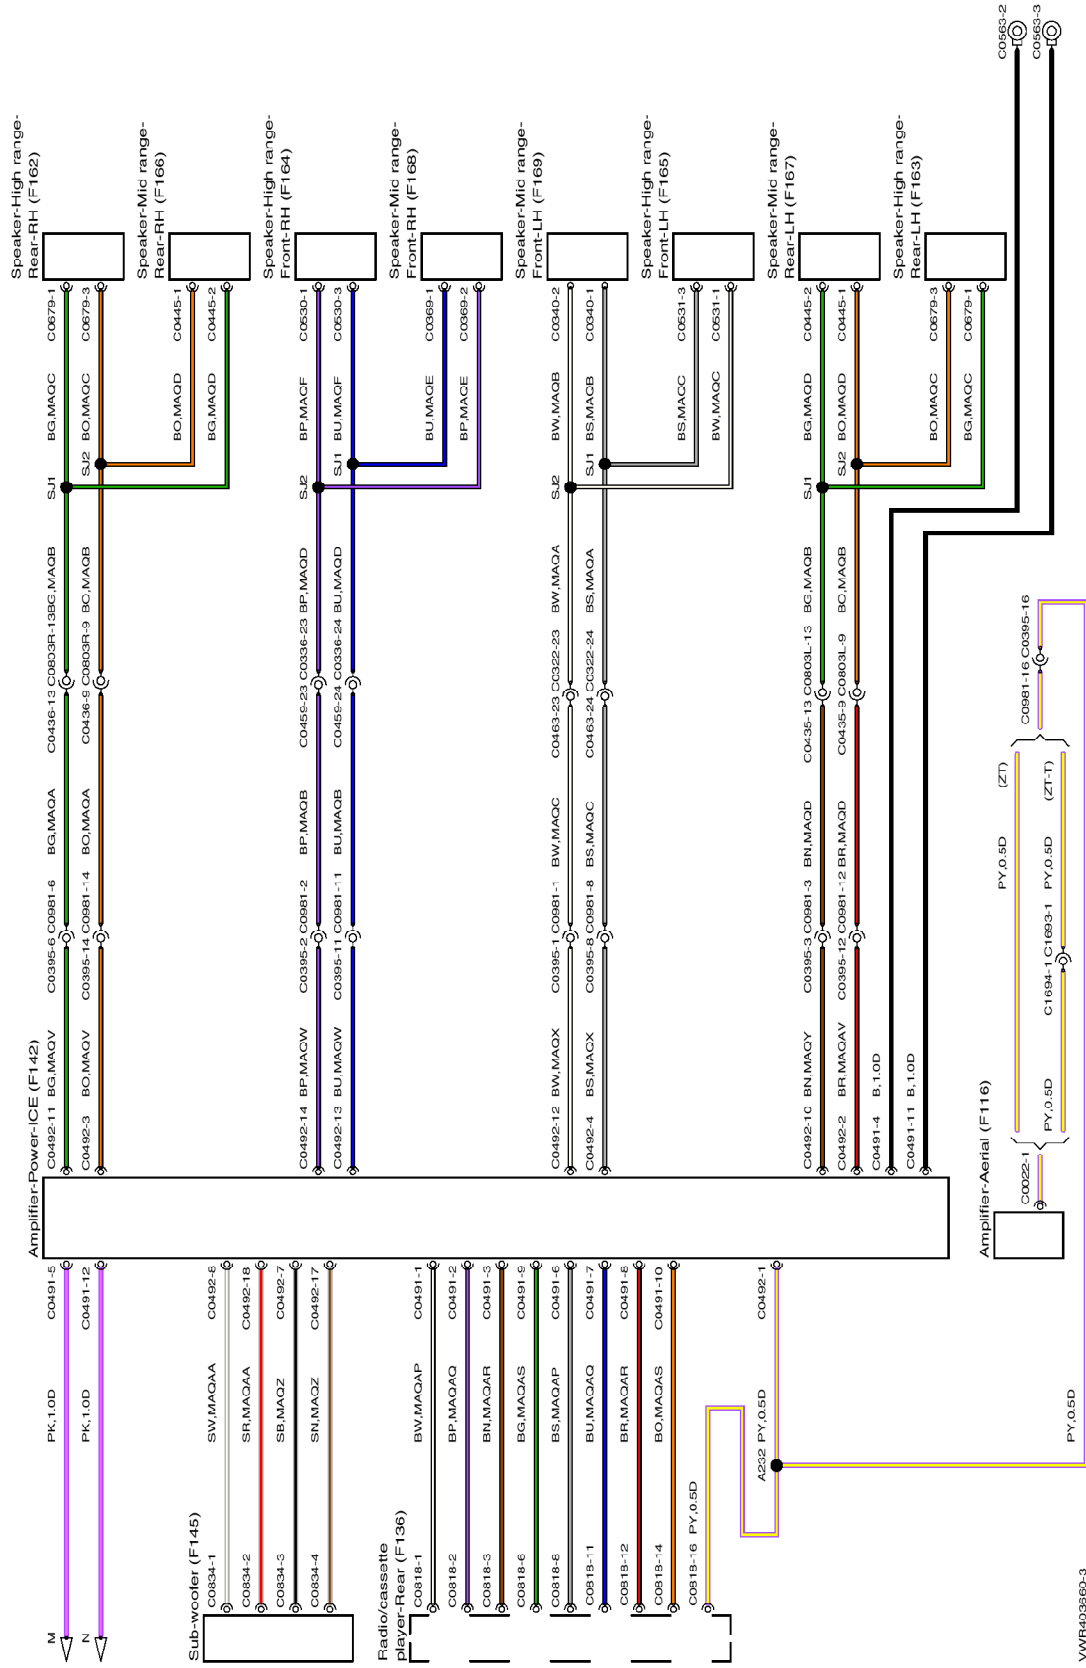


VWR403560-3

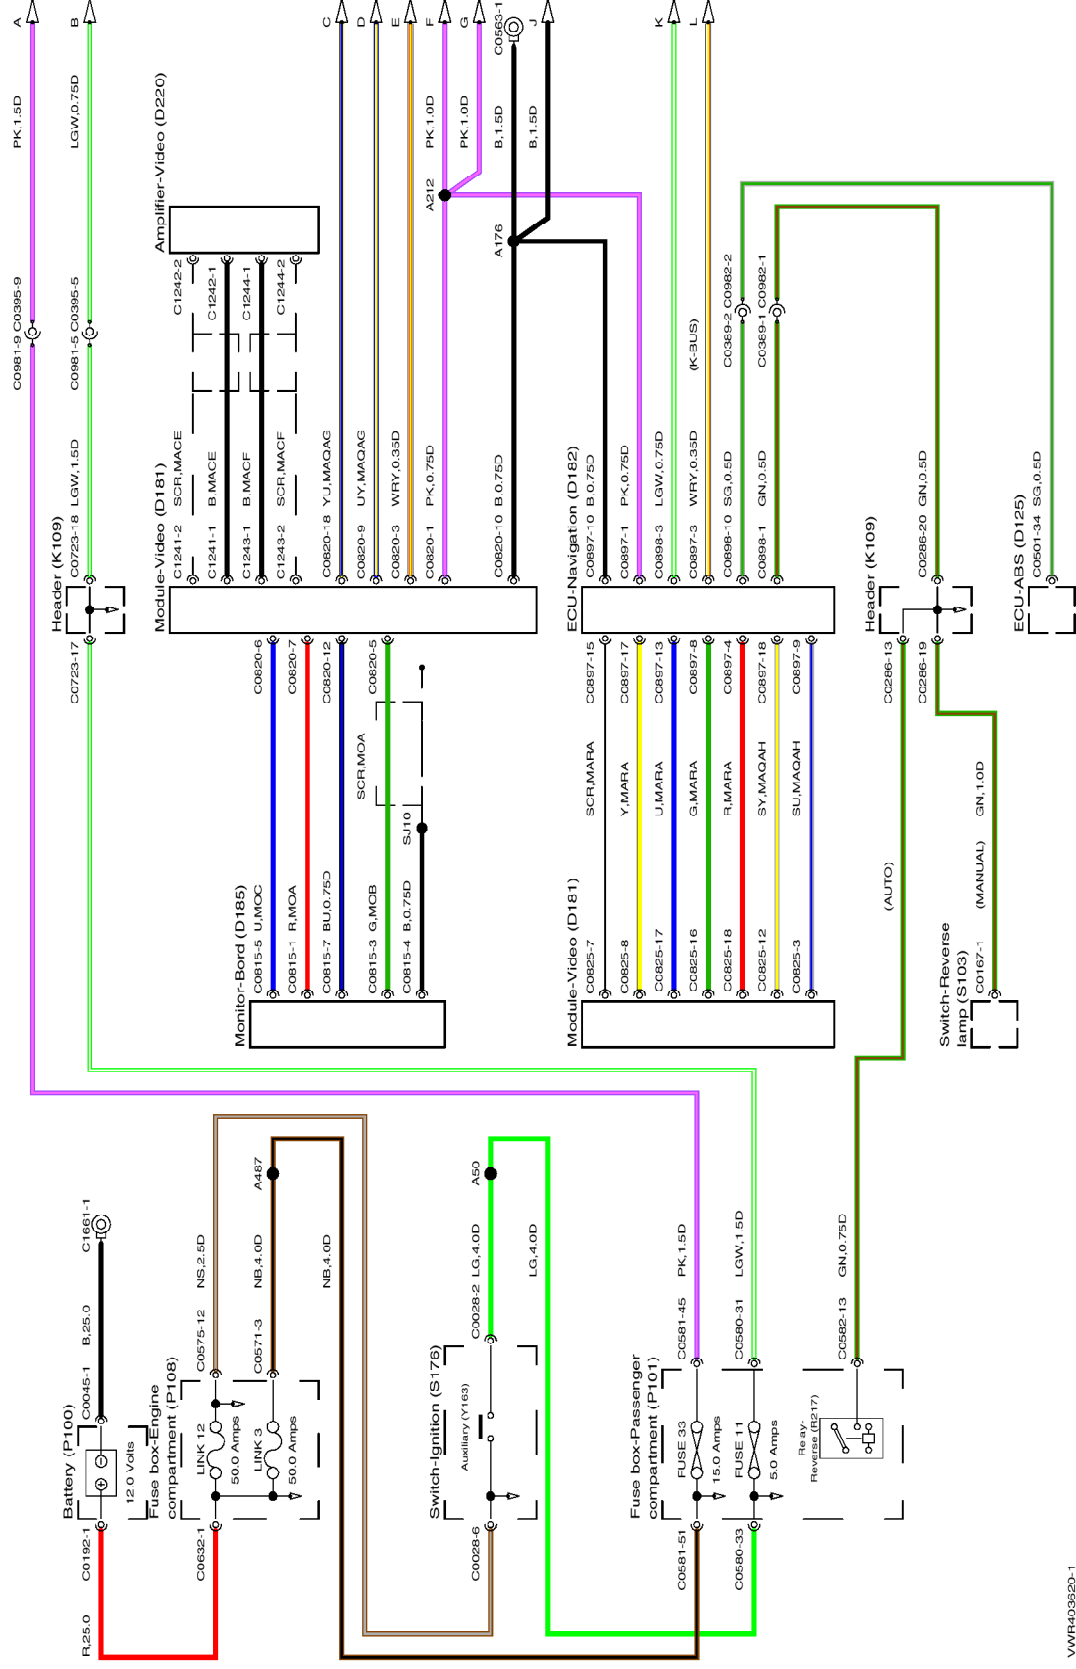


VWR403620-1

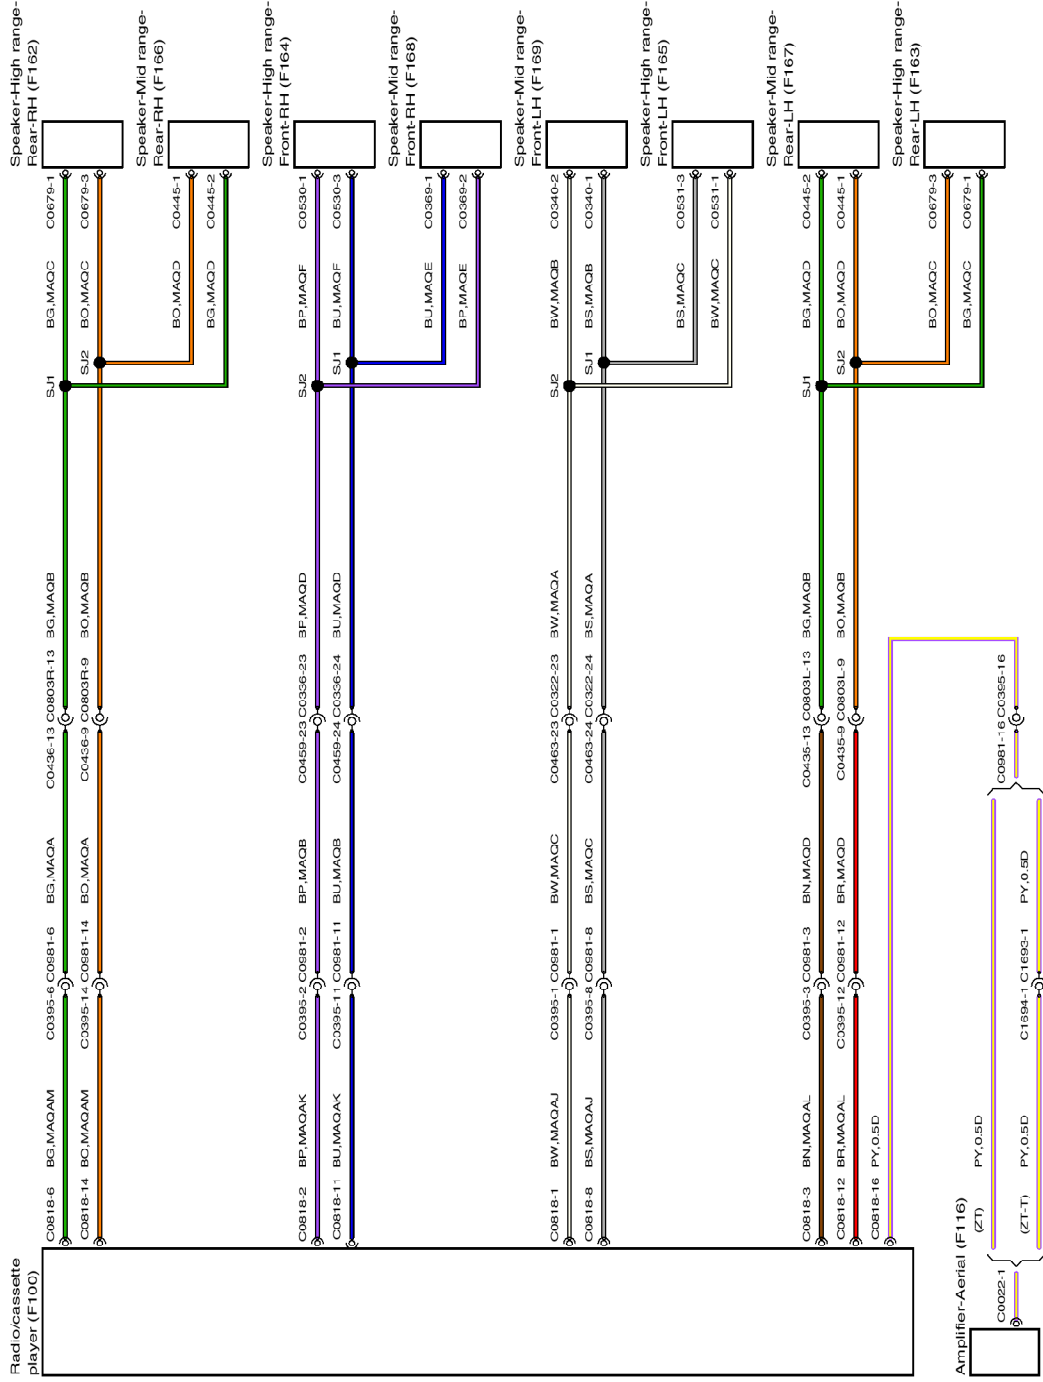


VWR40320-3

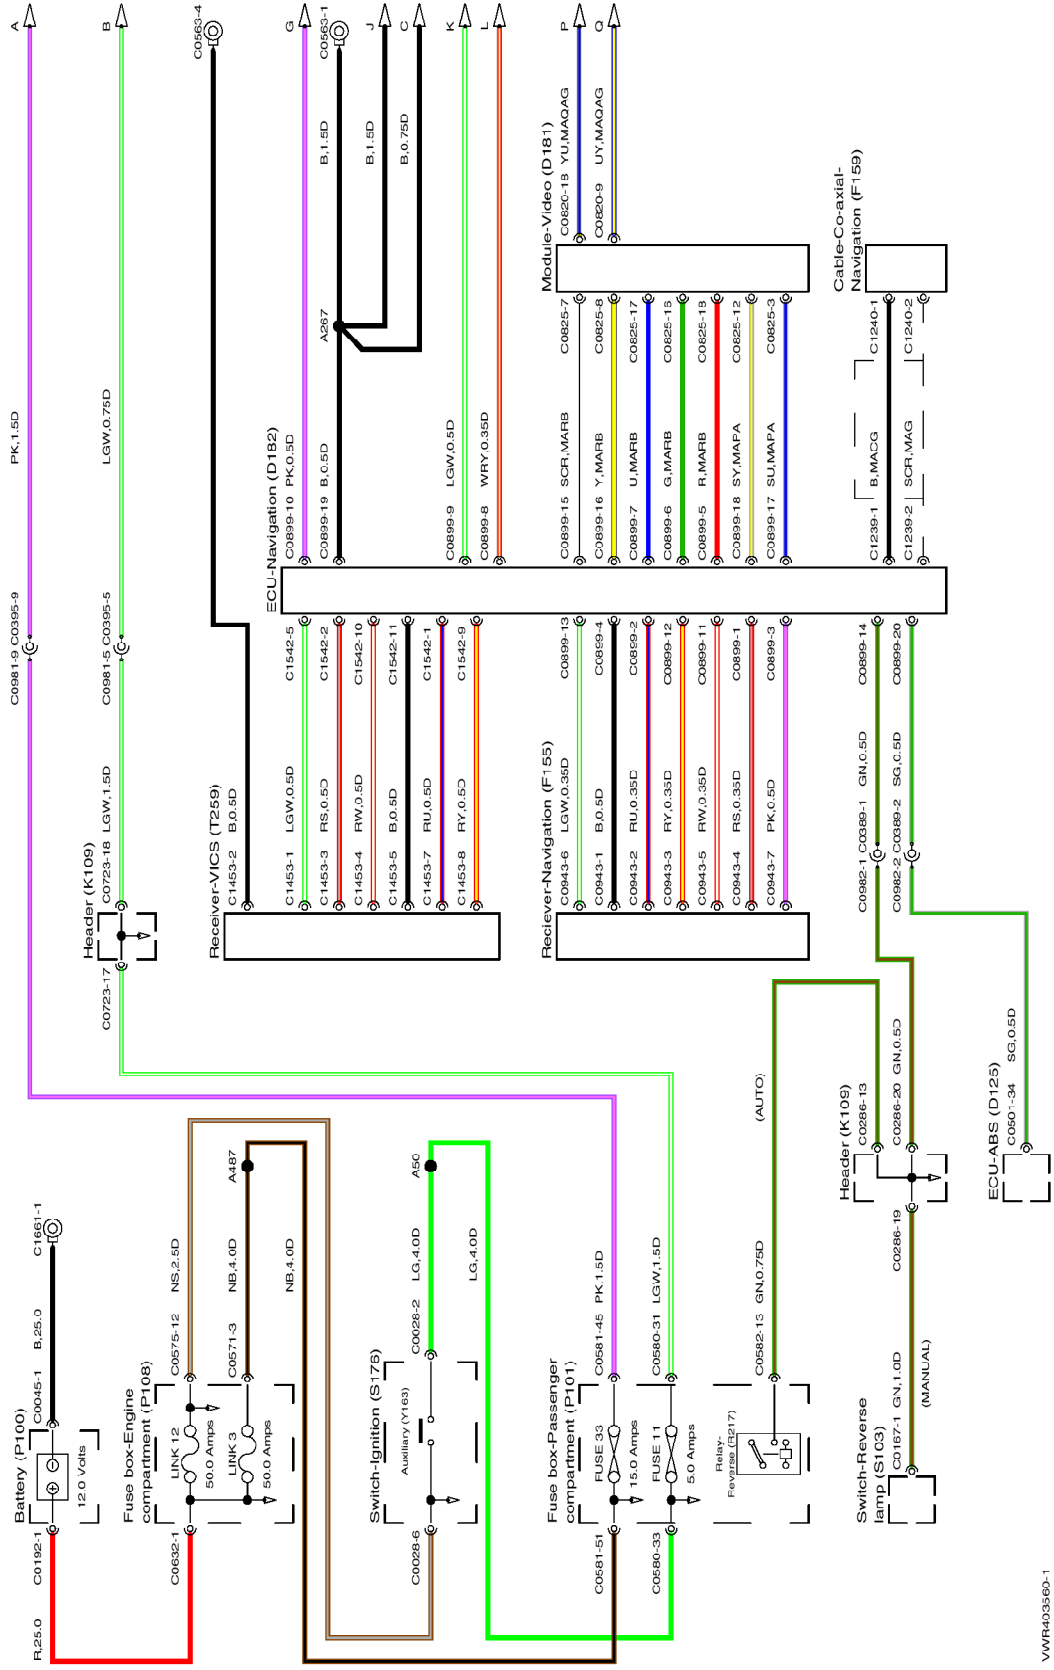


VWR403560-1

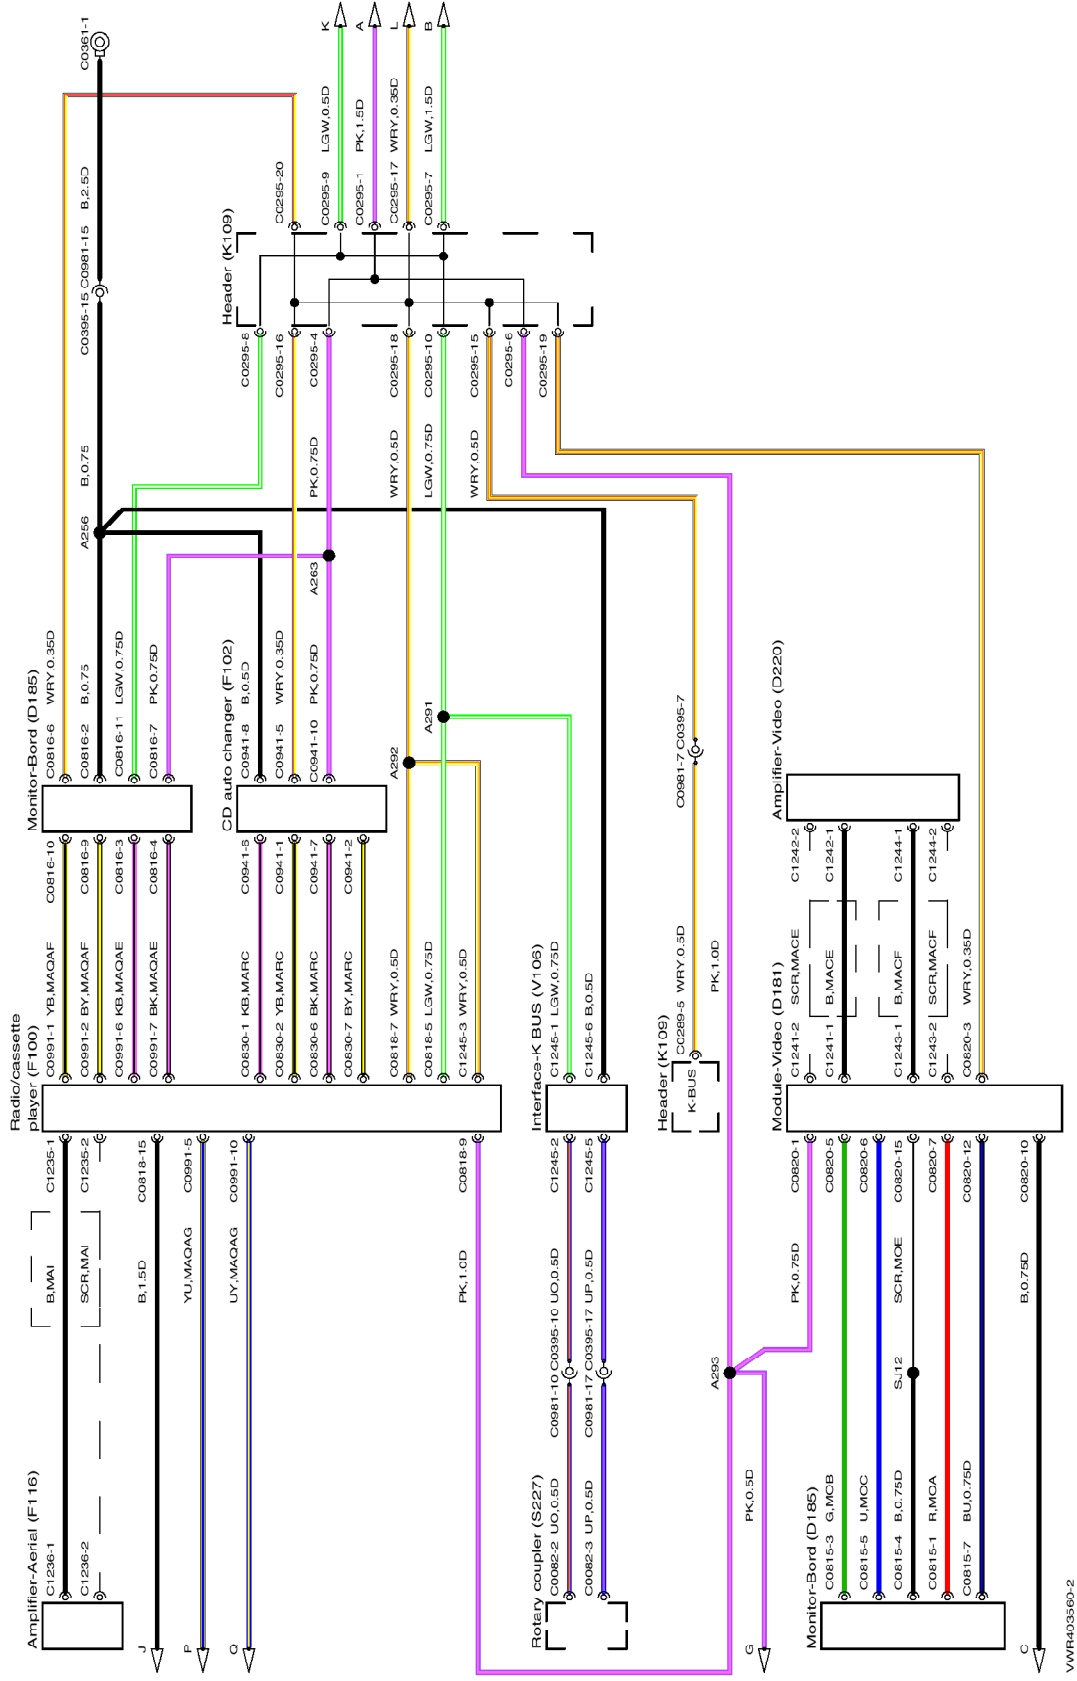


VWR403360-2

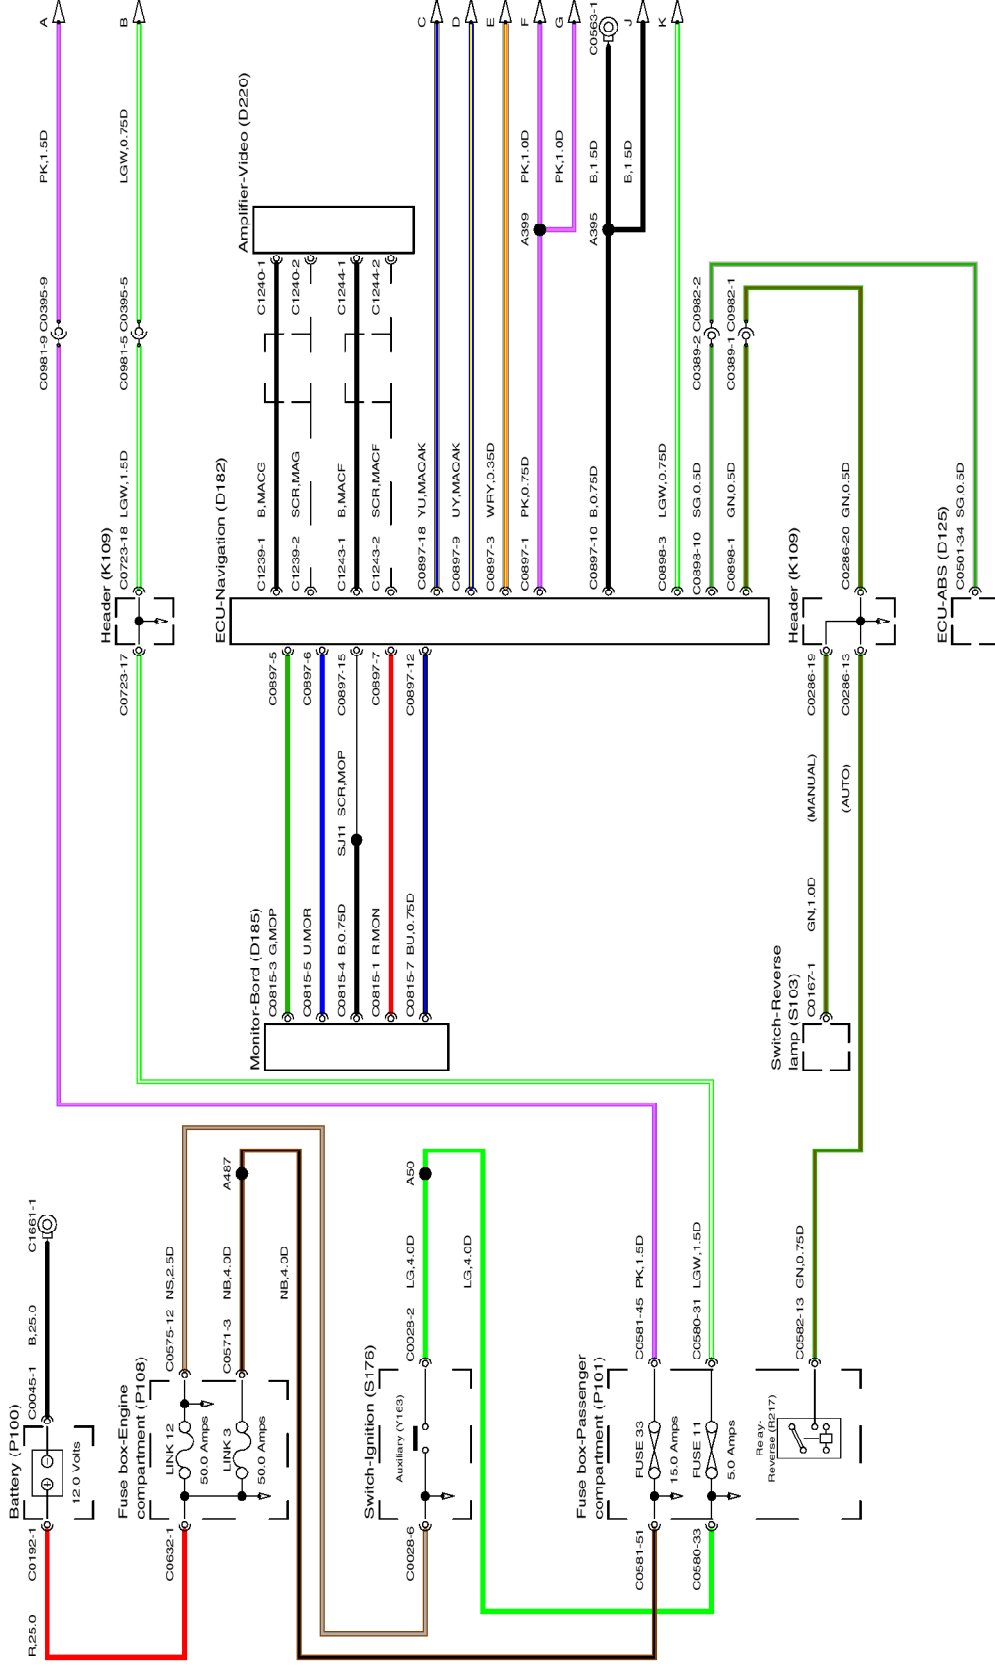


VWR403580-1

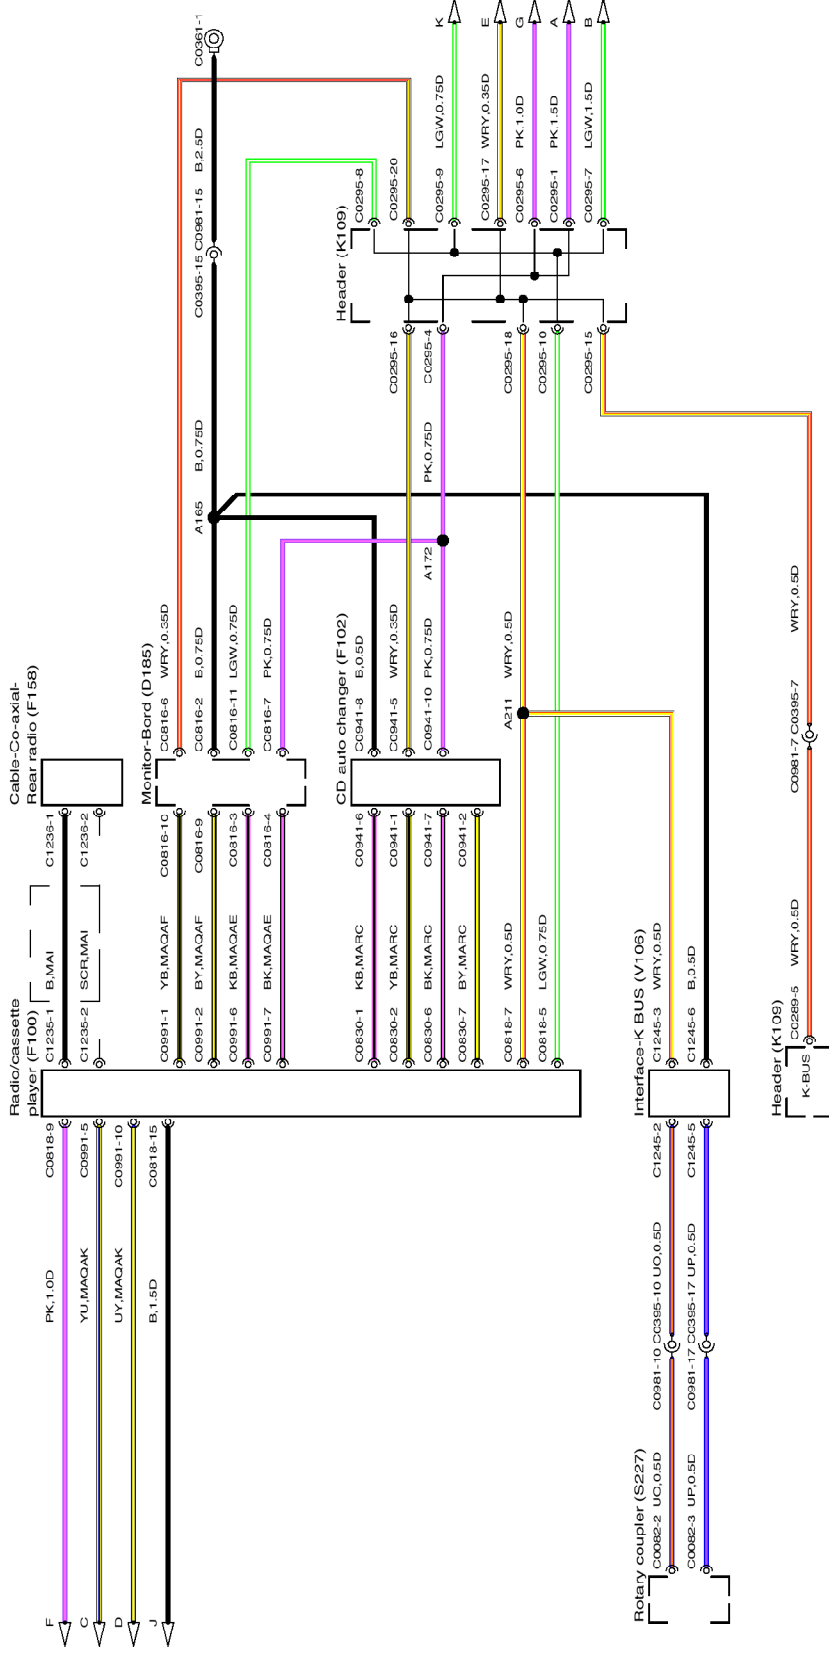


VWR403580-2

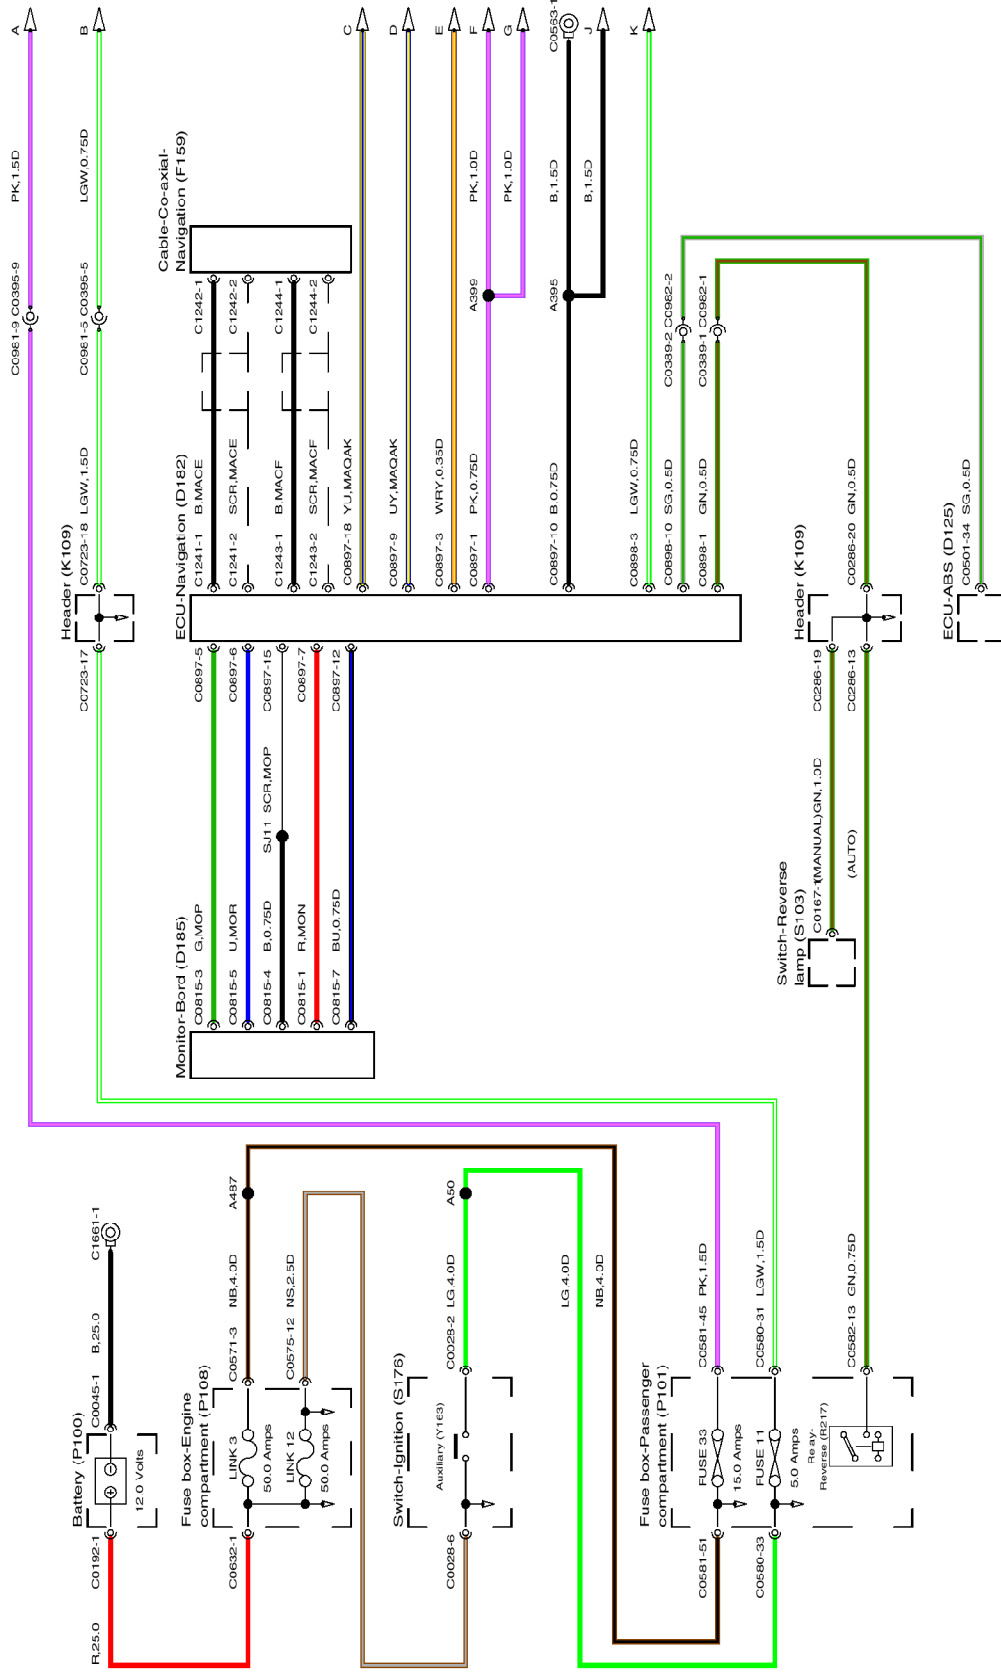


VWR403800-1

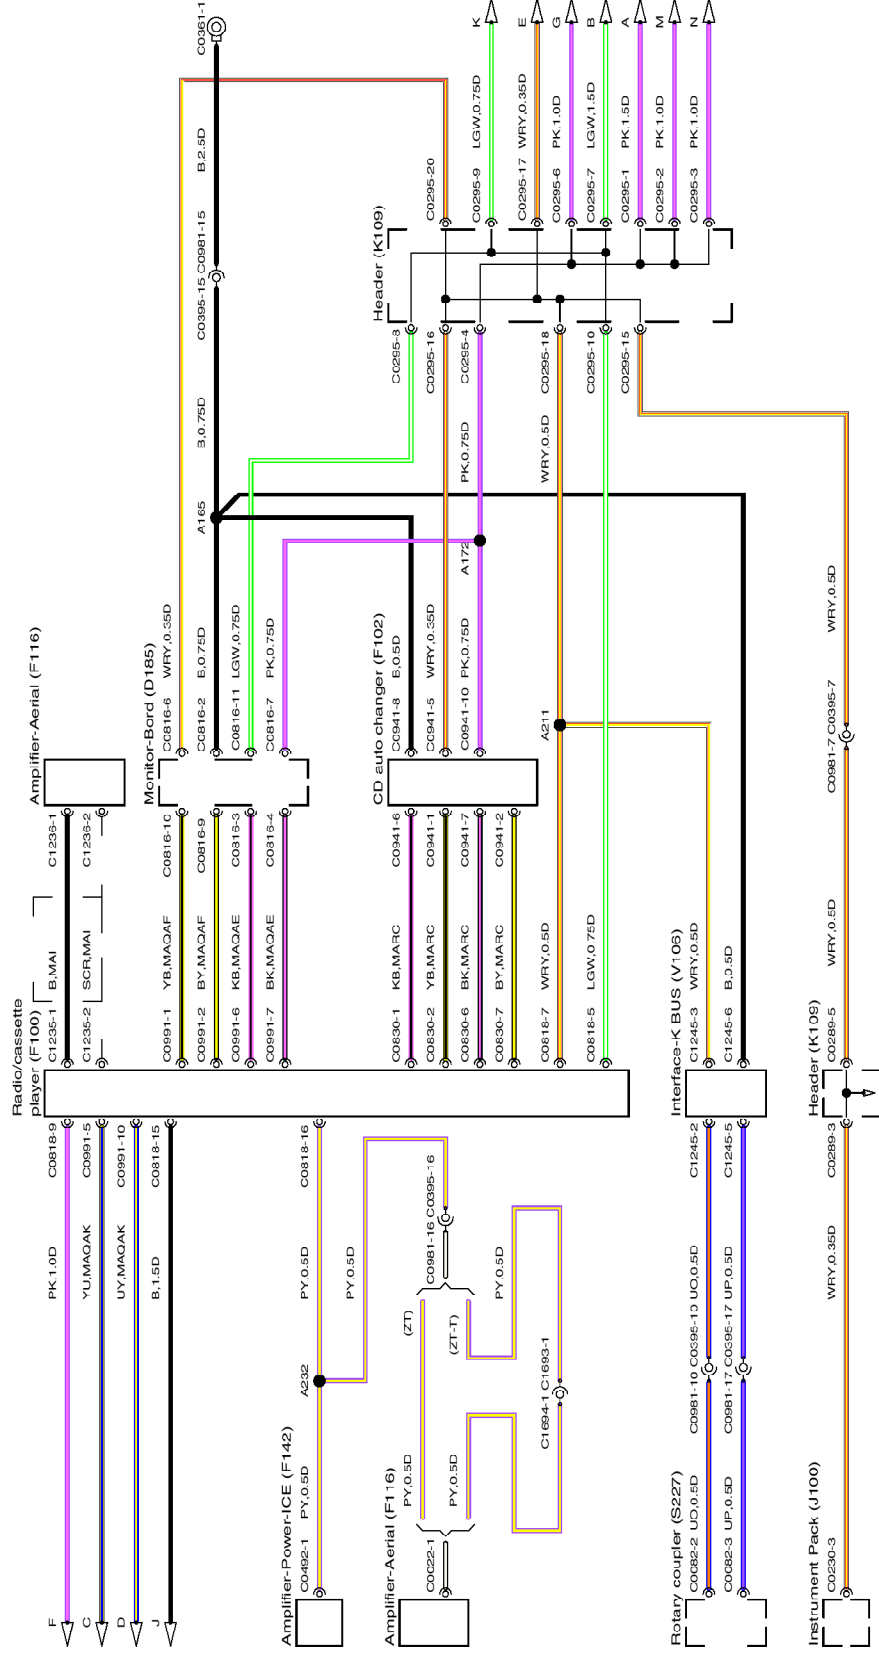



VWR40300-2

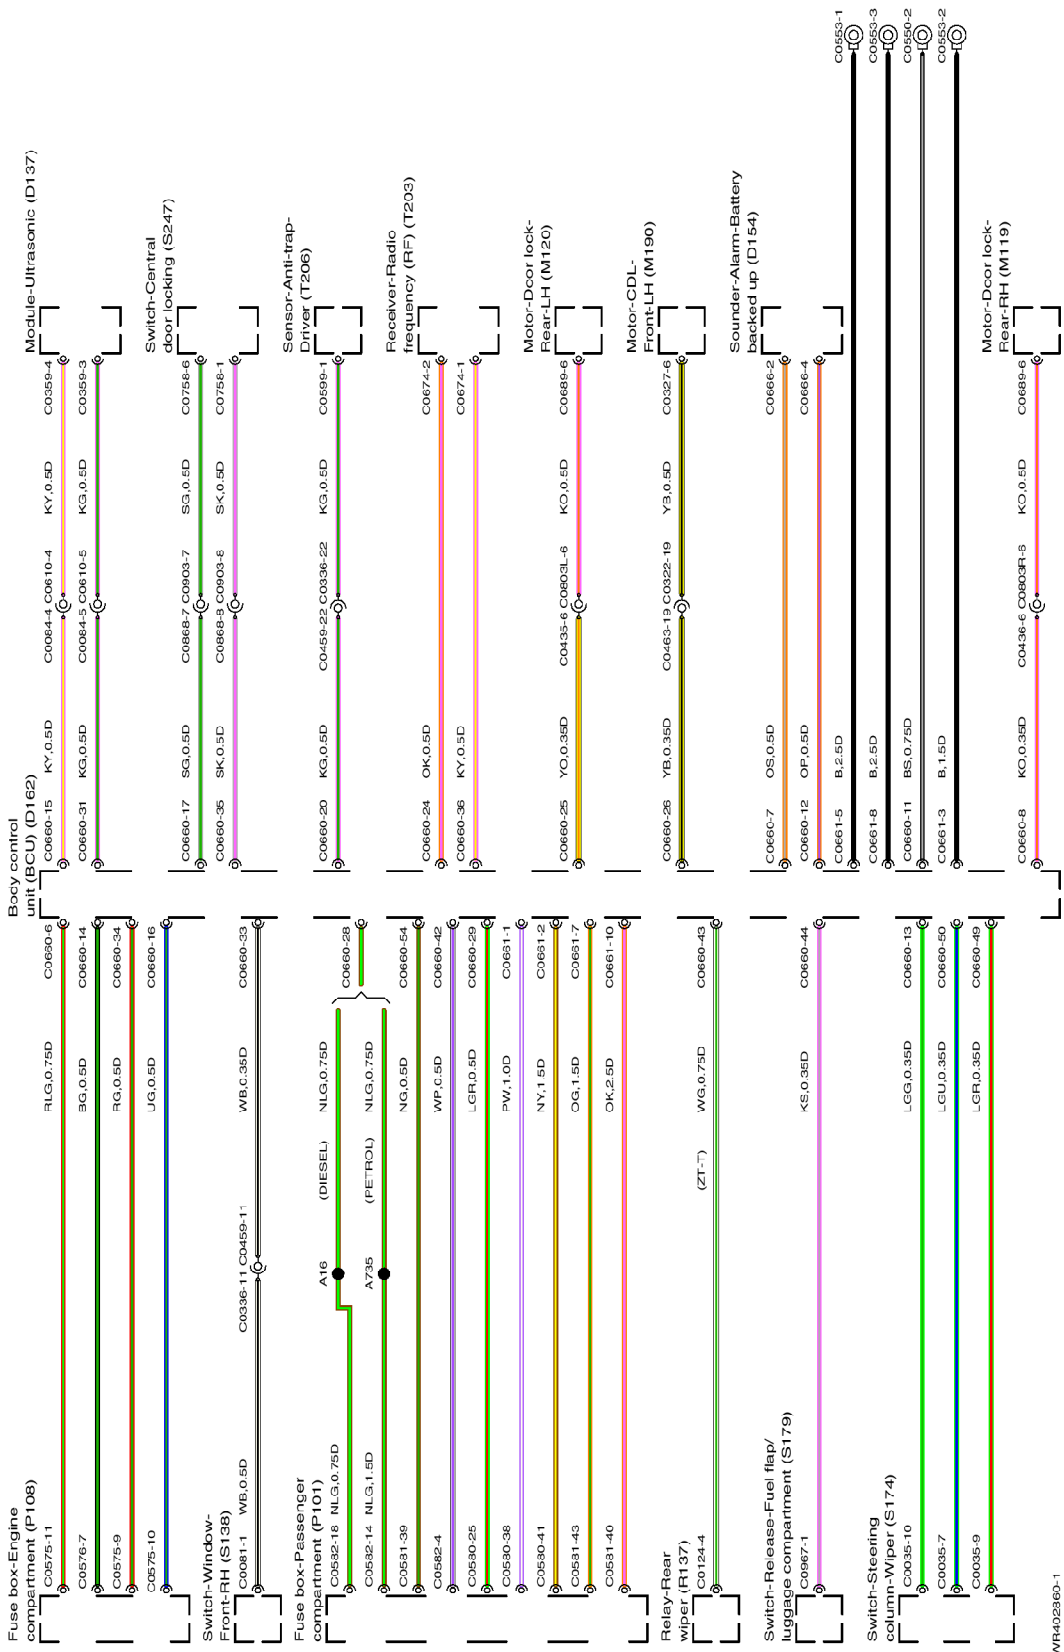


VWR402360-1

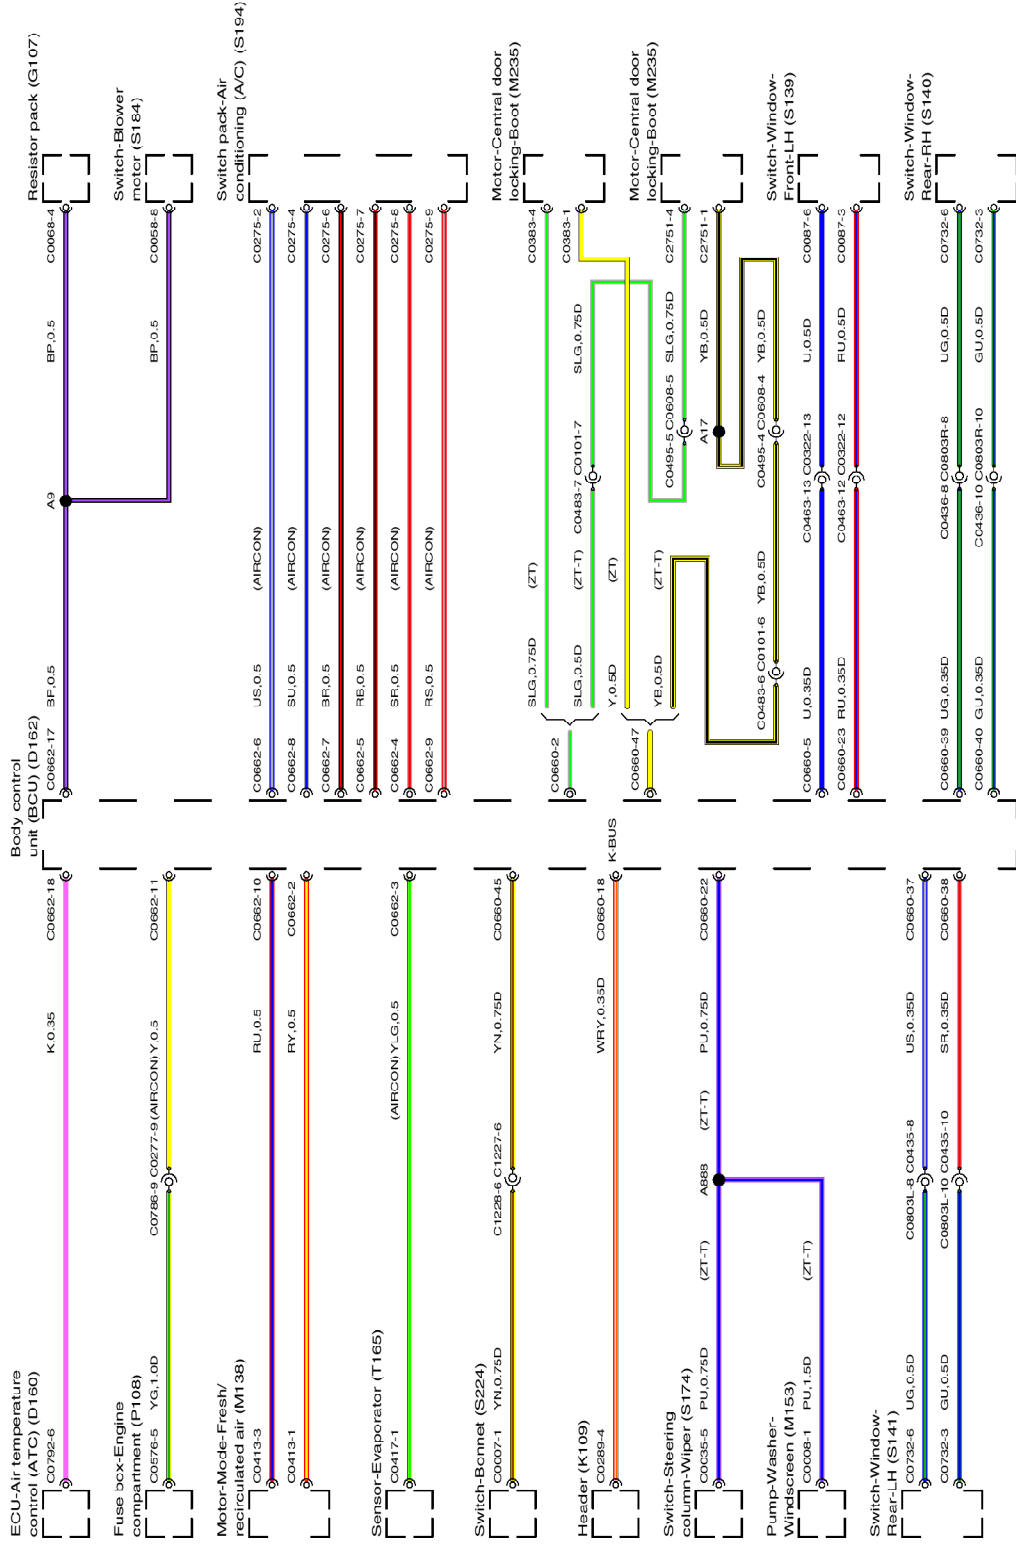


VWR402360-3

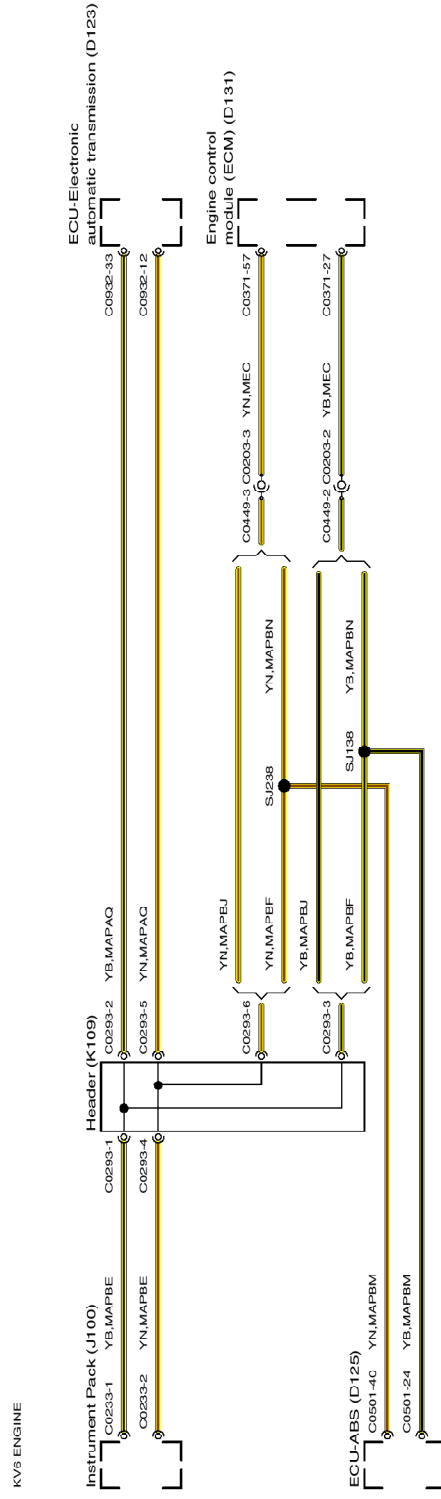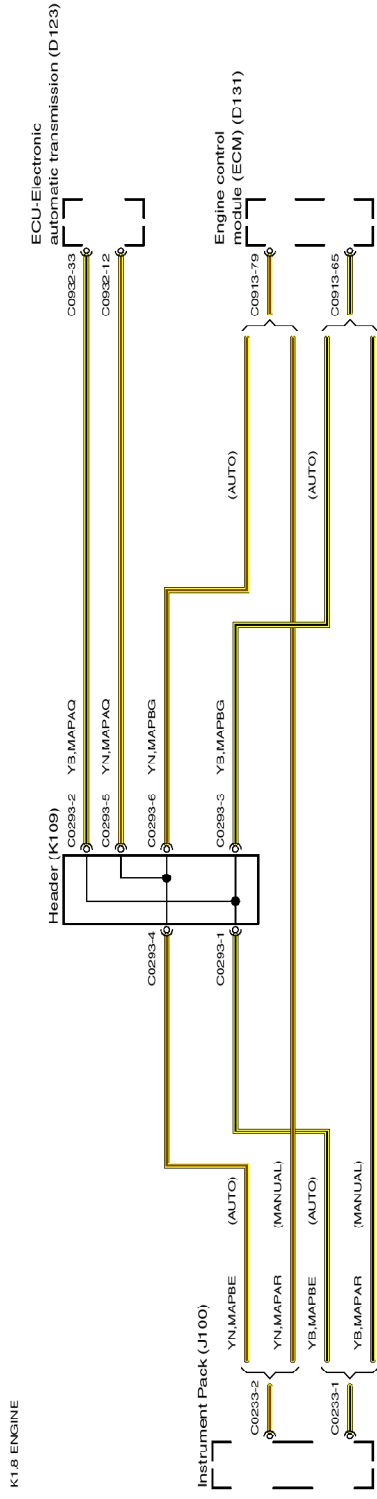


VWR402920-1

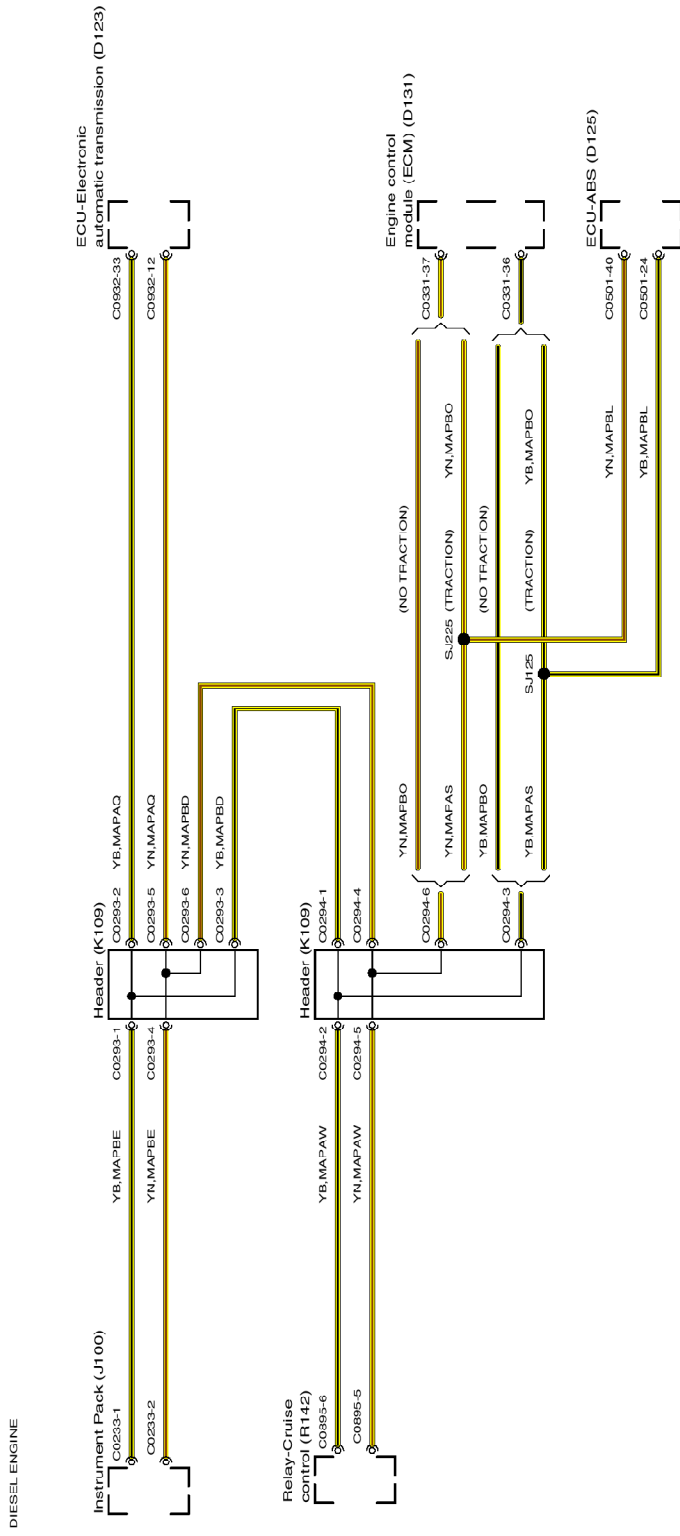


VWR402320-2

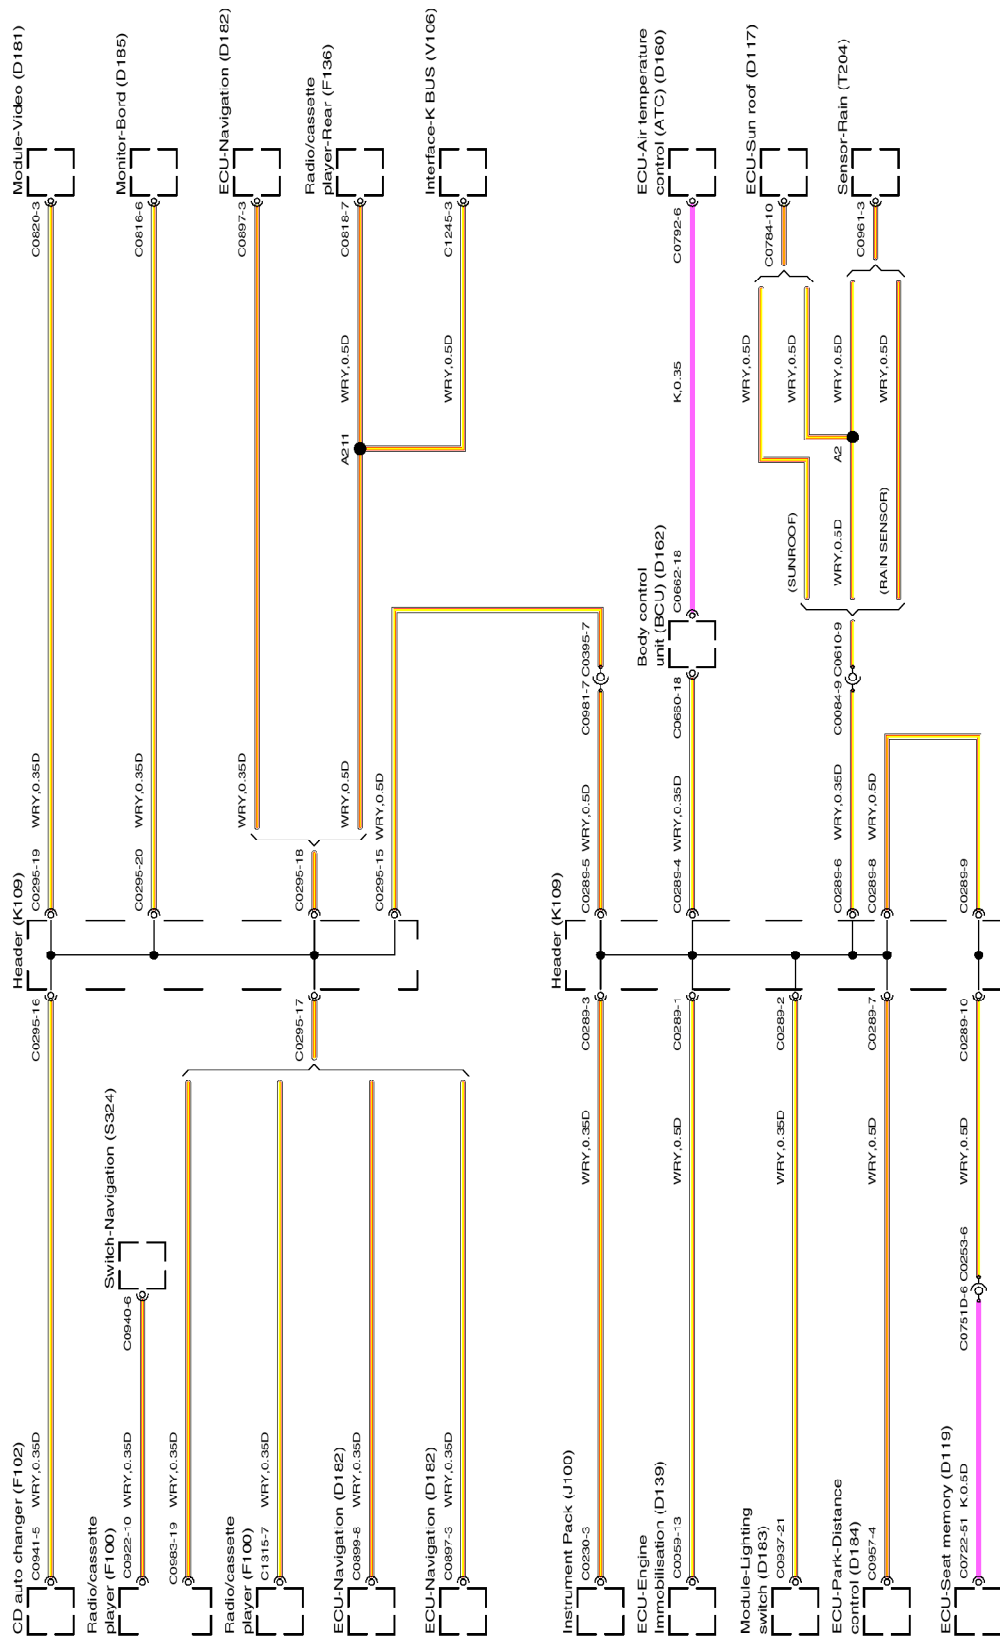


VWR402320-3

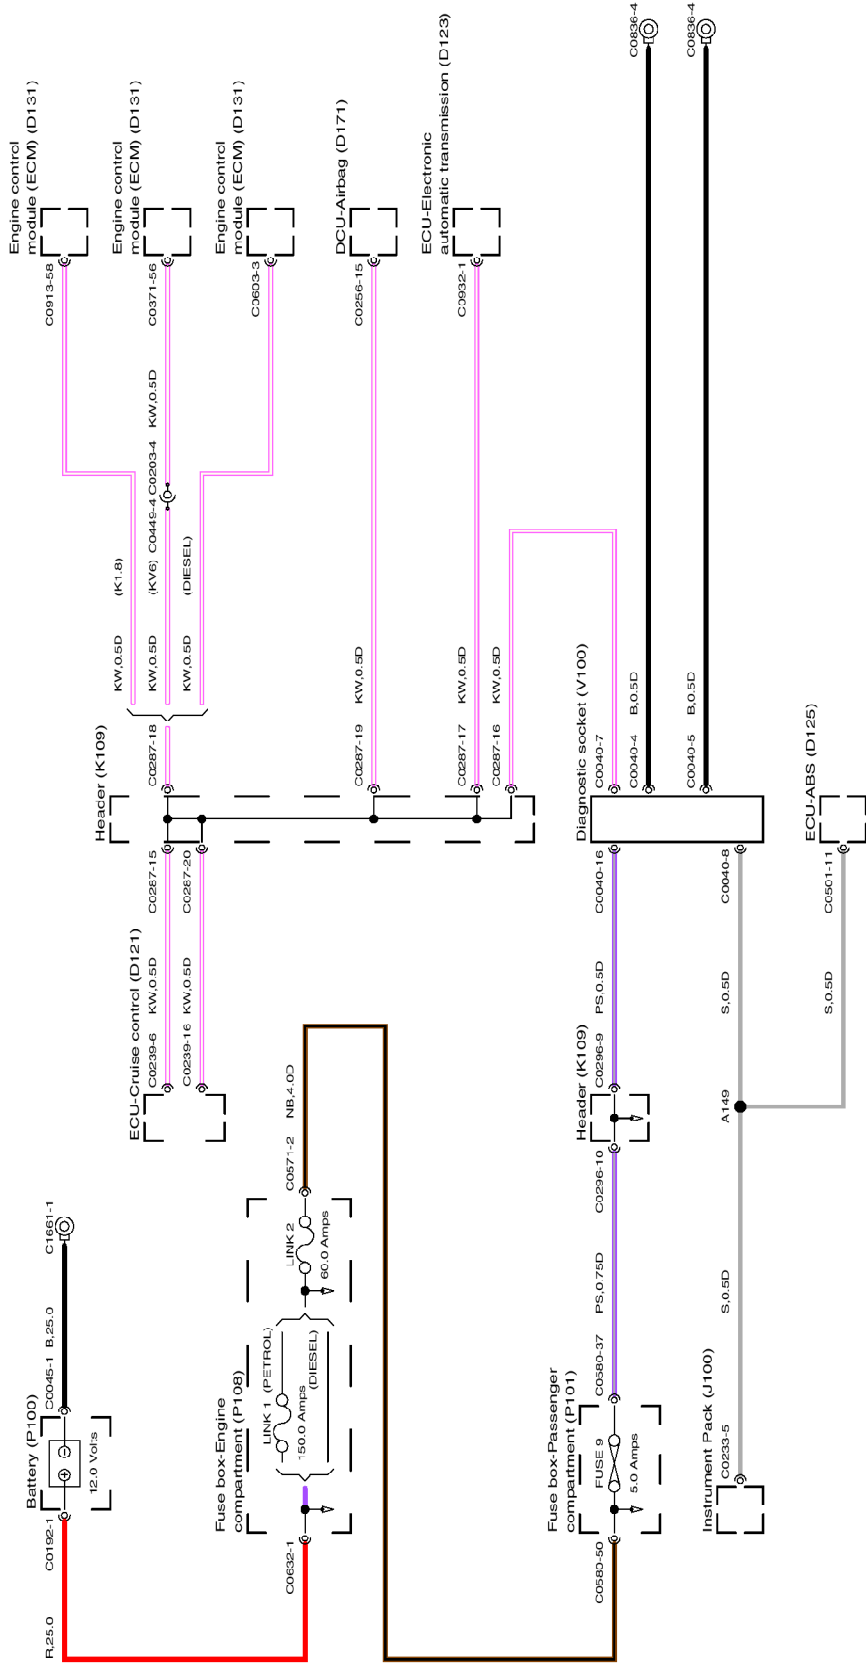


VWVR403000-1

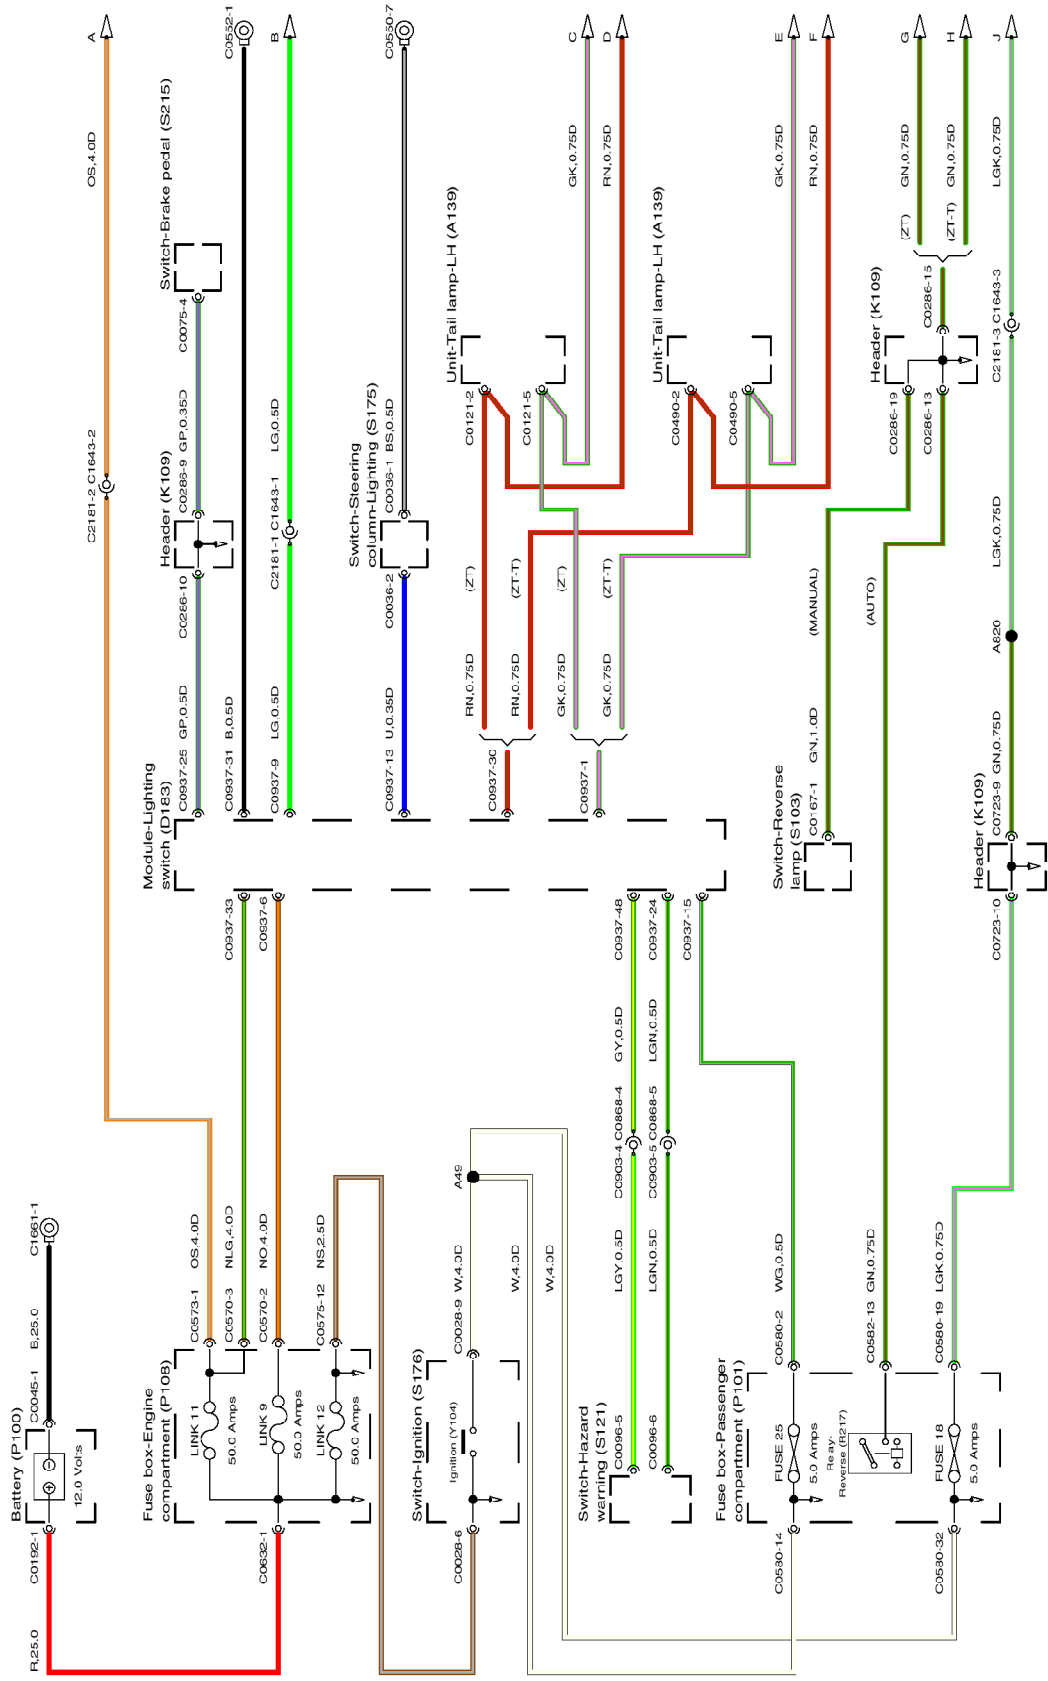


VWR404040-1

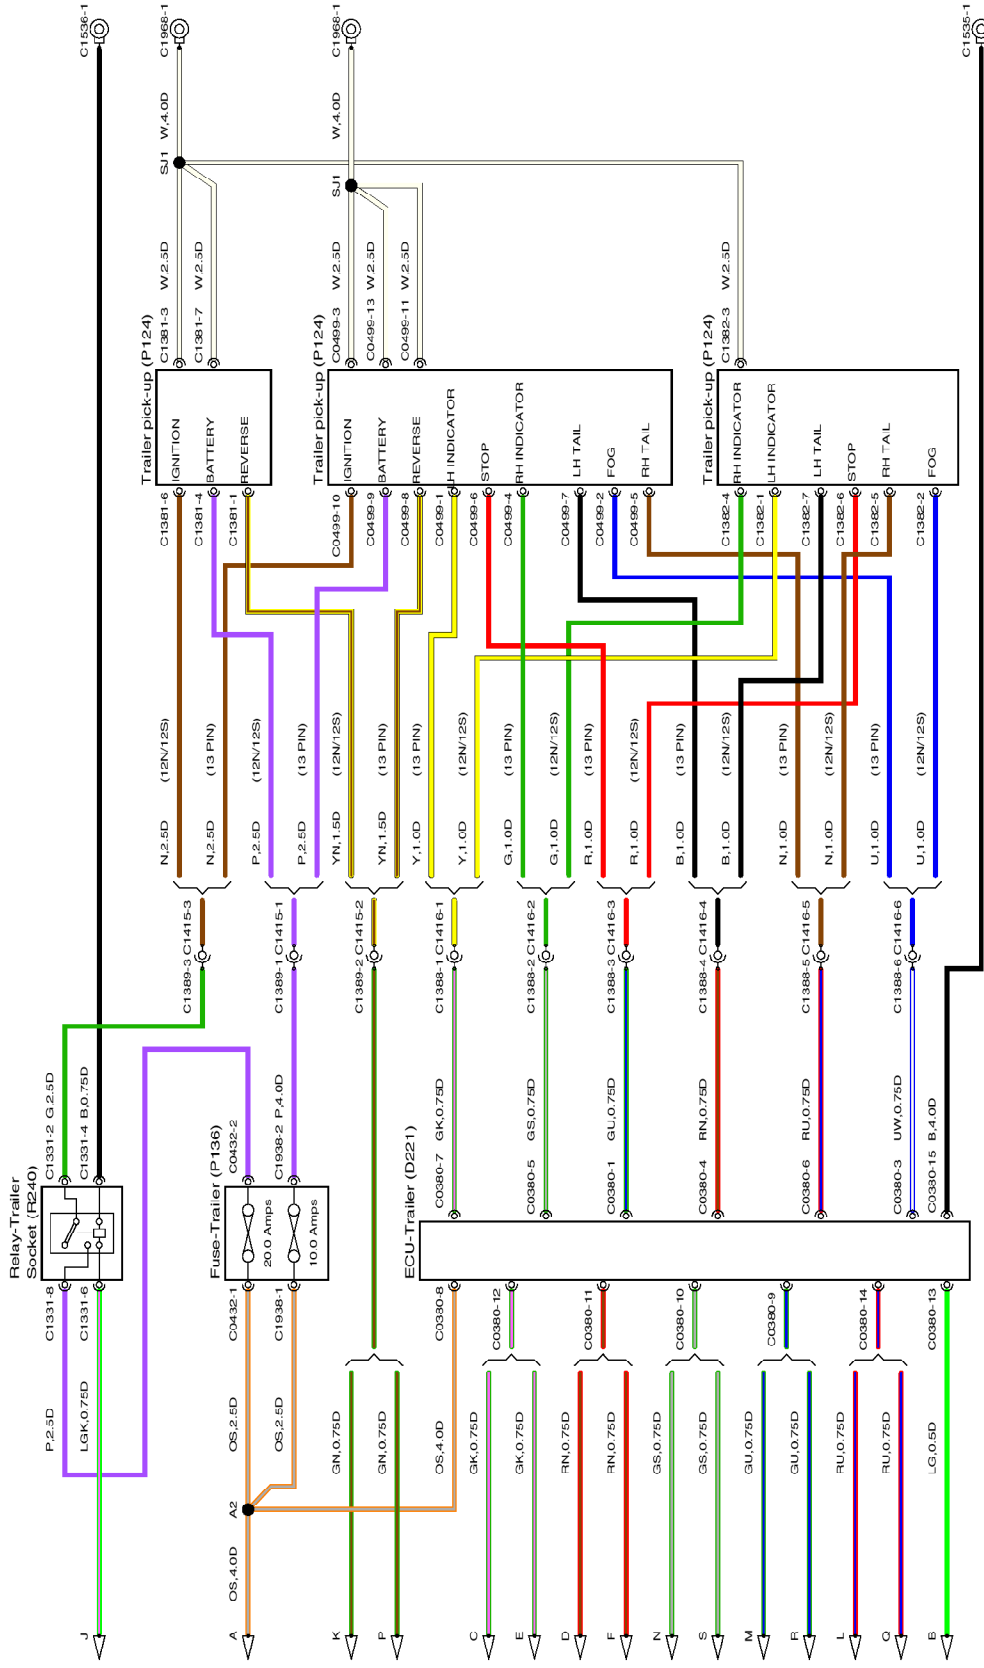


VWR404040-2

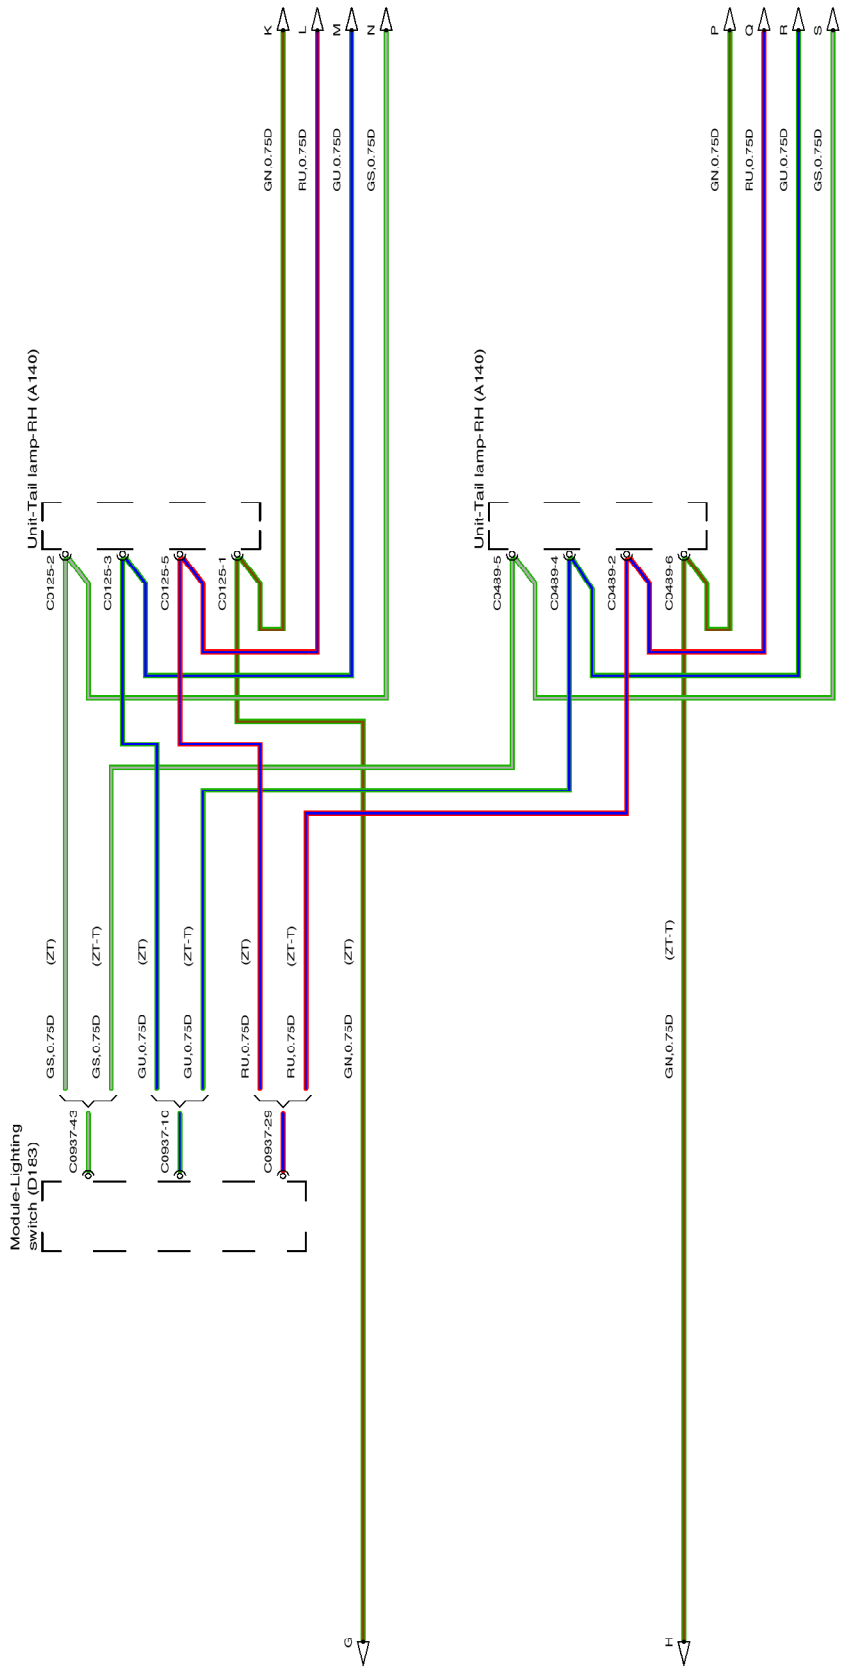


VWR404040-3

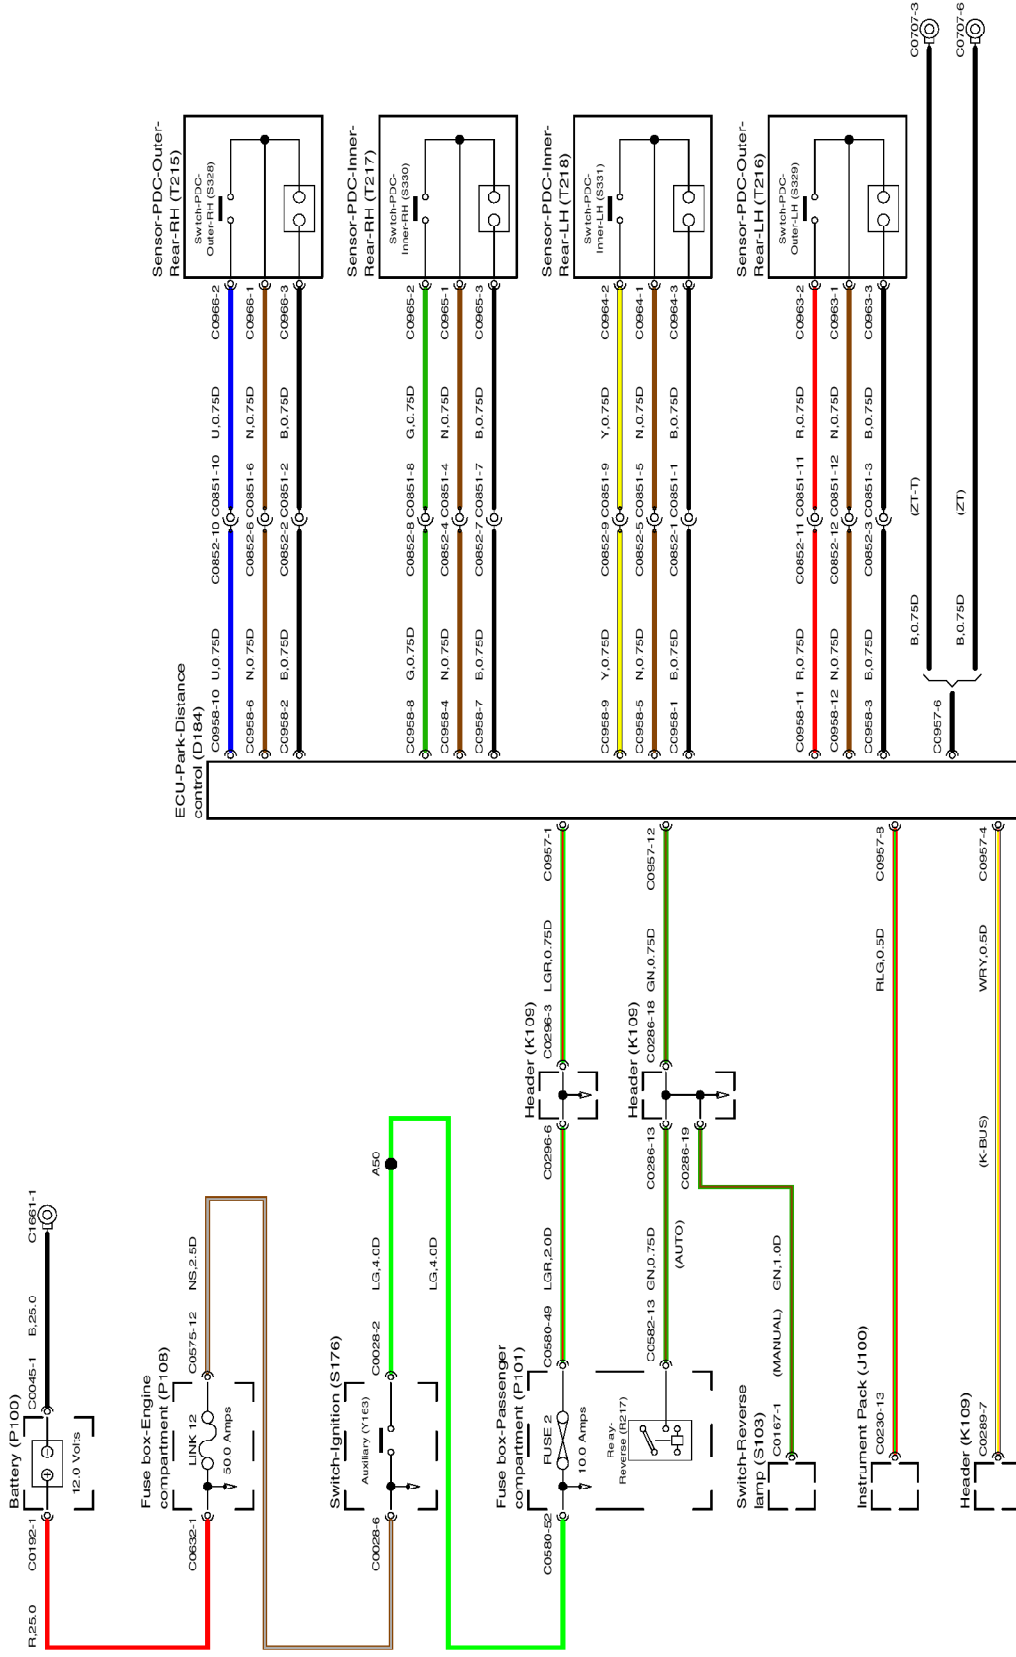


VWR403700-1

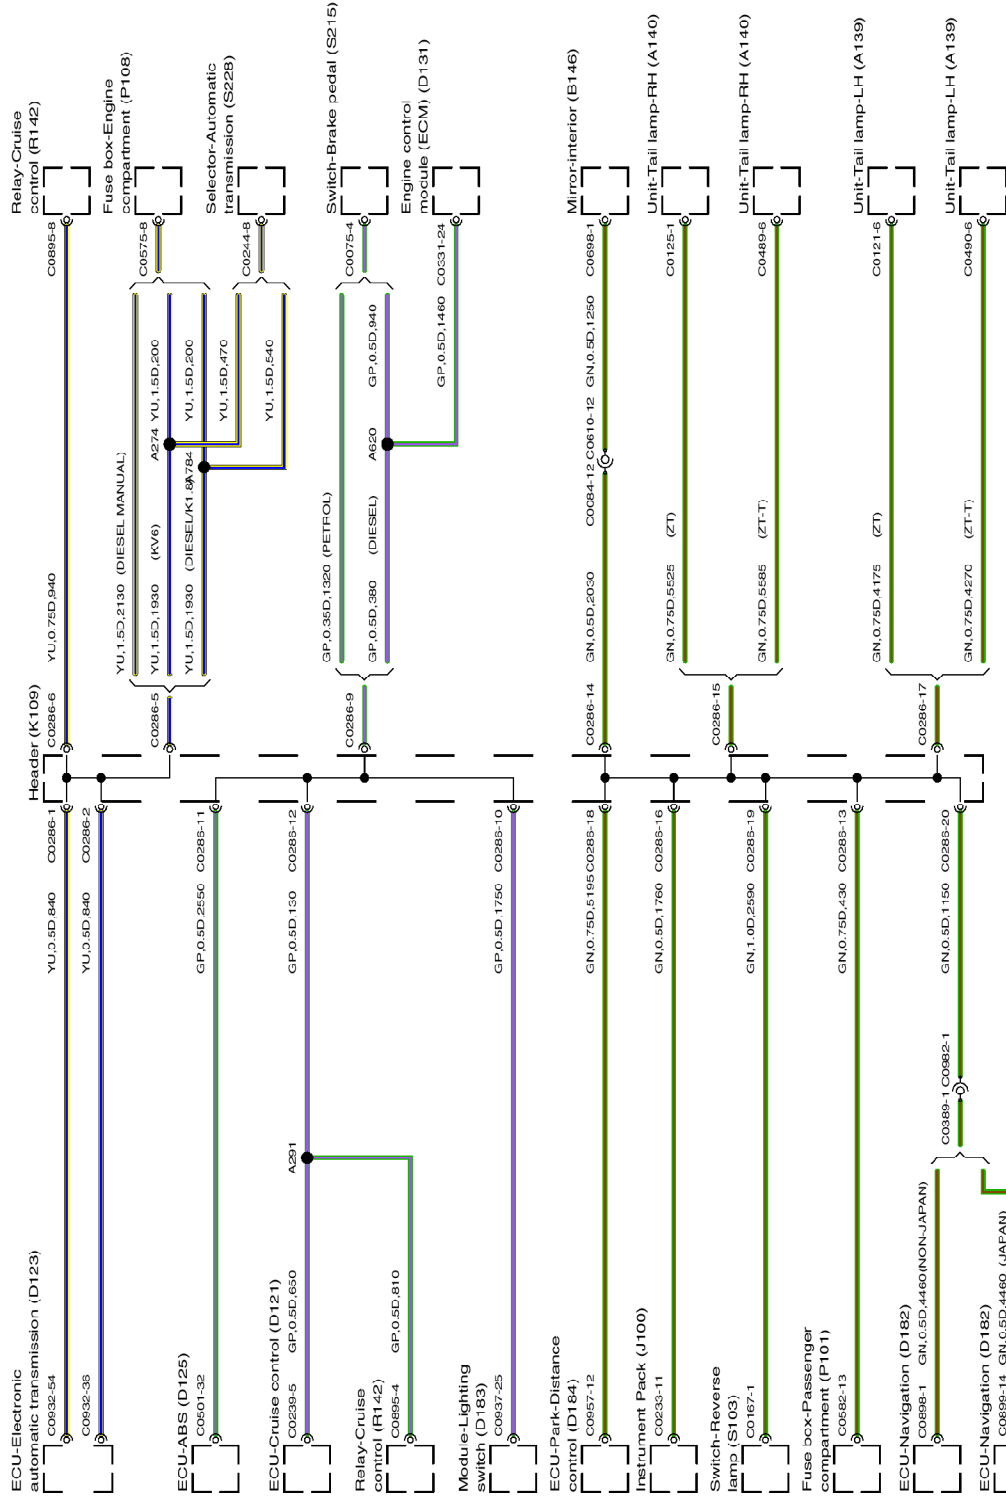


VWR403200-1

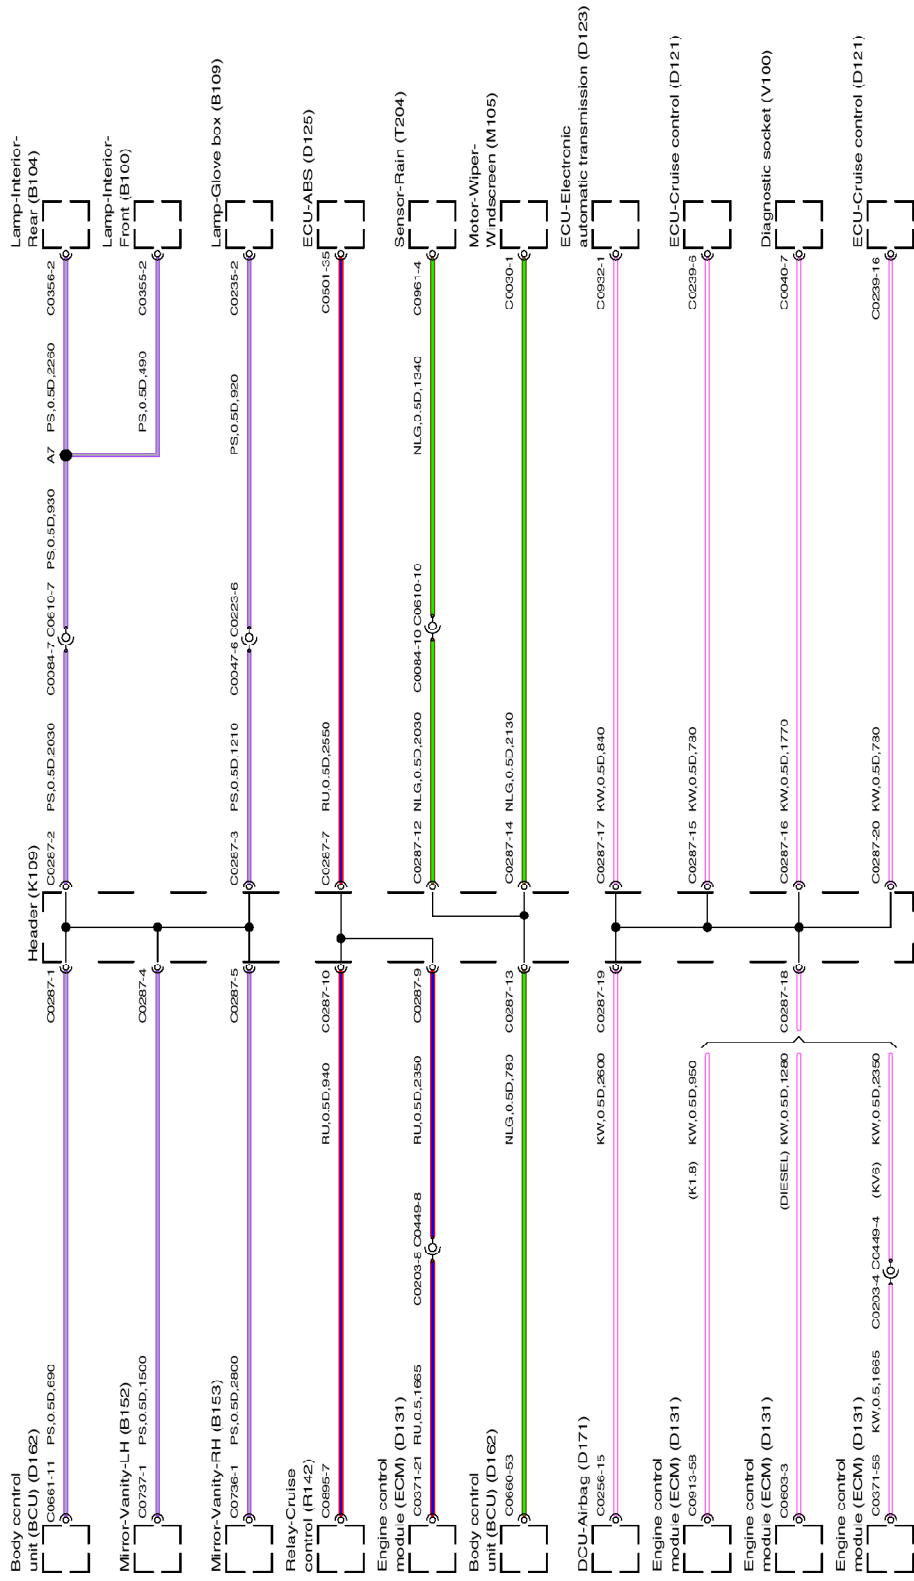


VWR403200-2

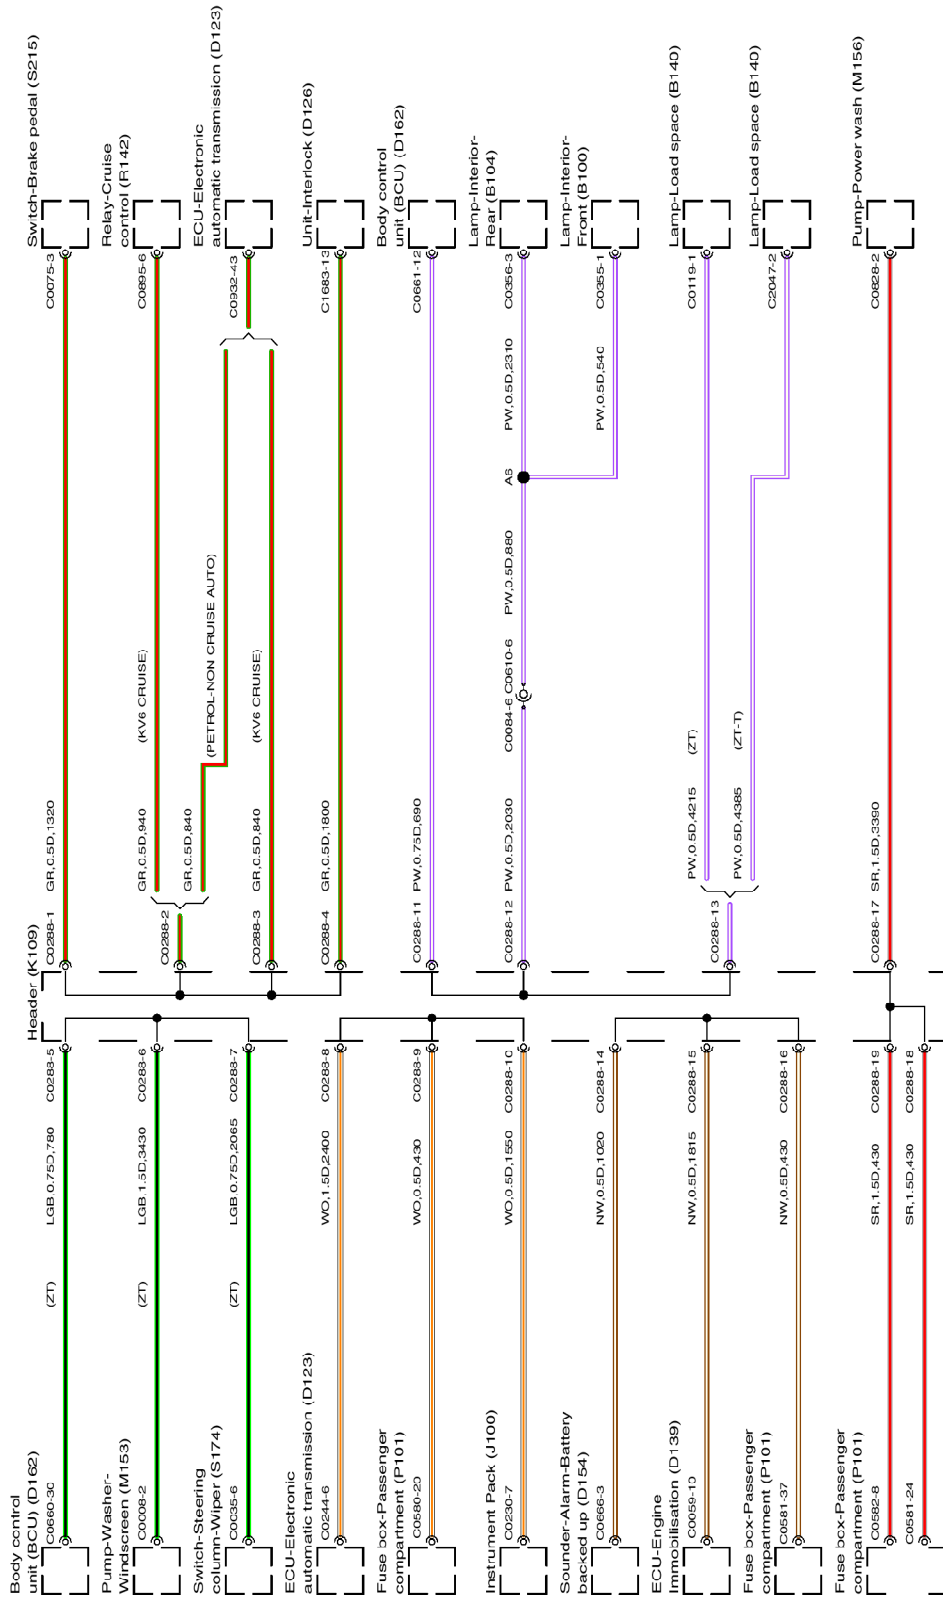


VWR403200-3

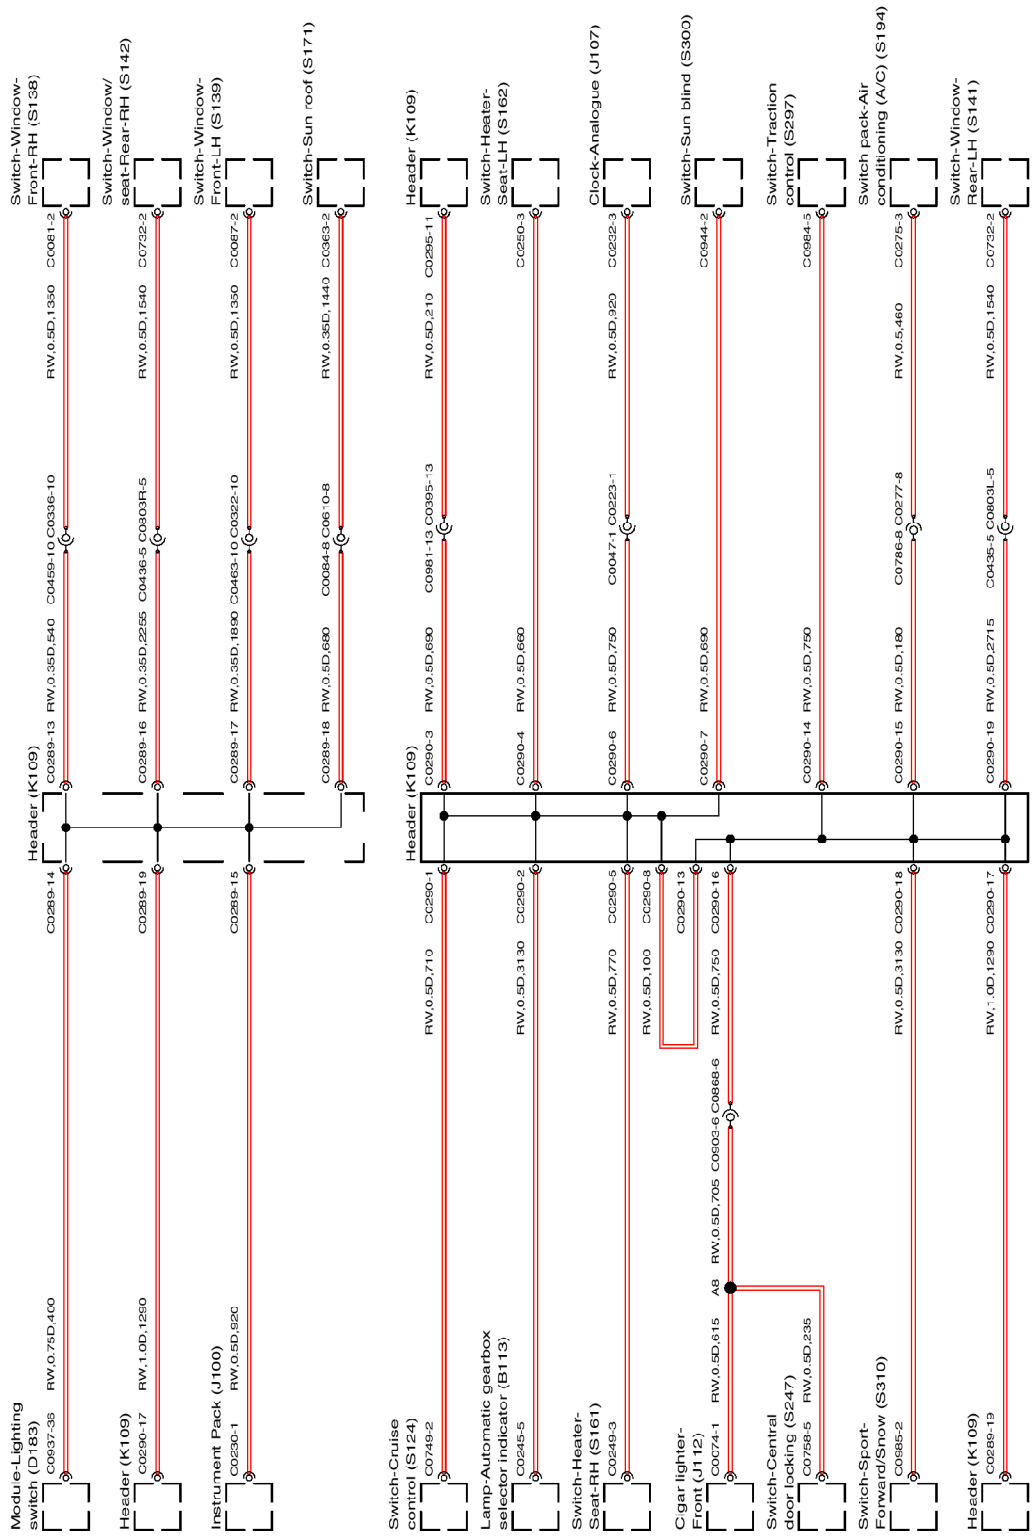


VWR403200-4

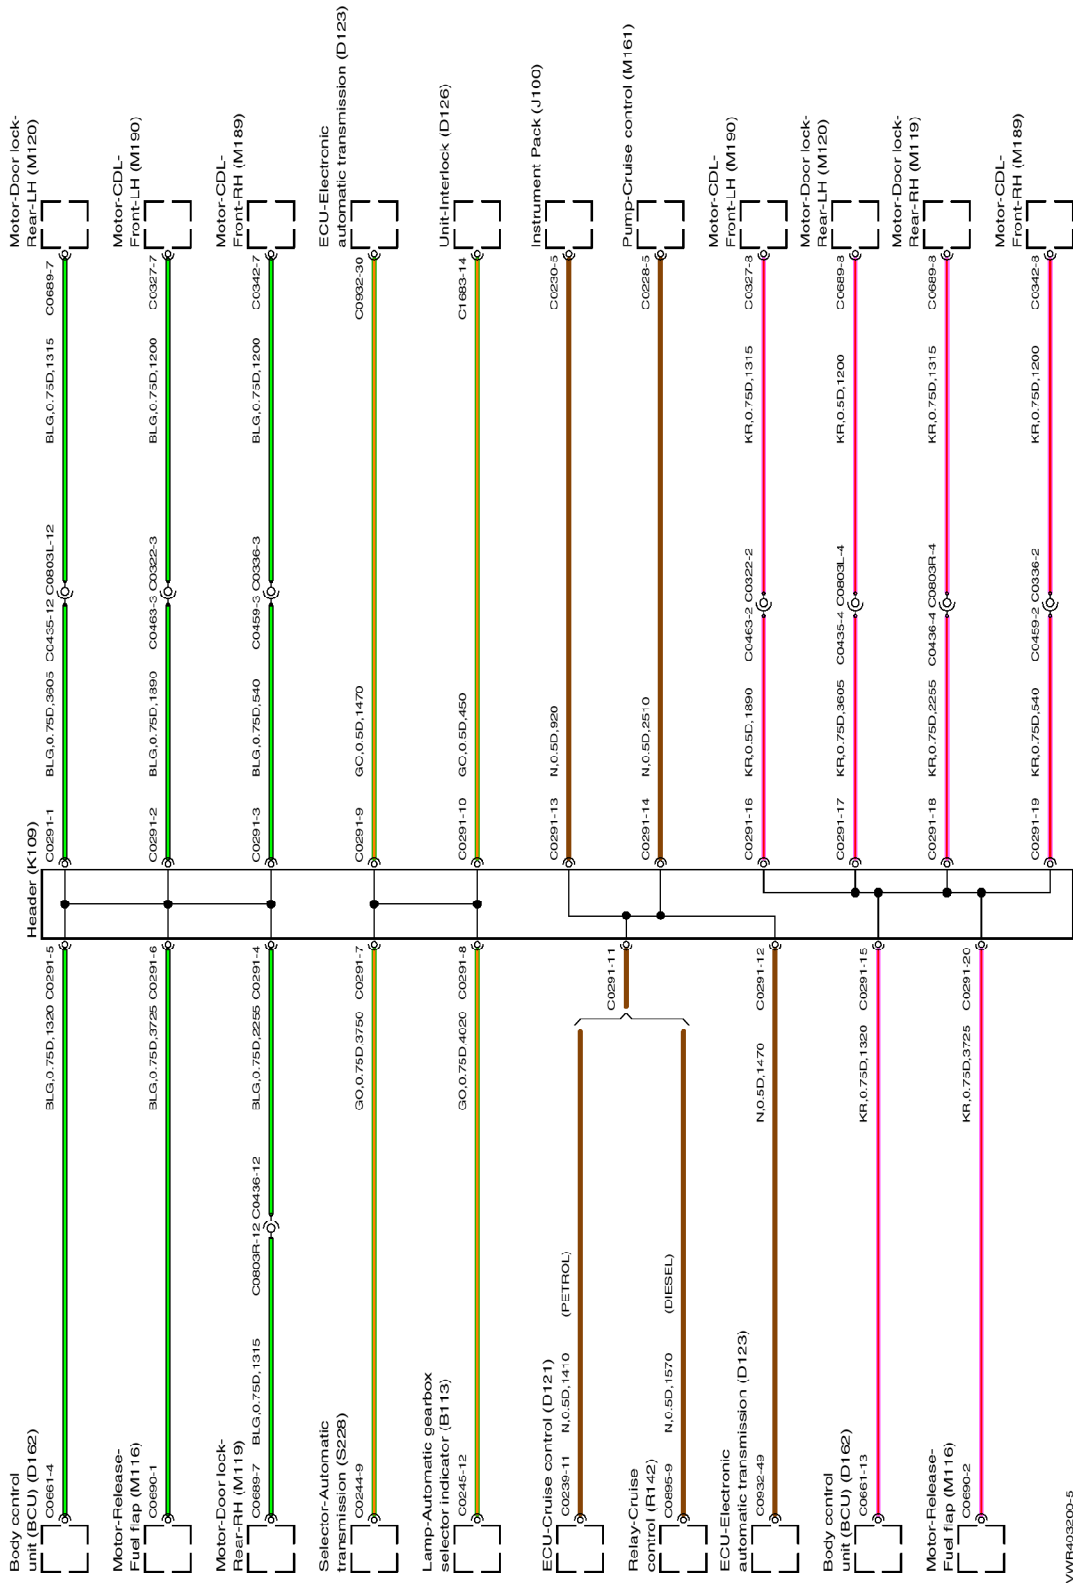


VWR403200-5

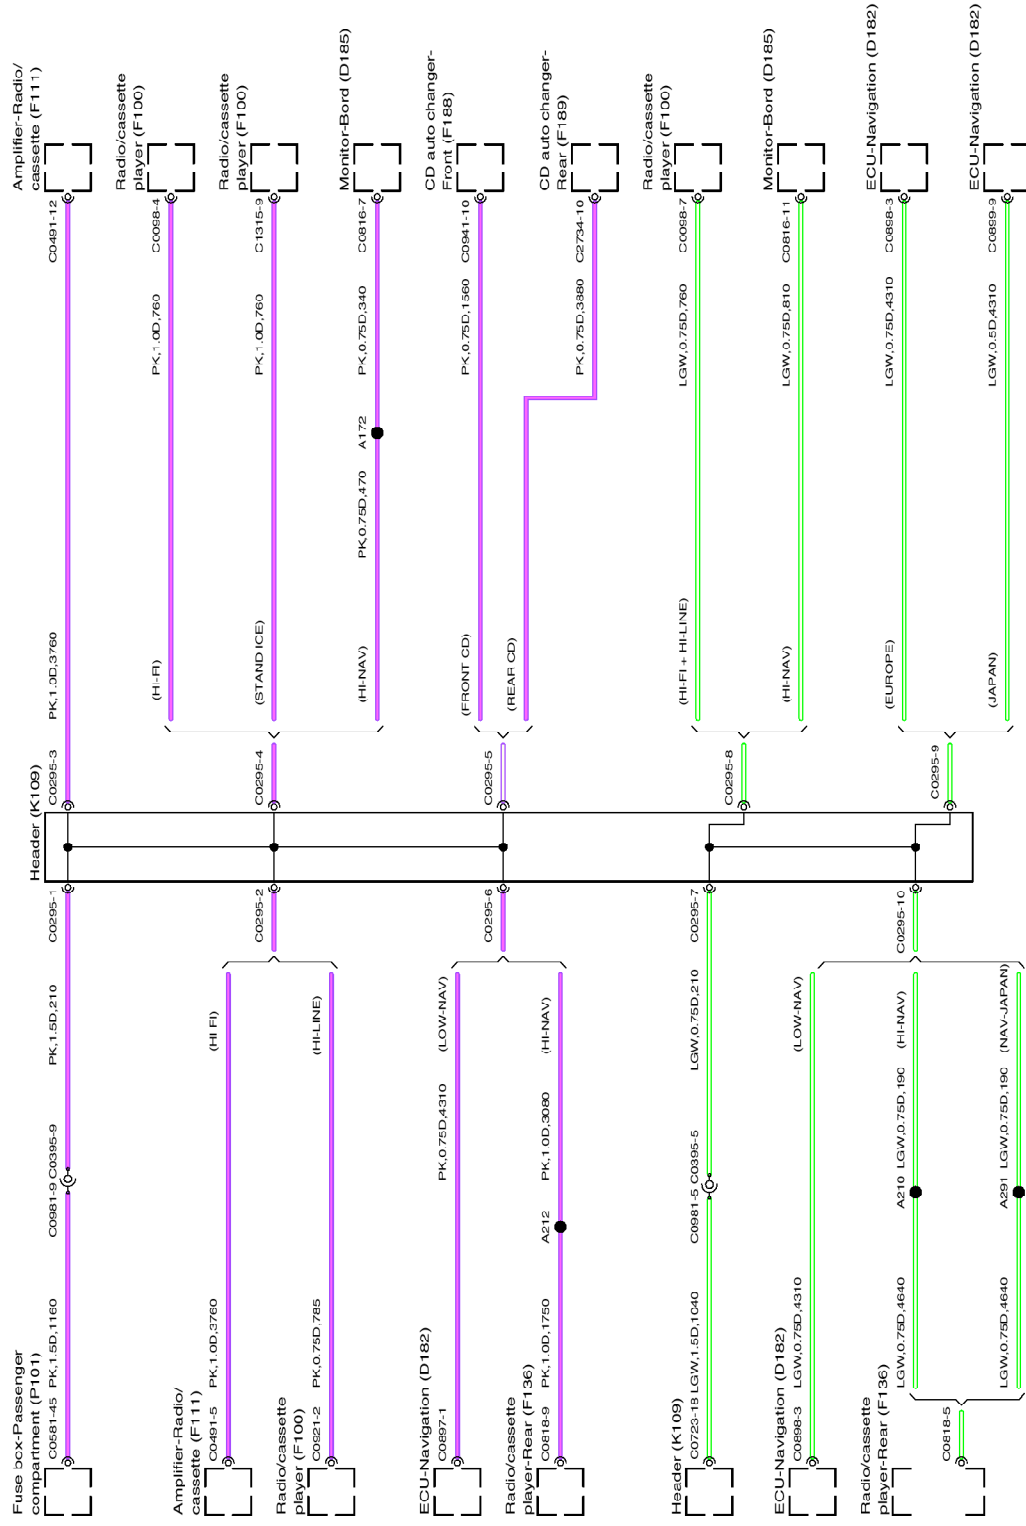


VWR403200-6

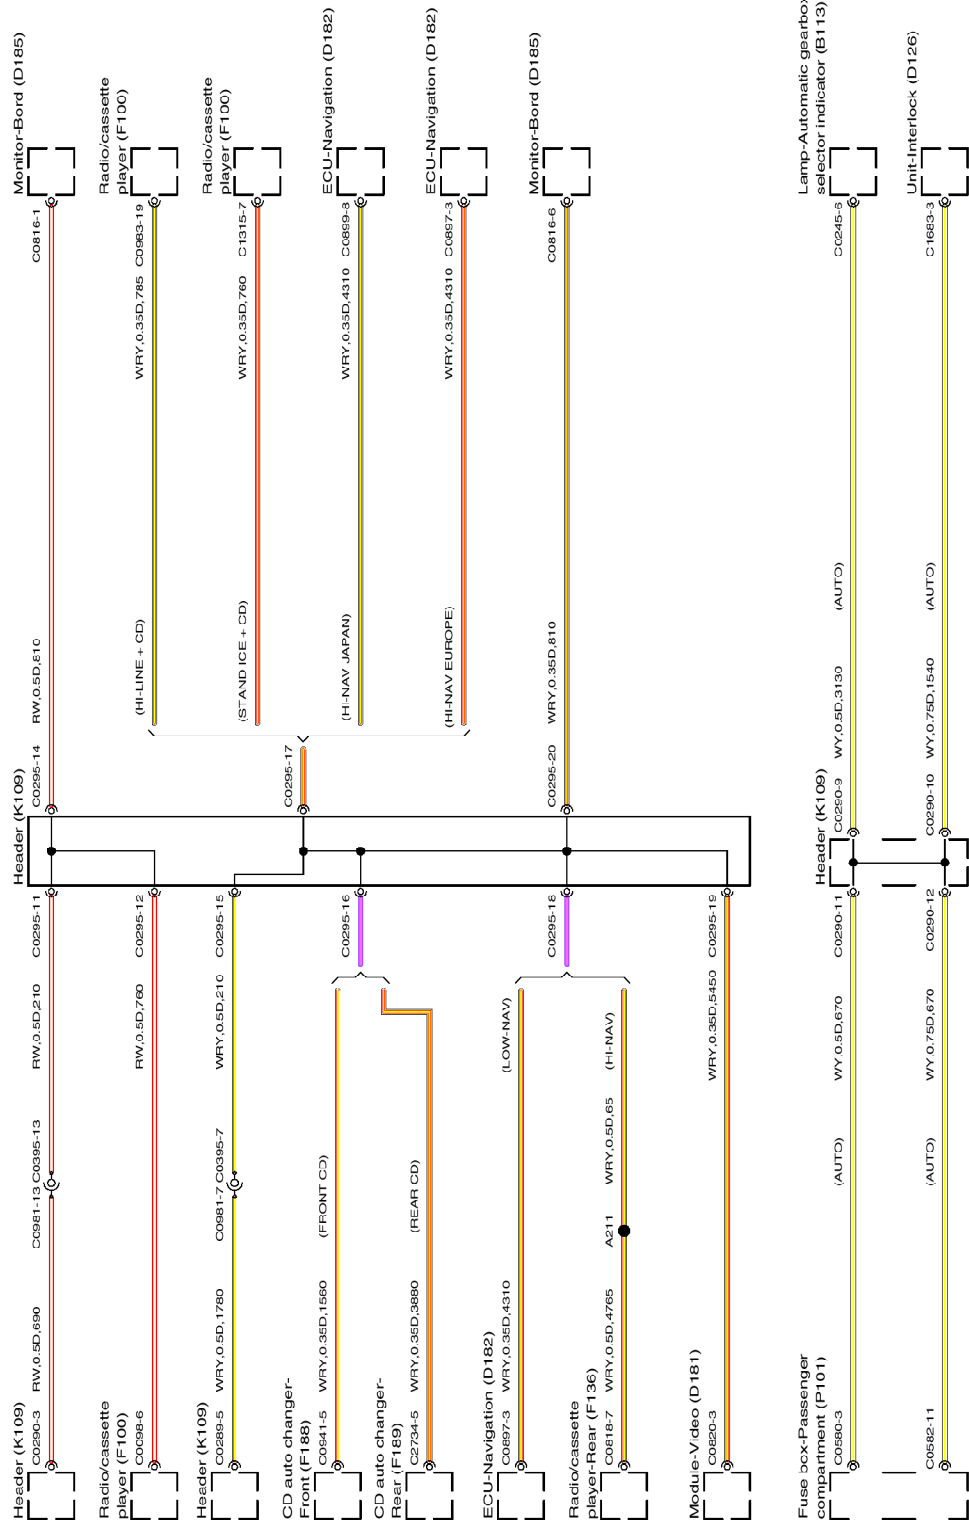


VWR403200-7

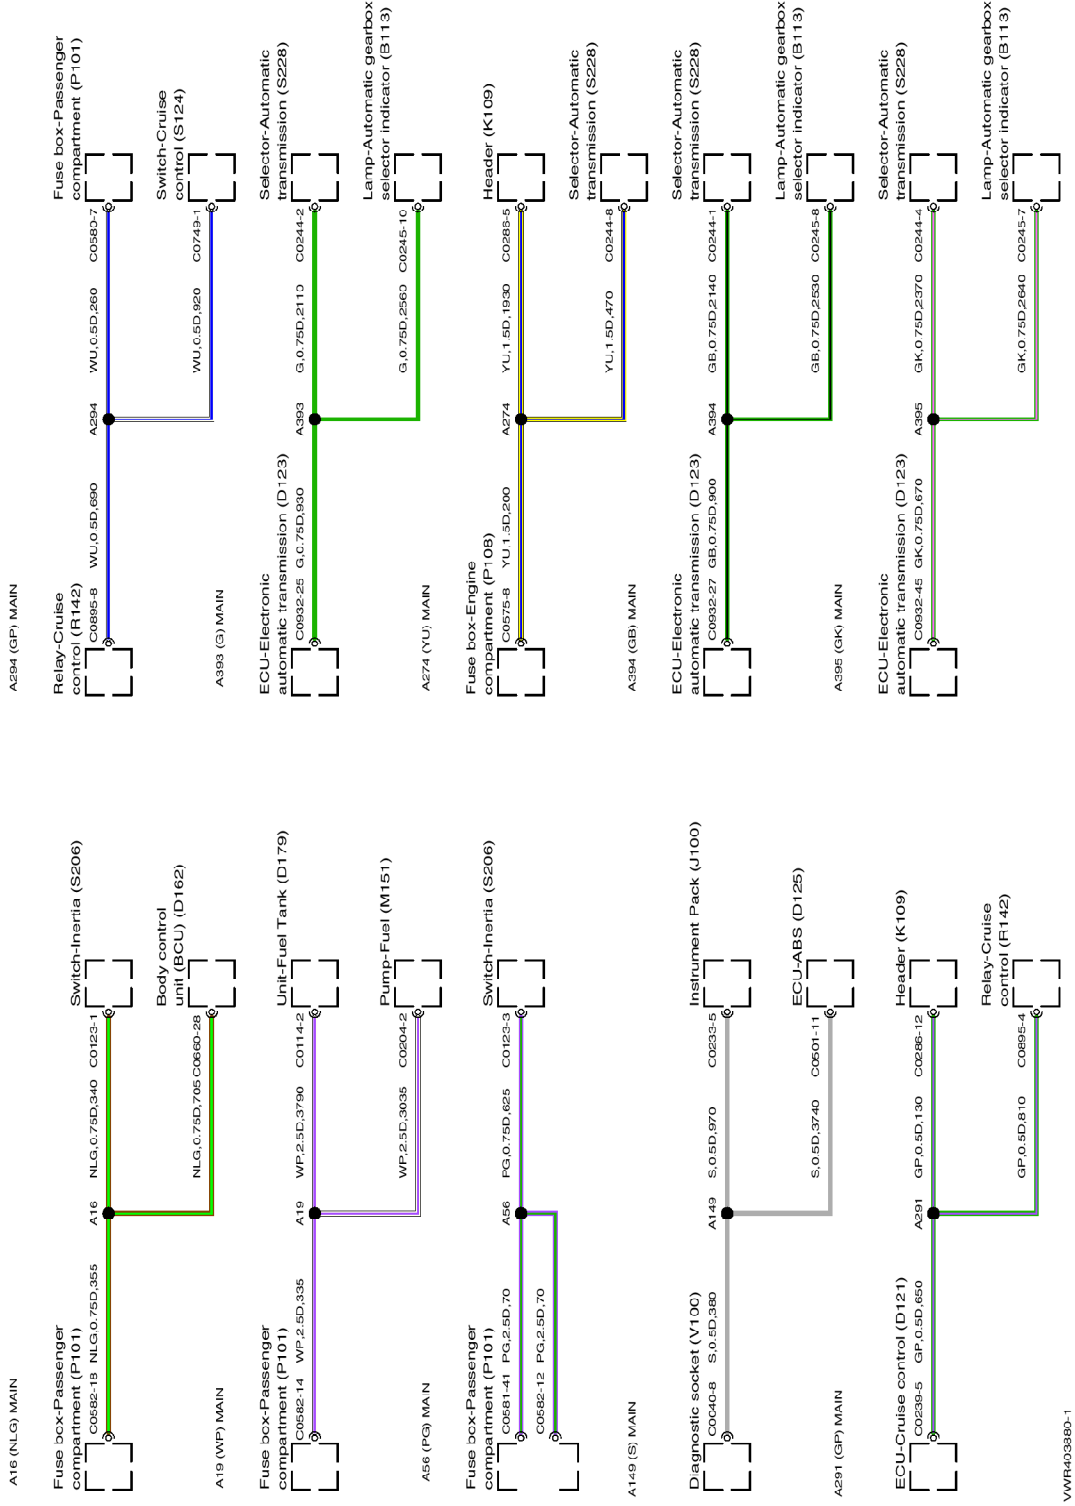


184 SPLICES AND CENTRE TAPS

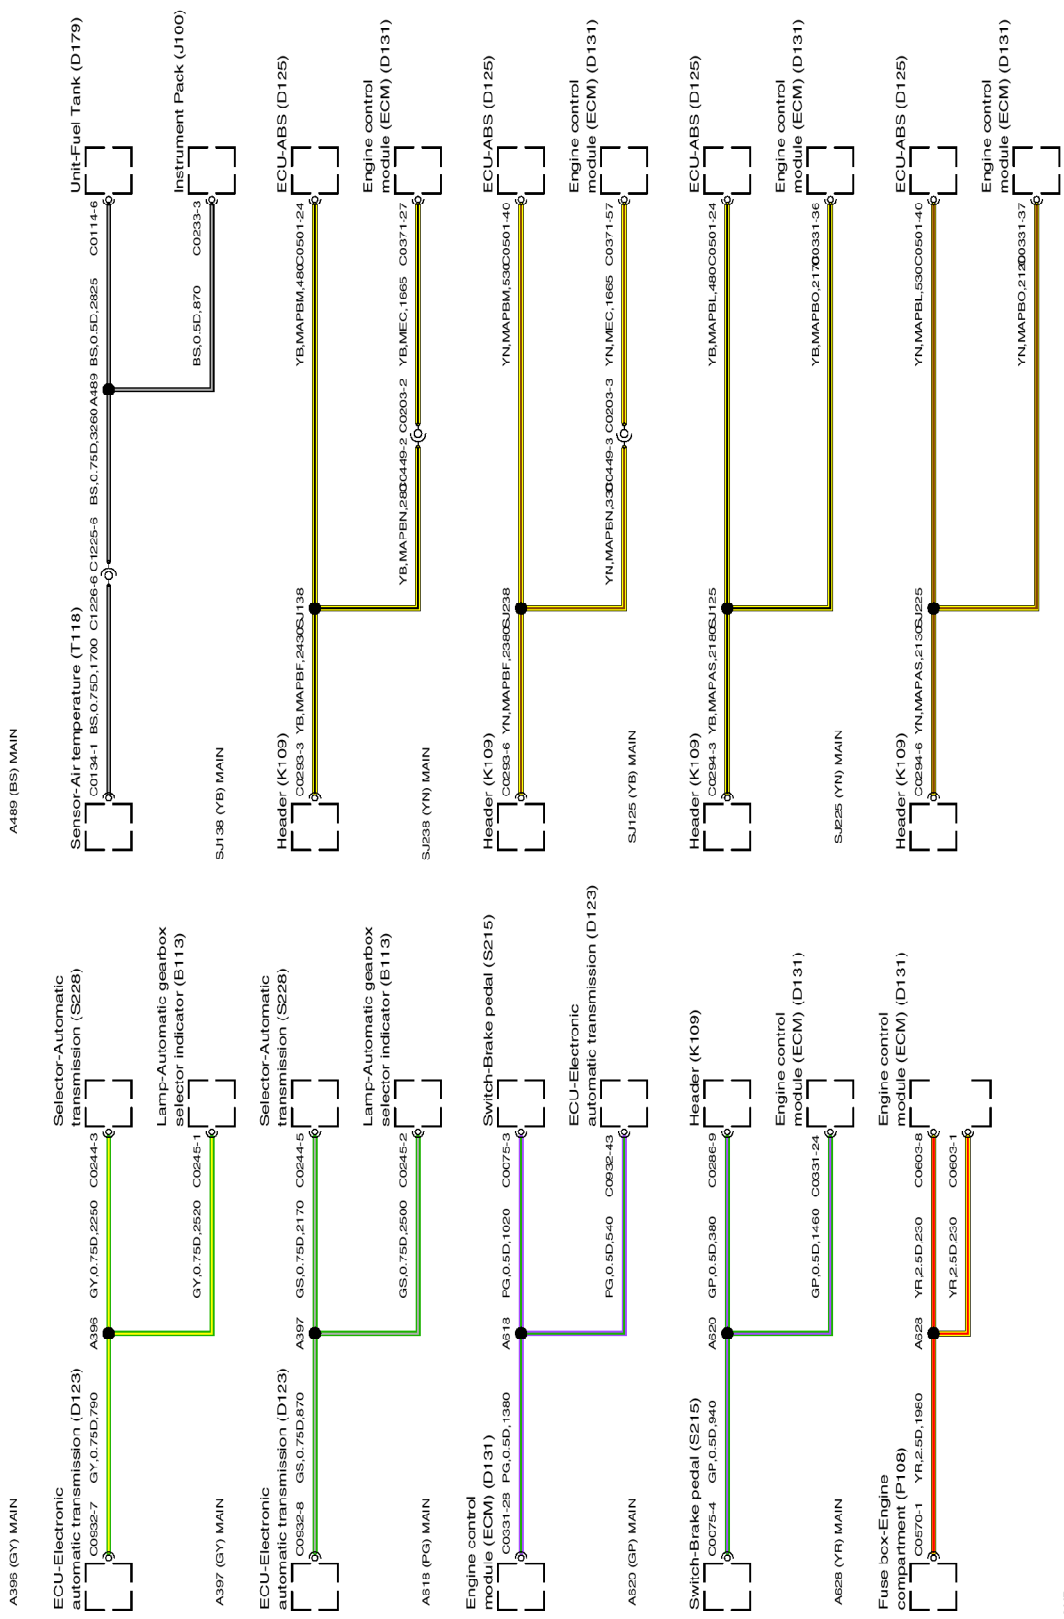

VWR403880-2

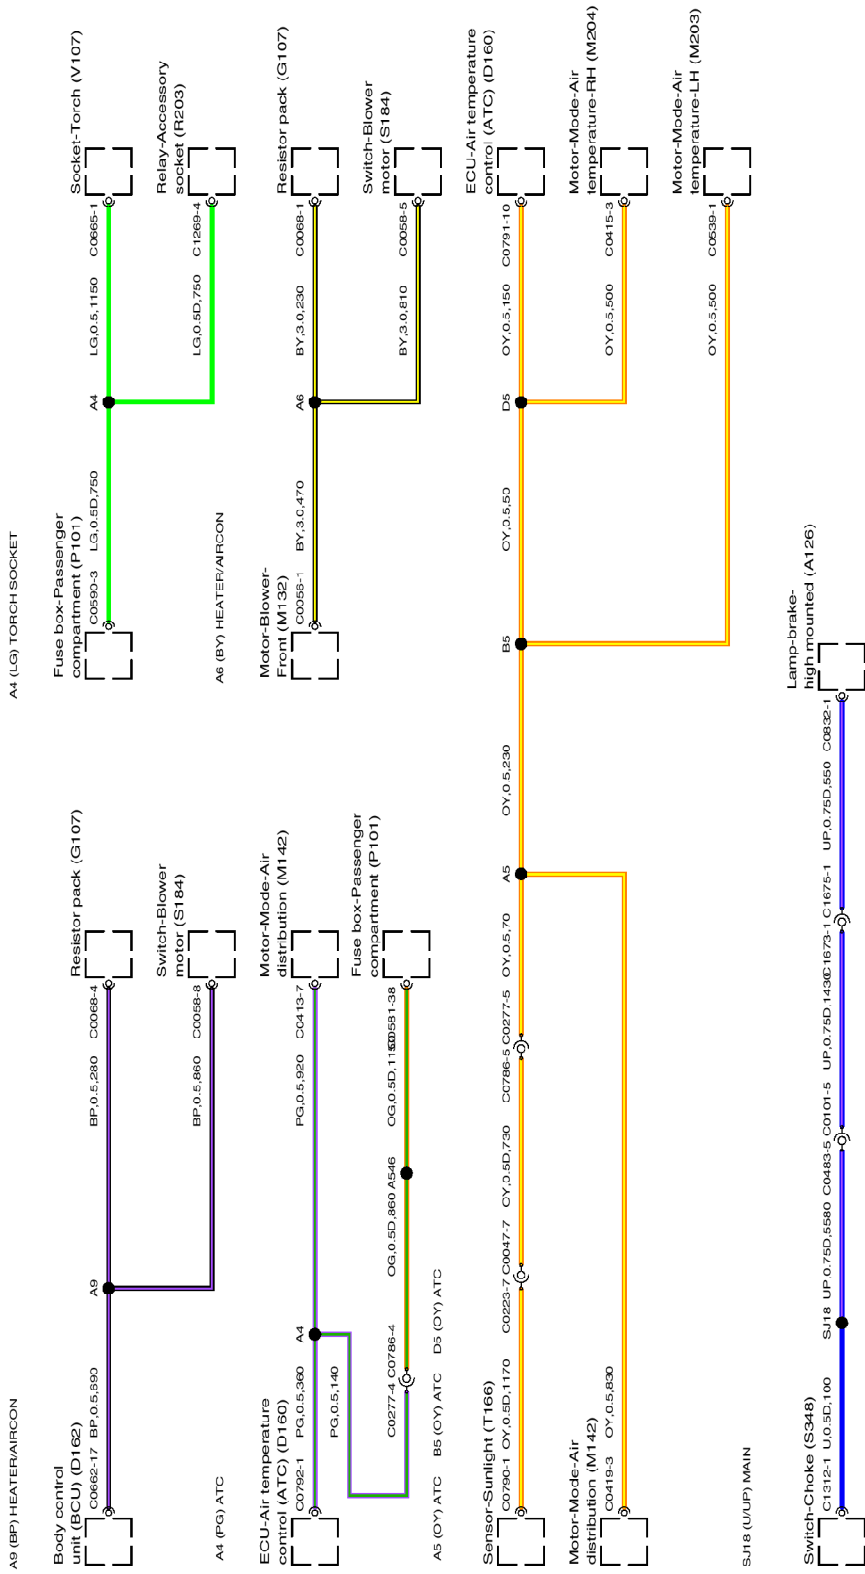


VWR403880-4

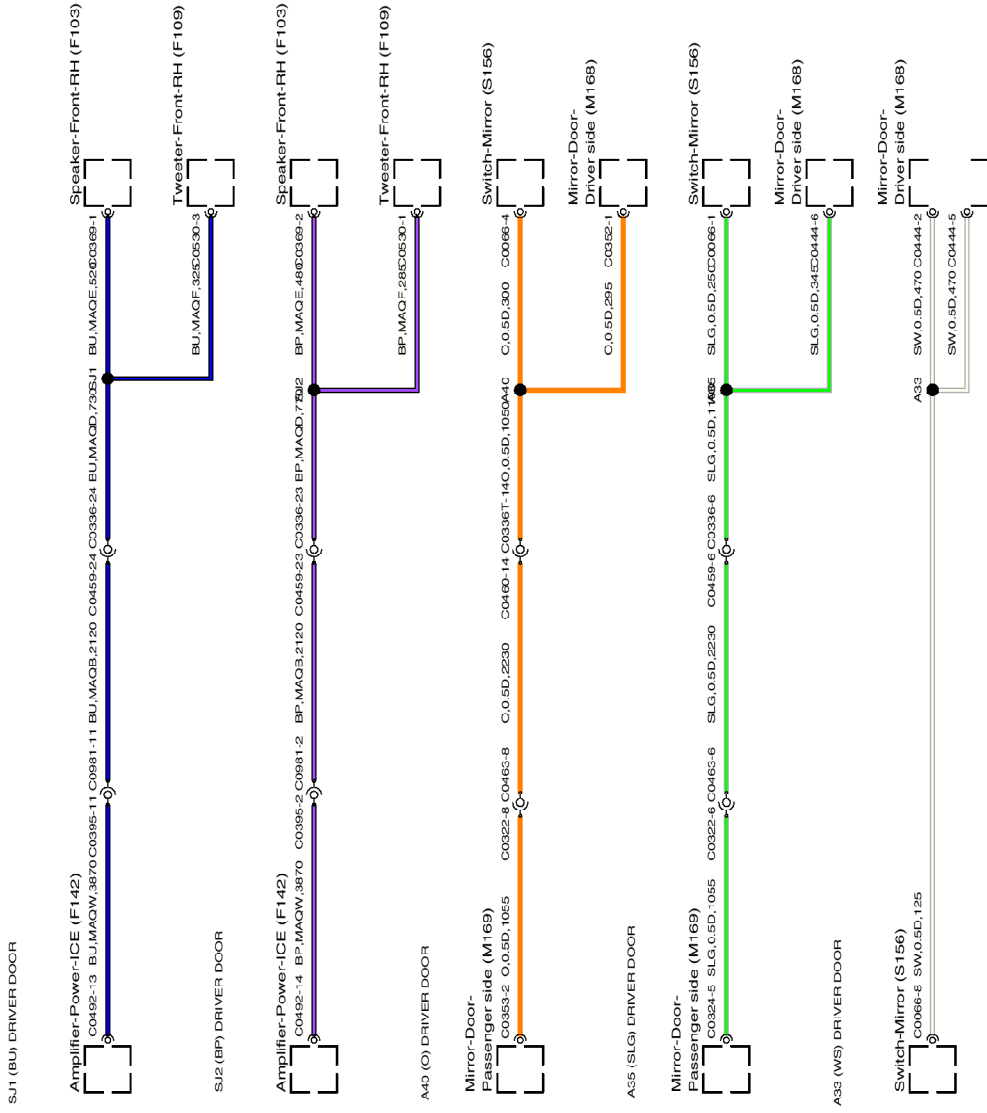



VWR403380-5

184 SPLICES AND CENTRE TAPS

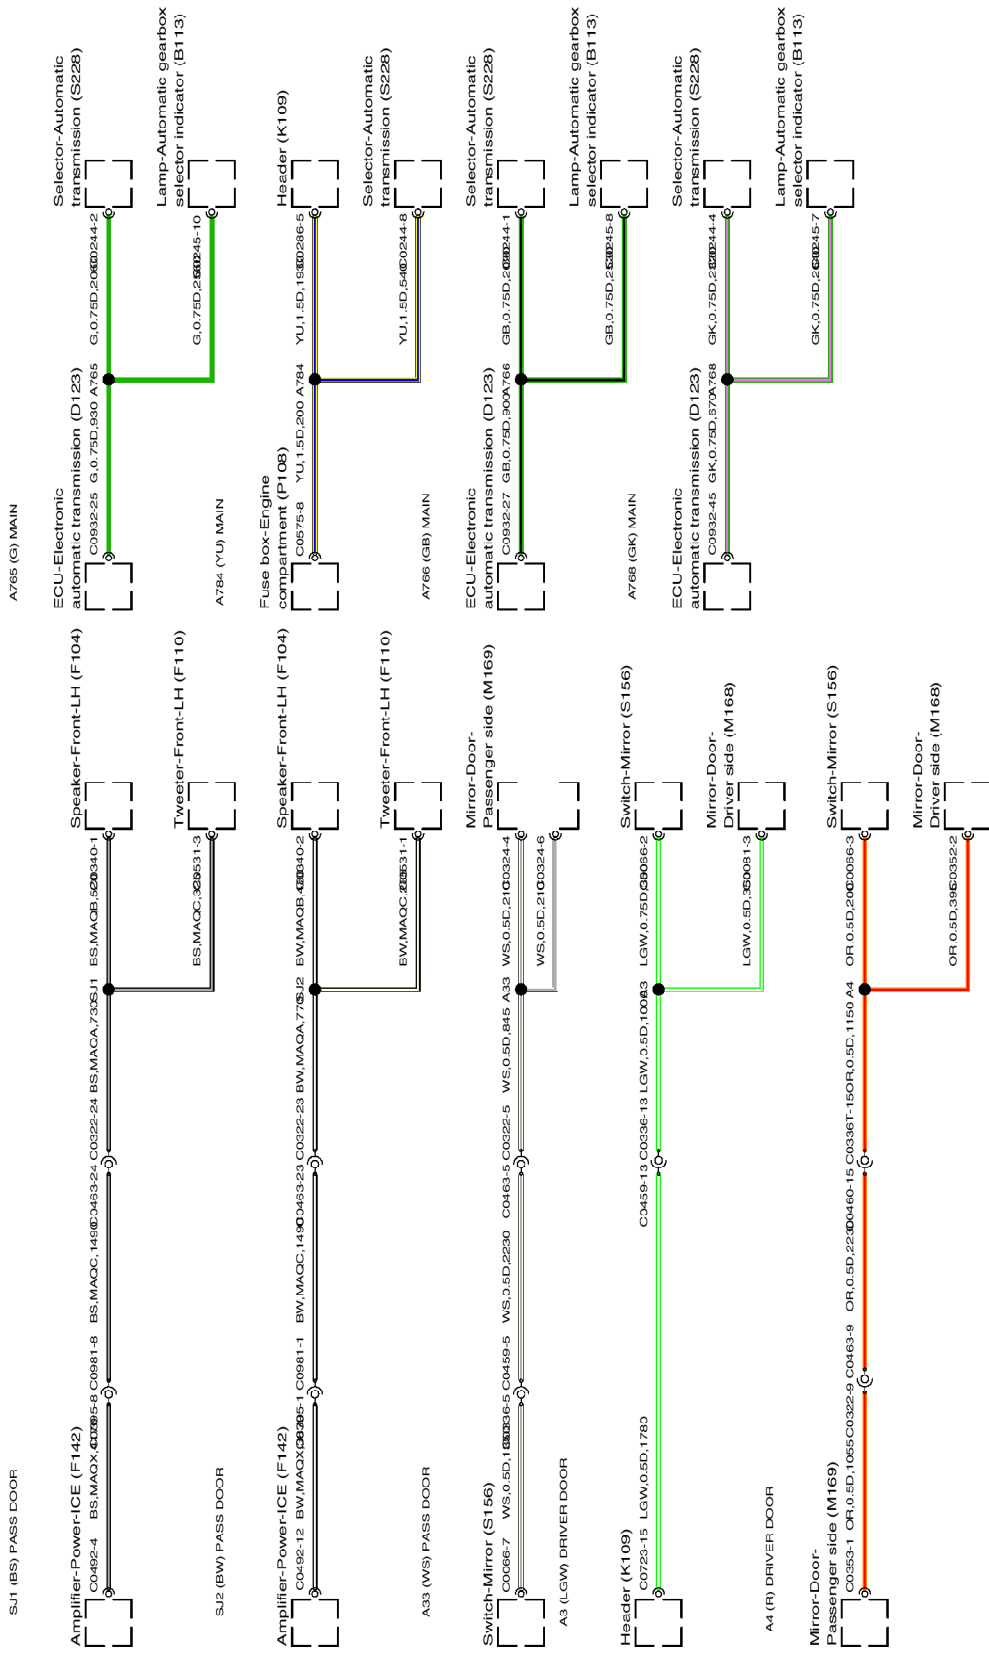


VWR4033890-6

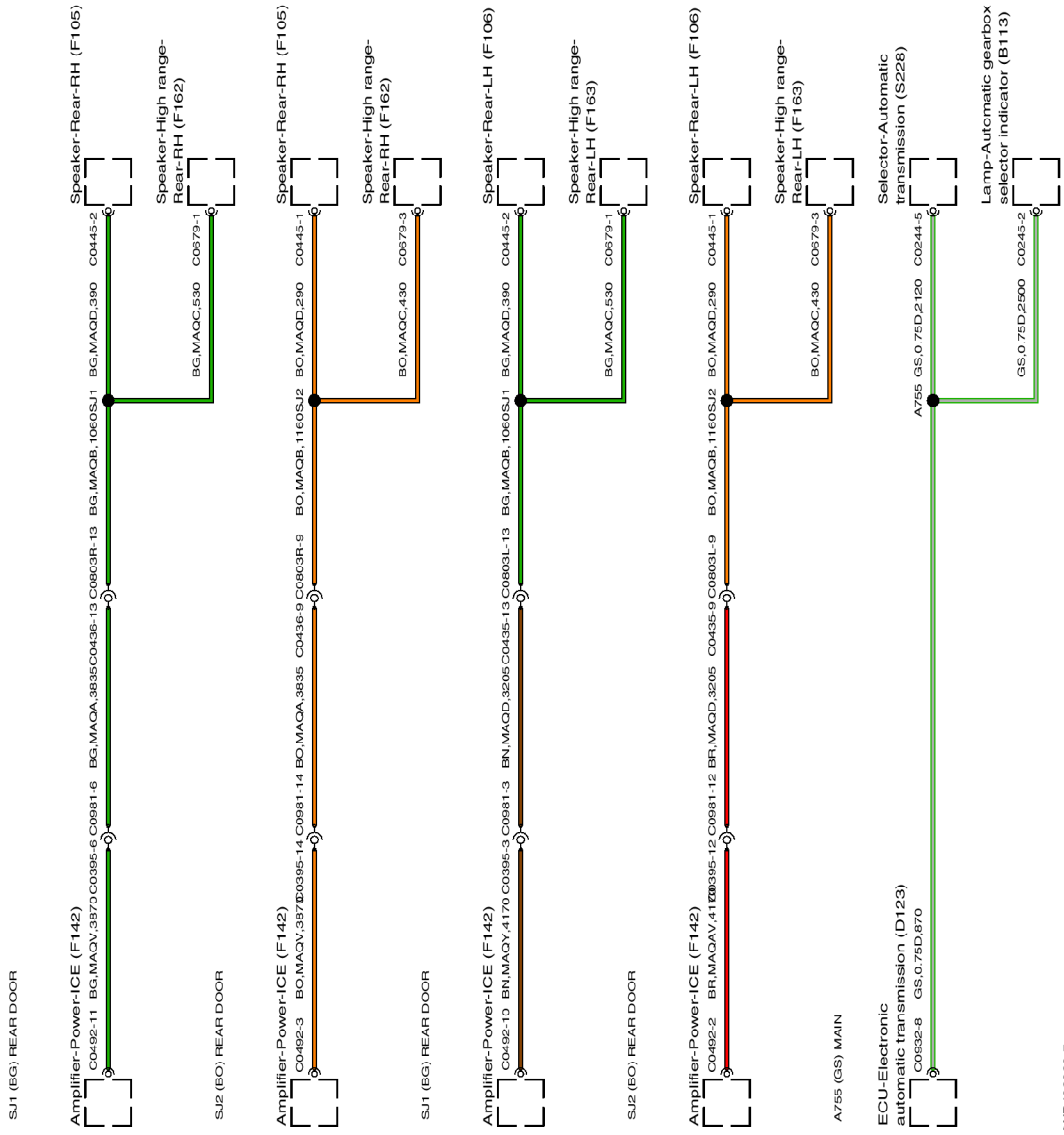

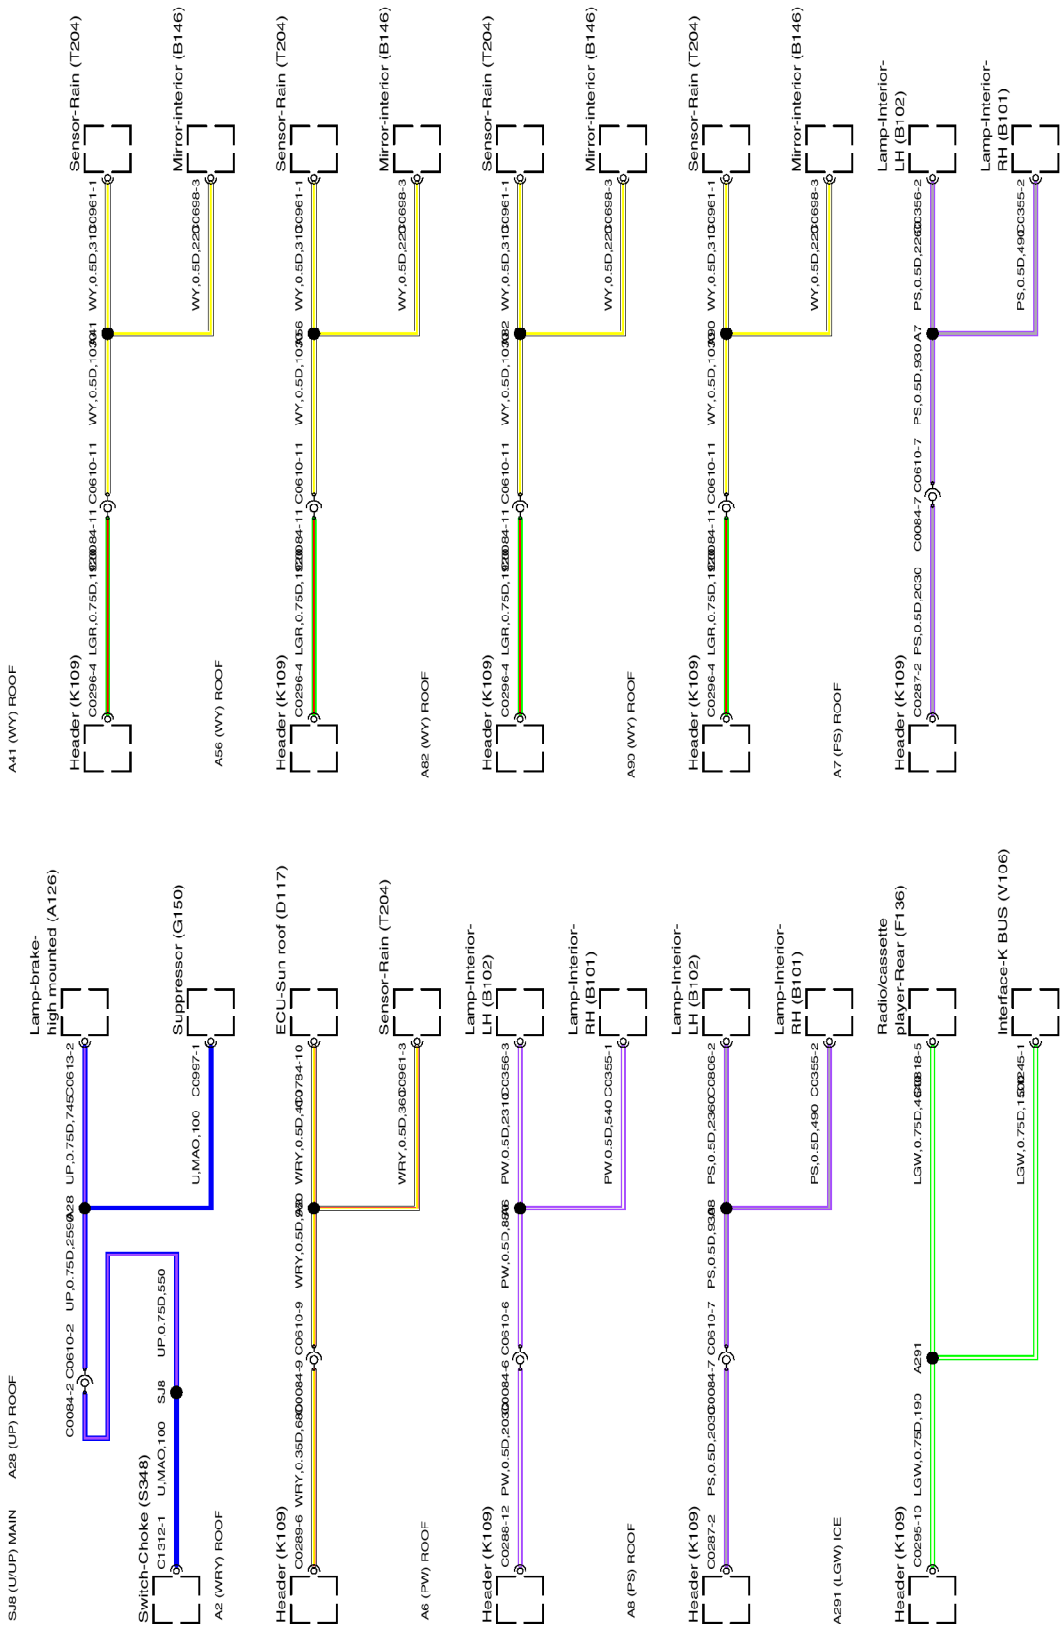


VWR403380-8

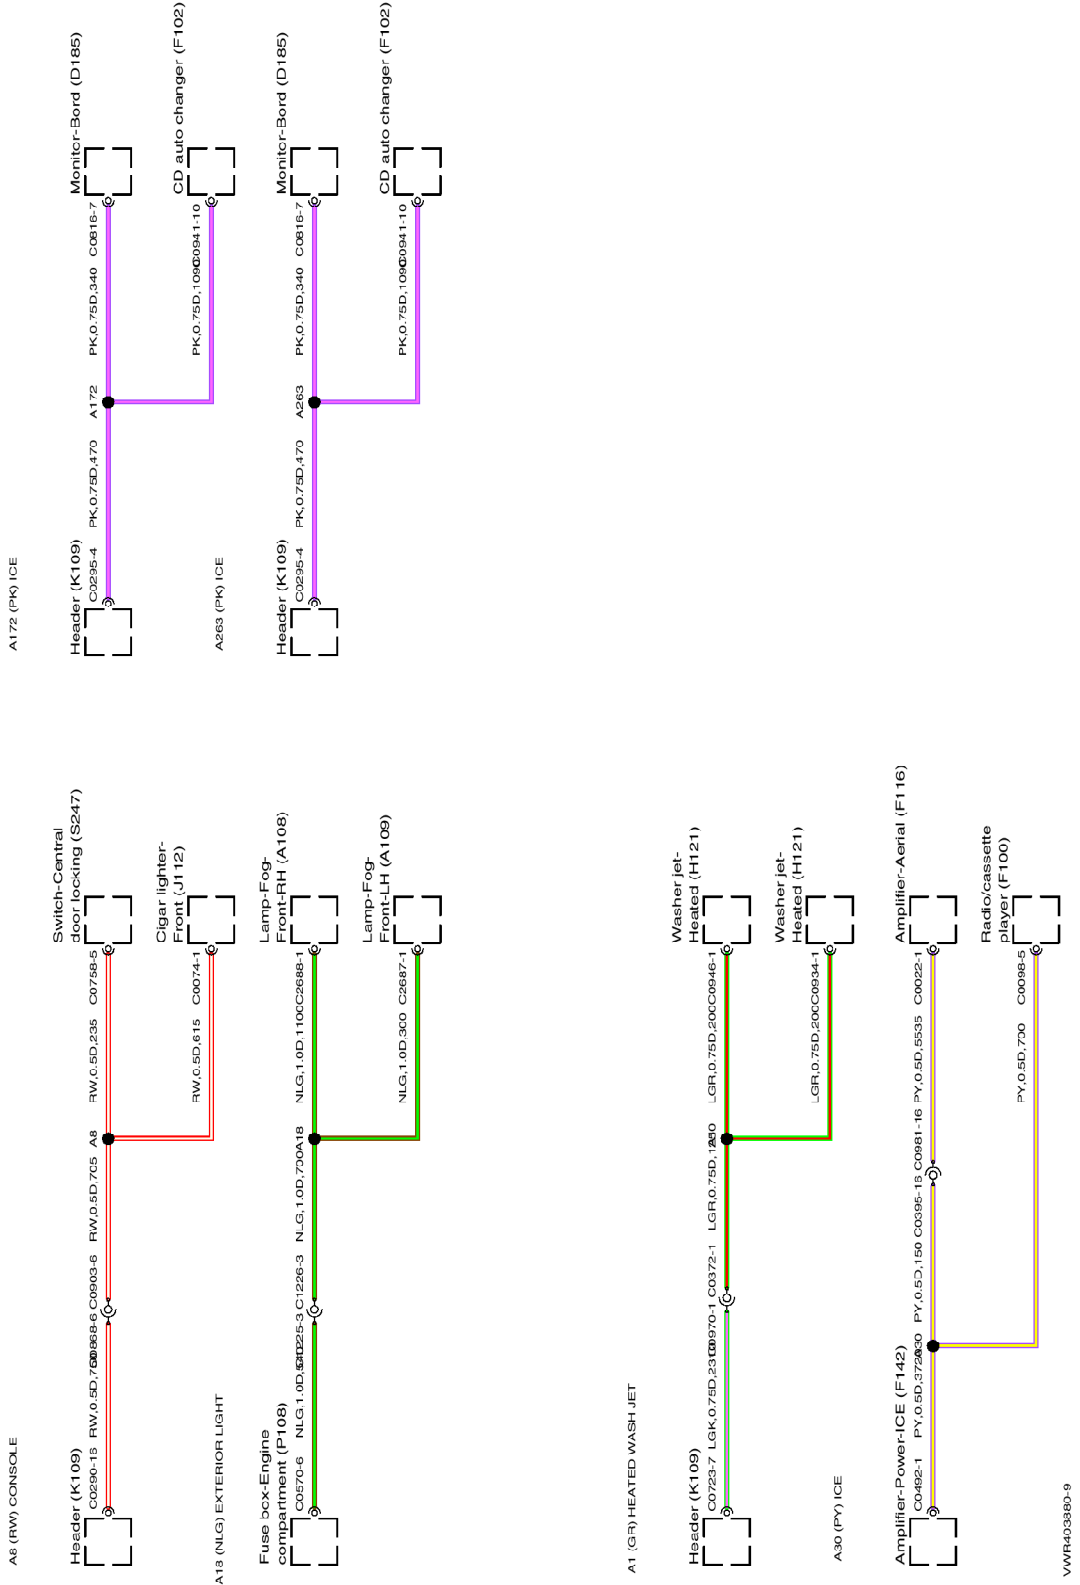


VWR403380-9


184 SPLICES AND CENTRE TAPS

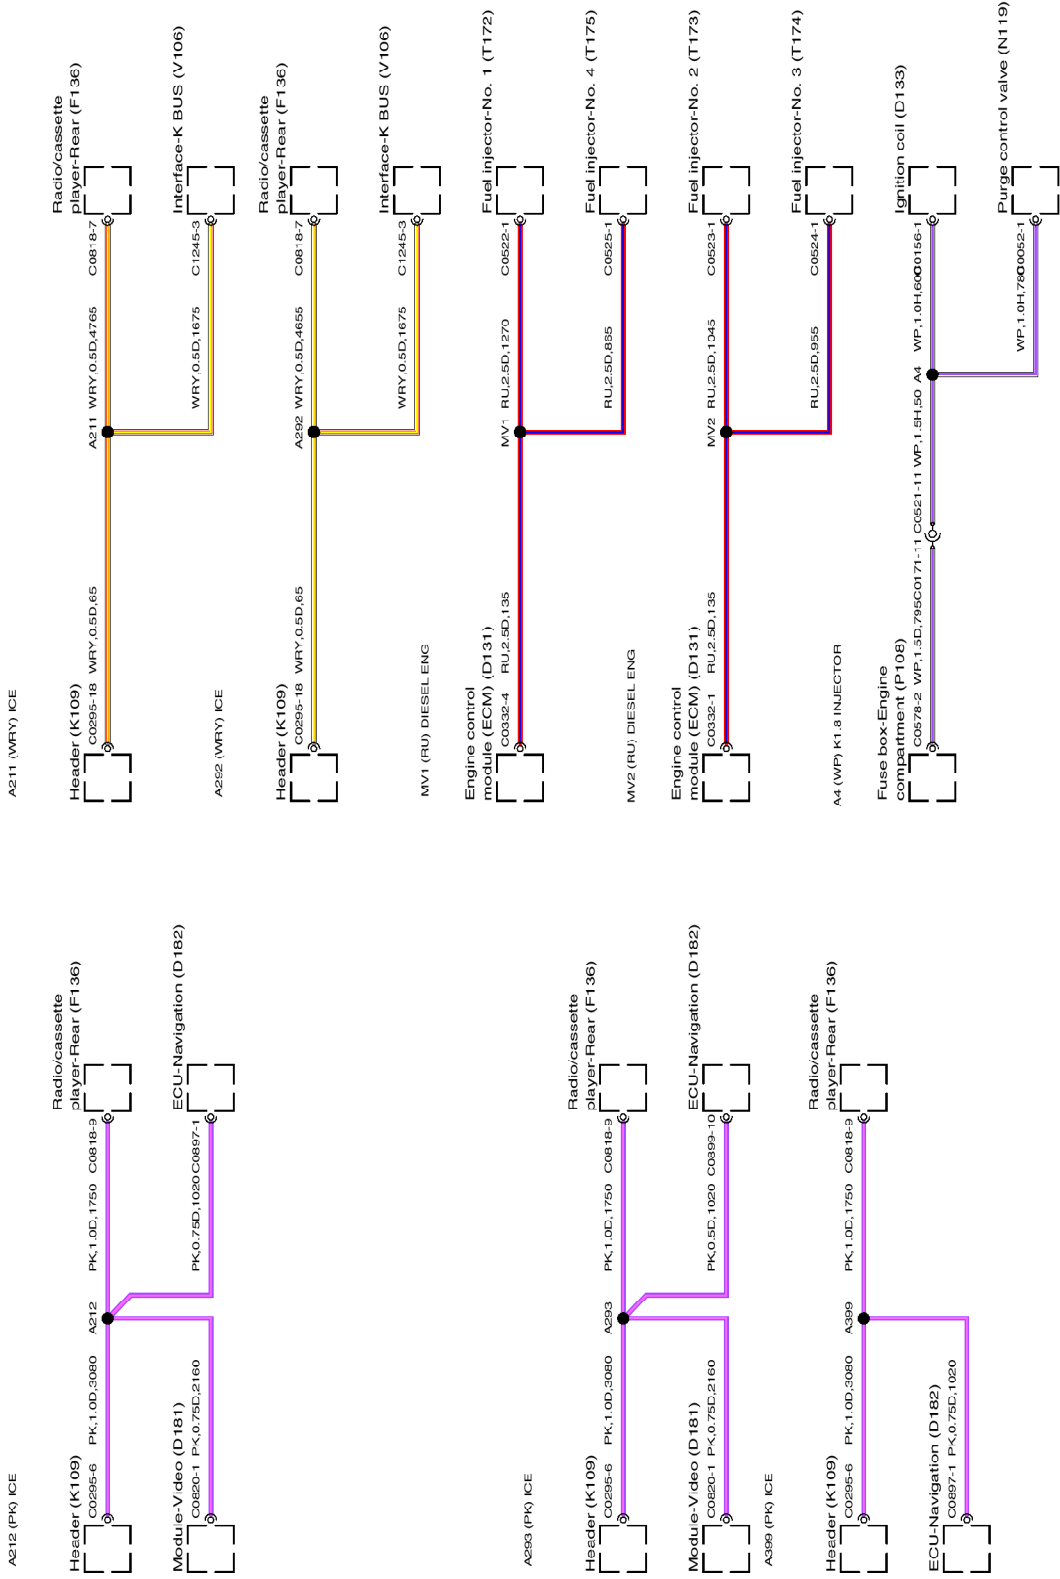

VWVFA03880-10

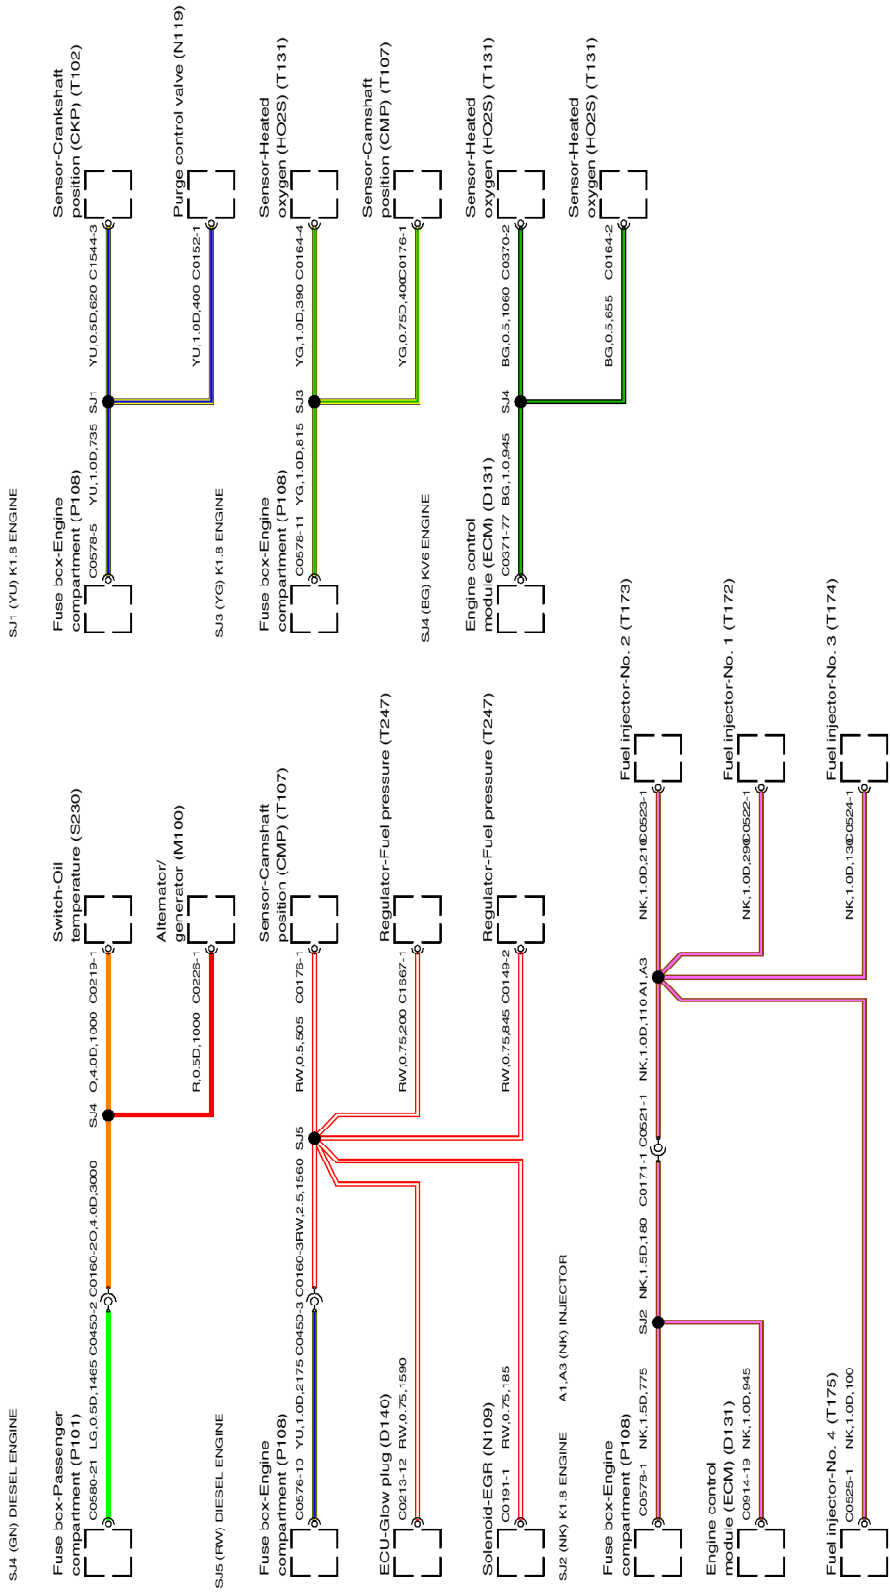

VWVFR403680-11

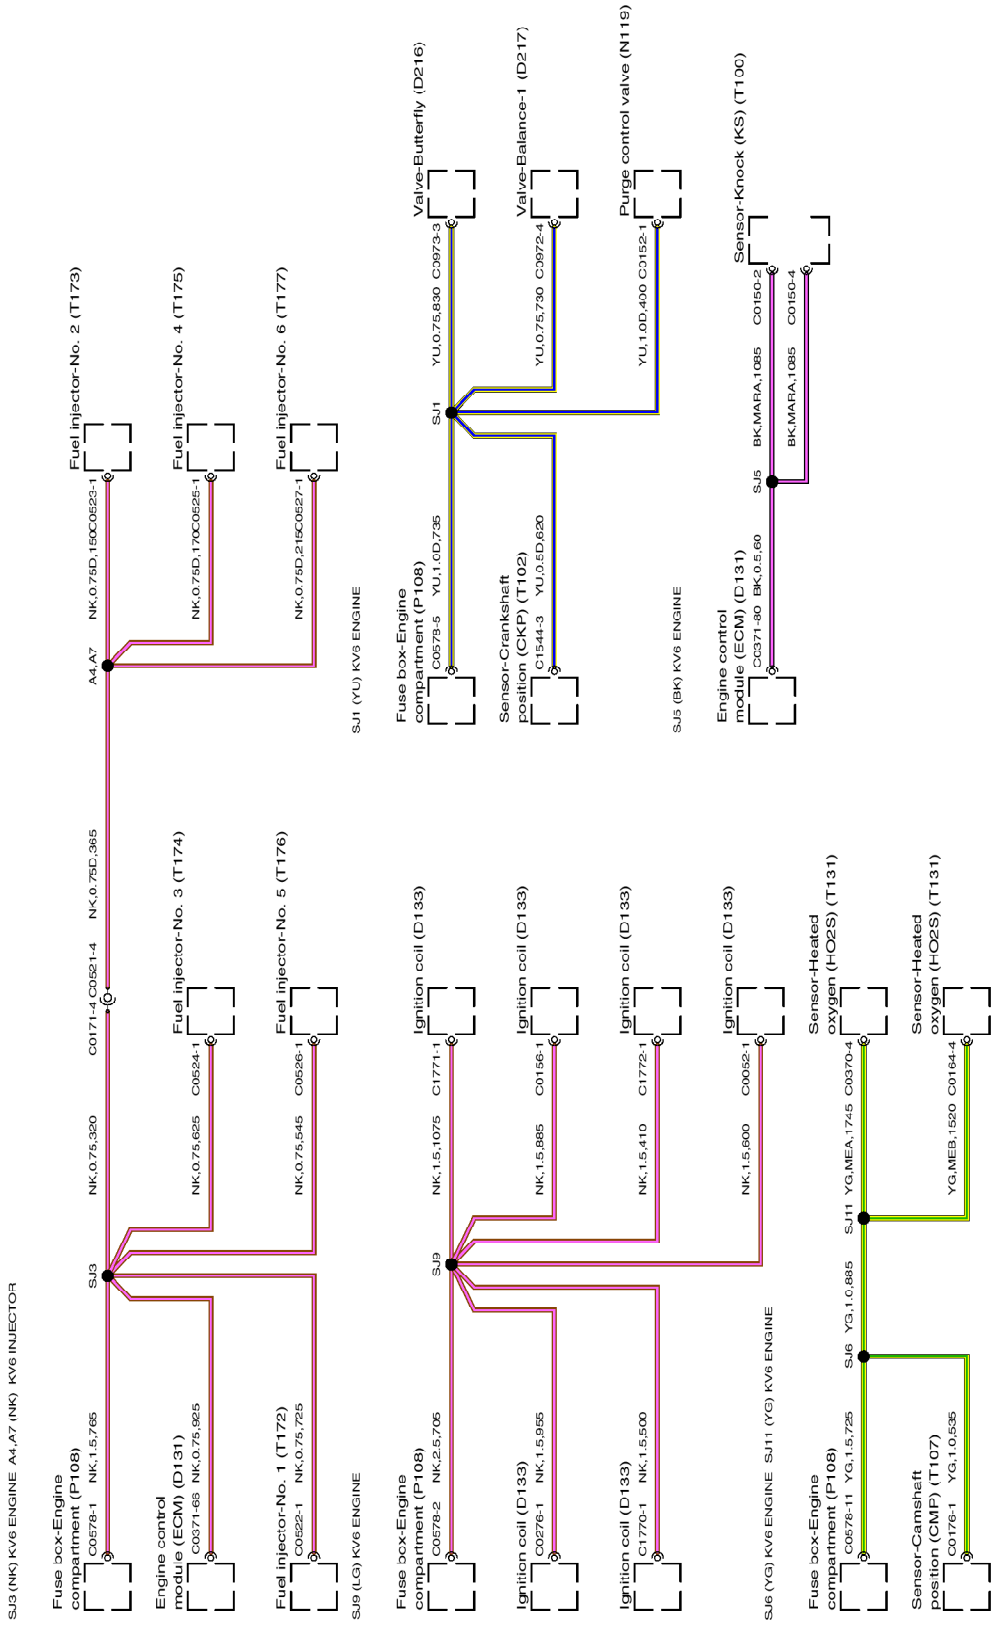

VW/F403680-12

